

SpeaKa Professional SP-3959720

SpeaKa Professional Telescopic TV Wall Mount Instruction Manual

Model: SP-3959720

1. IMPORTANT SAFETY INFORMATION

Please read this entire manual before installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance. SpeaKa Professional is not liable for damage or injury caused by incorrect assembly or use.

- **Weight Capacity:** Do not exceed the maximum load capacity of 55 kg (121 lbs). Exceeding this weight can result in serious injury or property damage.
- **Screen Size:** This mount is designed for televisions between 32 and 65 inches (81.3 cm - 165.1 cm).
- **Wall Type:** The wall mount must be installed on solid concrete walls, brick walls, or solid wood stud walls. Do not install on drywall alone.
- **Tools:** Always use appropriate tools and follow safety guidelines when drilling or handling heavy objects.
- **Children:** Keep children away from the installation area. Small parts may be a choking hazard.

2. PACKAGE CONTENTS

Verify that all components are included and undamaged. If any parts are missing or damaged, contact your supplier.



Image: The hardware kit includes various screws, washers, wall anchors, spacers, and an Allen key for assembly.

- Wall Plate Assembly (1 piece)
- TV Brackets (2 pieces)
- Mounting Hardware Kit (screws, washers, anchors, spacers, Allen key)

3. INSTALLATION GUIDE

3.1 Pre-Installation Checks

- Ensure your TV's VESA mounting pattern is compatible (up to 400x400mm).
- Confirm your TV's weight does not exceed 55 kg.
- Identify the suitable location on your wall, ensuring it can support the weight of the mount and TV.

3.2 Wall Plate Installation

1. Position the wall plate on the desired location on the wall. Use the integrated spirit level to ensure it is perfectly horizontal. Mark the drilling holes.
2. Drill pilot holes at the marked locations. The size of the drill bit will depend on your wall type and the anchors provided.
3. Insert wall anchors (if required for your wall type).
4. Secure the wall plate to the wall using the appropriate screws and washers. Ensure it is firmly attached.



Image: Rear view of the TV wall mount in its collapsed position, showing the wall plate and articulated arms.

3.3 Attaching TV Brackets

1. Carefully place your TV face down on a soft, clean surface.
2. Identify the VESA mounting holes on the back of your TV.
3. Select the correct screws, washers, and spacers from the hardware kit that fit your TV's mounting holes.
4. Attach the two TV brackets to the back of your TV, ensuring they are securely fastened and evenly spaced.

3.4 Mounting TV to Wall Plate

1. With assistance, carefully lift the TV with the attached brackets.
2. Hook the TV brackets onto the wall plate. Ensure both brackets are properly seated on the wall plate's hooks.
3. Secure the TV to the wall plate using the safety screws or locking mechanisms provided on the brackets.



Image: A television mounted on the SpeaKa Professional wall mount in a living room setting, demonstrating its discreet appearance.

4. OPERATION

This wall mount offers both tilt and swivel functionality for optimal viewing angles.

4.1 Adjusting Tilt

- To adjust the vertical tilt, loosen the tilt adjustment knobs or bolts on the TV brackets.

- Carefully tilt the TV to your desired angle.
- Tighten the tilt adjustment knobs or bolts to secure the TV in position.

4.2 Adjusting Swivel and Extension

- To swivel the TV horizontally or extend it from the wall, gently pull or push the TV. The articulated arms allow for smooth movement.
- The mount allows for a minimum wall distance of 8 cm and a maximum extension of 54.5 cm.



Image: The SpeaKa Professional TV wall mount fully extended, demonstrating its telescopic and swivel capabilities.

5. MAINTENANCE

- **Cleaning:** Wipe the mount with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Periodic Checks:** Periodically check that all screws and connections are tight and secure. If any components appear loose or damaged, tighten or replace them as necessary.

6. TROUBLESHOOTING

- **TV is not level:** Use the integrated spirit level during installation to ensure the wall plate is perfectly horizontal. Some mounts may have fine-tuning adjustments for leveling the TV after installation. If not, re-adjust the wall plate.

- **Difficulty adjusting movement (stiff):** The mount is designed to be stable. If movement is too stiff, check for any overtightened bolts on the articulating arms. Do not lubricate with oil, as this can attract dust.
- **Missing parts:** Refer to the 'Package Contents' section. If parts are missing, contact your retailer or SpeaKa Professional support.

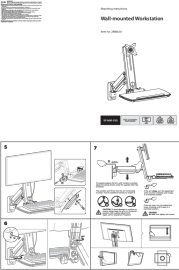
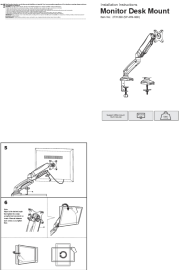
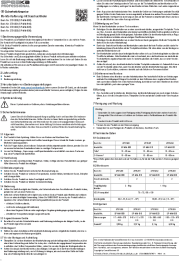
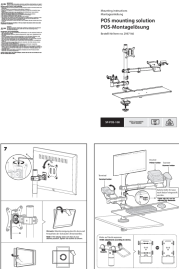
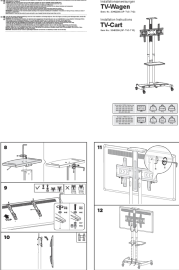
7. SPECIFICATIONS

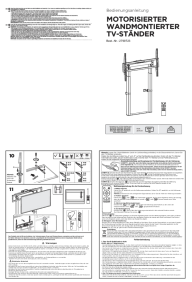
Feature	Specification
Model Number	SP-3959720
Brand	SpeaKa Professional
Compatible Screen Sizes	32 - 65 inches (81.3 cm - 165.1 cm)
Maximum Load Capacity	55 kg
VESA Compatibility	Up to 400 x 400 mm
Mount Type	Wall Mount
Movement Type	Inclinable, Pivotal
Material	Alloy Steel
Color	Black
Wall Distance (Min)	8 cm
Wall Distance (Max)	54.5 cm

8. WARRANTY AND SUPPORT

SpeaKa Professional provides a 1-year availability for spare parts for this product. For technical support or warranty claims, please contact your point of purchase or visit the official SpeaKa Professional website for contact information.

Related Documents - SP-3959720

	<p>SpeaKa Professional SP-MM-950 Wall-Mounted Workstation Mounting Instructions</p> <p>Detailed mounting instructions for the SpeaKa Professional SP-MM-950 single-arm wall-mounted workstation, including safety warnings and assembly steps.</p>
	<p>Installation Instructions: Monitor Desk Mount (Item No. 2731200 SP-MM-900)</p> <p>Comprehensive installation guide for the SpeaKa Professional Monitor Desk Mount (Item No. 2731200 SP-MM-900), detailing assembly steps, safety precautions, and specifications for mounting monitors up to 81.3 cm (32 inches) and 2-9 kg.</p>
	<p>SpeaKa Professional Monitor Holder with Gas Pressure Spring: Safety, Use, and Technical Data</p> <p>Detailed safety instructions, intended use, handling, installation, maintenance, and technical specifications for SpeaKa Professional gas spring monitor holders (models SP-MM-900, SP-MM-910, SP-MM-920, SP-MM-930). Includes table specifications and warnings.</p>
	<p>SpeaKa Professional SP-POS-100 POS Mounting Solution - Installation Guide</p> <p>Comprehensive mounting instructions for the SpeaKa Professional SP-POS-100 POS mounting solution. Learn how to safely install and adjust your monitor, terminal, printer, and scanner for optimal point-of-sale setups.</p>
	<p>Speaka Professional TV Cart Installation Guide - Model 3340239 (SP-TVC-710)</p> <p>Comprehensive installation instructions for the Speaka Professional TV Cart (Model SP-TVC-710). This guide provides step-by-step assembly, safety warnings, parts list, and specifications for mounting TVs up to 75 inches and 45kg.</p>

	<p>SpeakKa Professional SP-TVC-900 Motorized TV Stand: User Manual & Setup Guide</p> <p>Comprehensive user manual for the SpeakKa Professional SP-TVC-900 motorized TV stand. Learn how to install, operate, pair the remote, and troubleshoot this VESA-compatible, height-adjustable TV mount supporting up to 100-inch screens and 120kg.</p>
--	--

Documents - SpeakKa Professional – SP-3959720

no relevant documents