

SENCOR SVC 3001

Sencor SVC 3001 Wet & Dry Vacuum Cleaner User Manual

Model: SVC 3001 | Brand: SENCOR

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Safety Instructions](#) [Product](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the power supply voltage matches the rating label on the vacuum cleaner.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not vacuum hot ashes, burning cigarettes, or sharp objects.
- Unplug the appliance from the power outlet before performing any maintenance, cleaning, or when not in use.
- Keep hands, feet, loose clothing, and hair away from rotating brushes and moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate the vacuum cleaner with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Use only manufacturer-recommended attachments.

2. PRODUCT OVERVIEW AND COMPONENTS

The Sencor SVC 3001 is a versatile wet and dry vacuum cleaner designed for various cleaning tasks. It features a powerful motor and a robust filtration system.



Figure 1: Sencor SVC 3001 Wet & Dry Vacuum Cleaner. This image shows the main unit of the vacuum cleaner with its hose and attachments, highlighting its compact design and yellow color.

Key Features:

- Maximum input power: 1400W
- Suction power: 250W
- Noise level: Less than 77 dB
- Aluminium telescopic tube for adjustable reach.
- Washable inlet microfilter and washable outlet microfilter for effective filtration.
- Thermostat (thermal fuse) to prevent motor overheating.
- Soft start function to prevent overloading the electrical grid.
- Rubber-covered wheels for easy handling and protection of delicate floors.
- 5-step filtration system.
- Operating radius of 7.5 meters (5-meter cord length).

- Automatic cord rewinding.
- Electronically controlled suction power.
- Total container volume: 30 liters.

Included Accessories:

- Universal floor nozzle with an extendable brush.
- Special nozzle for sucking water.
- Slotted nozzle.
- Upholstery nozzle.
- Nozzle with brush.
- Textile dust bag.

3. SETUP AND ASSEMBLY

3.1 Unpacking

Carefully remove all components from the packaging. Check for any damage during transit. Retain packaging for future storage or transport.

3.2 Attaching the Hose and Tubes

1. Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. Connect the telescopic aluminum tube to the handle end of the flexible hose. Adjust the length of the telescopic tube by pressing the release button and extending or retracting.
3. Attach the desired cleaning nozzle (e.g., universal floor nozzle, slotted nozzle) to the end of the telescopic tube.

3.3 Filter Installation

The SVC 3001 uses a 5-step filtration system, including washable inlet and outlet microfilters. Ensure the correct filter setup for your cleaning task.

For Dry Vacuuming:

- Ensure the textile dust bag is correctly installed inside the container. The dust bag volume is 7.5 liters.
- Verify that the washable inlet microfilter is clean and properly seated.

For Wet Vacuuming:

- Remove the textile dust bag.
- Ensure the washable inlet microfilter is clean. Some wet vacuuming setups may require specific foam filters or no filter in the inlet, refer to detailed diagrams if available. For this model, ensure the dry bag is removed.
- The wet vacuum tank volume is 16 liters. Do not exceed the maximum fill line indicated inside the container.

4. OPERATING INSTRUCTIONS

4.1 Connecting to Power

Extend the power cord to its full operating radius of 7.5 meters (cord length 5 meters). Plug the power cord into a suitable electrical outlet. The appliance features automatic cord rewinding for convenience after use.

4.2 Dry Vacuuming

1. Ensure the textile dust bag is installed and the appropriate dry cleaning nozzle (e.g., universal floor nozzle) is attached.

2. Turn on the vacuum cleaner using the power switch. The soft start function will ensure the motor starts smoothly without overloading the electrical grid.
3. Adjust the suction power electronically as needed for different surfaces.
4. Guide the nozzle over the surface to be cleaned.
5. After use, turn off the vacuum cleaner and unplug it from the power outlet. Press the cord rewind button to retract the power cord.

4.3 Wet Vacuuming (Sucking Water)

Caution: Only use the special nozzle for sucking water during wet vacuuming. Ensure the textile dust bag is removed before wet vacuuming.

1. Remove the textile dust bag from the container.
2. Attach the special nozzle designed for sucking water to the telescopic tube.
3. Turn on the vacuum cleaner.
4. Guide the water suction nozzle over the liquid spill. The vacuum will collect the liquid into the 16-liter wet vacuum tank.
5. Monitor the liquid level in the container. Stop vacuuming when the container is full or the float mechanism activates (if present) to prevent overflow.
6. After use, turn off the vacuum cleaner, unplug it, and empty the liquid container immediately.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your Sencor SVC 3001 vacuum cleaner. Always unplug the appliance before cleaning or maintenance.

5.1 Emptying the Container

- **For Dry Debris:** When the textile dust bag is full (7.5 liters capacity), remove it and dispose of the contents. Replace with a new textile dust bag or empty and reuse the existing one if it is designed for reuse.
- **For Liquids:** After wet vacuuming, unlatch the motor head and carefully lift it off the container. Pour out the collected liquid (up to 16 liters capacity) into a suitable drain. Clean the inside of the container with water and mild detergent if necessary, then dry thoroughly.

5.2 Filter Cleaning and Replacement

The SVC 3001 features washable inlet and outlet microfilters. Clean them regularly to maintain suction power and air quality.

1. Remove the filters from their respective compartments.
2. Rinse the washable microfilters under cool running water until the water runs clear.
3. Allow the filters to air dry completely for at least 24 hours before reinstallation. Do not use a dryer or heat source.
4. Reinstall the dry filters. Replace filters if they are damaged or excessively worn.

5.3 Cleaning Accessories and Exterior

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean nozzles and tubes by rinsing them with water. Ensure they are dry before reattaching or storing.

6. TROUBLESHOOTING

Before contacting customer support, review the following common issues and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply. Power cord not properly plugged in. Faulty outlet.	Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance.
Low suction power.	Dust bag full (dry vacuuming). Filters are clogged. Hose or nozzle is blocked. Container full (wet vacuuming).	Empty or replace the dust bag. Clean or replace the inlet and outlet microfilters. Check hose and nozzles for obstructions and clear them. Empty the liquid container.
Motor stops during operation.	Motor overheating (thermal fuse activated). Blockage in the system.	Turn off and unplug the vacuum cleaner. Allow it to cool down for at least 30 minutes. Check for and clear any blockages in the hose, tubes, or filters. Restart the appliance.
Water leaks from the unit.	Container overfilled during wet vacuuming. Seals not properly seated.	Do not exceed the maximum fill line for liquids. Check that the motor head and container seals are correctly positioned and secured.

7. TECHNICAL SPECIFICATIONS

Model	SVC 3001
Brand	SENCOR
Maximum Input Power	1400 W
Suction Power	250 W
Noise Level	<77 dB
Filtration System	5 Steps (Washable inlet microfilter, Washable outlet microfilter)
Dust Bag Volume	7.5 Liters
Wet Vacuum Tank Volume	16 Liters
Total Container Volume	30 Liters
Operating Radius	7.5 m (Cord length 5 m)
Dimensions (W x D x H)	374 x 425 x 490 mm (14.72 x 16.73 x 19.29 inches)
Weight	7.9 kg (17.4 lbs)

Special Features

Aluminium telescopic tube, Thermostat, Soft start, Rubber covered wheels, Automatic cord rewinding, Electronically controlled suction power

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Product Warranty

This Sencor SVC 3001 Wet & Dry Vacuum Cleaner comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, neglect, accident, alteration, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, spare parts, or warranty inquiries, please contact your local Sencor service center or the retailer where the product was purchased. Refer to the Sencor official website for up-to-date contact information and service locations.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question