

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sencor](#) /

› [Sencor SVC45RD Vacuum Cleaner Instruction Manual](#)

Sencor SVC45RD

Sencor SVC45RD Vacuum Cleaner Instruction Manual

Model: SVC45RD | Brand: Sencor

1. INTRODUCTION

Thank you for choosing the Sencor SVC45RD Vacuum Cleaner. This instruction manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the appliance from the power outlet when not in use and before cleaning or maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Sencor SVC45RD vacuum cleaner.



Image: The Sencor SVC45RD vacuum cleaner in red, featuring its compact design, power button, cord rewind button, and hose connection port.

The vacuum cleaner consists of the main unit, a flexible hose, telescopic plastic tube, and various nozzles for different cleaning tasks. It features rubber-coated wheels for smooth movement and floor protection, and an automatic cord rewind system.

4. SETUP

Follow these steps to prepare your vacuum cleaner for first use:

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Keep packaging for potential future transport.
2. **Attaching the Hose:** Insert the flexible hose into the air inlet opening on the main unit until it clicks securely into place.
3. **Assembling the Tube and Nozzle:** Connect the telescopic plastic tube to the handle of the flexible hose. Then, attach your desired cleaning nozzle (e.g., universal floor nozzle or combined nozzle) to the end of the telescopic tube.
4. **Dust Bag Installation:** Ensure a paper dust bag is correctly installed inside the dust compartment. Refer to the 'Maintenance' section for details on checking and replacing the dust bag.

5. OPERATING INSTRUCTIONS

Operating your Sencor SVC45RD vacuum cleaner is straightforward:

1. **Power Connection:** Pull out the power cord to the desired length and plug it into a suitable electrical outlet. The

operating radius is approximately 7.5 meters.

2. **Power On/Off:** Press the power button located on the main unit to switch the vacuum cleaner on or off.
3. **Cleaning:** Guide the nozzle over the surfaces you wish to clean. The universal floor nozzle is suitable for all floor types and features an extendable brush for carpets or hard floors. The combined nozzle (brush + slot) is ideal for crevices and upholstery.
4. **Suction Power Adjustment:** While the main unit does not have a specific suction power dial, you can adjust the suction by opening or closing the air flow regulator on the hose handle.
5. **Cord Rewind:** After use, unplug the power cord from the outlet. Press the automatic cord rewind button on the main unit to retract the cord. Guide the cord with your hand to prevent it from whipping.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Dust Bag Replacement

- The vacuum cleaner is equipped with a dust bag full indicator. When this indicator shows red, the dust bag needs to be replaced.
- To replace, open the dust compartment cover. Remove the full paper dust bag and dispose of it responsibly.
- Insert a new paper dust bag, ensuring it is correctly seated in the holder. Close the dust compartment cover securely.

6.2. Filter Cleaning

The Sencor SVC45RD features a 5-step filtration system. Filters should be checked and cleaned regularly, depending on usage.

- Locate the pre-motor filter and exhaust filter (exact locations may vary, refer to diagrams in a full manual if available).
- Remove the filters and gently tap them to dislodge dust. If washable, rinse them under cold running water. Ensure filters are completely dry before reinserting.
- Do not use detergents or hot water on filters.

6.3. Nozzle and Hose Cleaning

- Periodically check nozzles and the hose for blockages. Remove any hair, lint, or debris that may have accumulated.
- The universal floor nozzle's brush can be extended or retracted for cleaning.

7. TROUBLESHOOTING

Before contacting customer support, try these solutions for common issues:

Problem	Possible Cause	Solution
Vacuum cleaner does not switch on.	No power supply; Power cord not plugged in; Power button not pressed.	Check power outlet; Plug in the power cord securely; Press the power button firmly.
Low suction power.	Dust bag full; Filters clogged; Hose or nozzle blocked.	Replace dust bag; Clean or replace filters; Remove any blockages from hose or nozzle.
Unusual noise during operation.	Blockage in hose/nozzle; Motor issue (rare).	Check and clear any blockages. If noise persists, contact customer support.

Problem	Possible Cause	Solution
Dust bag full indicator remains red after changing bag.	Dust bag not installed correctly; Filter clogged.	Ensure dust bag is seated properly; Check and clean filters.

8. SPECIFICATIONS

Technical details for the Sencor SVC45RD Vacuum Cleaner:

Model Number: SVC 45RD-EUE2

Max. Input Power: 1400 W

Nominal Input Power: 1200 W

Suction Power: 230 W

Filtration System: 5-step

Dust Bag Capacity: 1.5 Liters

Power Cord Length: 5 meters

Operating Radius: 7.5 meters

Dimensions (W x D x H): 25.5 x 34.49 x 21.01 cm

Weight: 4.4 kg (approx. 9.7 lbs)

Power Source: Corded Electric

Special Features: Bagged, Compact, Lightweight, Automatic Cord Rewind, Rubber-Coated Wheels, Dust Bag Full Indicator

Surface Recommendation: All Floors

9. WARRANTY AND SUPPORT

Your Sencor SVC45RD Vacuum Cleaner comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use conditions.

For warranty claims, technical support, or service inquiries, please retain your proof of purchase and contact the authorized Sencor service center or your retailer. Do not attempt to repair the appliance yourself, as this may void the warranty and pose safety risks.