

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Oppo Digital DV980H User Manual

Redi-Remote RTDV980HREMOTE

Redi-Remote Replacement Remote Control for Oppo Digital DV980H User Manual

Model: RTDV980HREMOTE

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote Replacement Remote Control, specifically designed for use with the Oppo Digital DV980H DVD/Blu-ray player. This remote is a custom-built replacement and does not require programming; it is ready to use with your compatible device upon battery installation.

PRODUCT OVERVIEW



Figure 1: Redi-Remote Replacement Remote Control for Oppo Digital DV980H. The remote features a main button layout and a lower section concealed by a sliding cover, revealing additional DVD/USB functions.

The Redi-Remote for Oppo Digital DV980H features a standard set of controls for basic operation, along with a

sliding cover that reveals an extended set of buttons for advanced DVD/USB player functions. Familiarize yourself with the layout to ensure efficient use.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. The remote includes batteries.
4. Close the battery compartment cover securely.

The remote control is now ready for use with your Oppo Digital DV980H player. No additional programming is required.

OPERATION

This section details the functions of the buttons on your Redi-Remote control. The remote is divided into two main sections: the primary controls (always visible) and the advanced controls (under the sliding cover).

Primary Controls

- **PWR (Power):** Turns the Oppo Digital DV980H player on or off.
- **SLEEP:** Activates or deactivates the sleep timer function.
- **TV/VIDEO:** Switches video input sources on a connected TV (if supported by the player).
- **DISP (Display):** Toggles on-screen display information.
- **VOL - / VOL + (Volume):** Decreases or increases the audio volume.
- **MUTE:** Silences or restores the audio output.
- **CH - / CH + (Channel):** Changes channels (if applicable to the connected device).
- **MENU:** Accesses the main menu of the player.
- **RECALL:** Recalls the previous channel or input.
- **Number Pad (0-9, 100, ENT):** Used for direct input of track numbers, chapter numbers, or other numerical selections. 'ENT' confirms the entry. '100' may be used for specific functions or direct channel access.

Advanced Controls (Under Sliding Cover)

Slide down the cover at the bottom of the remote to access these additional functions.

- **DVD/USB:** Selects between DVD and USB input sources.
- **EJECT:** Opens or closes the disc tray.
- **ON / OFF:** Specific power controls for certain player modes.
- **BOOKMARK:** Sets or recalls a bookmark during playback.
- **CAPT. (Capture):** Initiates a screen capture function.
- **AUDIO ONLY:** Switches to audio-only playback mode.
- **GOTO:** Allows direct navigation to a specific time, chapter, or title.
- **TITLE:** Accesses the disc's title menu.
- **MENU:** Accesses the disc's main menu.
- **SETUP:** Enters the player's setup menu.
- **RETURN:** Returns to the previous menu or screen.

- **Navigation Buttons (Up, Down, Left, Right, SELECT):** Used to navigate menus and make selections.
- **Playback Controls (Rewind, Play, Fast Forward, Pause, Stop, Skip Back, Skip Forward):** Standard controls for media playback.
- **AUDIO:** Changes audio tracks or languages.
- **ANGLE:** Changes camera angles on compatible discs.
- **RPT (Repeat):** Repeats a track, chapter, or entire disc.
- **A-B:** Repeats a specific section between points A and B.
- **SLOW:** Activates slow-motion playback.
- **OSD (On-Screen Display):** Toggles additional on-screen information.
- **INFO:** Displays information about the current media.
- **ZOOM:** Zooms in or out on the video.
- **HDMI:** Selects the HDMI output.
- **P/N:** Switches between PAL and NTSC video formats.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, replace all four AAA batteries with new ones. Refer to the "Battery Installation" section for instructions.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed.
 - Check for any obstructions between the remote and the Oppo Digital DV980H player's infrared sensor.
 - Confirm you are within the effective operating range and pointing the remote directly at the player.
- **Certain functions not working:**
 - Ensure the sliding cover is open to access all advanced functions.
 - Verify that the function you are trying to use is supported by your Oppo Digital DV980H player and the current media.
- **Remote controls other devices:**
 - This Redi-Remote is specifically designed for the Oppo Digital DV980H and cannot be programmed to control auxiliary devices.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTDV980HREMOTE

Feature	Detail
Compatibility	Oppo Digital DV980H DVD/Blu-ray Player
Connectivity Technology	Infrared (IR)
Power Source	4 x AAA Batteries (included)
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces (approximately)
Special Feature	No Programming Required

WARRANTY AND SUPPORT

This Redi-Remote replacement control is designed for reliable operation. For any concerns regarding the remote control after purchase, please contact the seller, RemotesPro, directly for assistance. Specific warranty details should be obtained from the point of purchase or the seller.