

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for ASTAR LTV1701 and LTV3201

Redi-Remote RTLTV3201

Redi-Remote Replacement Remote Control User Manual

For ASTAR LTV1701 and LTV3201 Television Models

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed specifically for use with ASTAR LTV1701 and LTV3201 television models. This remote is a custom-built replacement and is not an original ASTAR product. It is engineered to perform all functions of the original remote for the specified units.

SETUP

Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always replace all batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote replacement control. Refer to the image below for button identification.



Figure 1: Redi-Remote Replacement Remote Control. This image displays the full remote control, including the upper section with power, volume, channel, and number buttons, and the lower section with advanced functions, revealed by sliding down a cover.

Upper Section Buttons

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates the sleep timer function, if available on your television.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information, such as current channel or time.
- **VOL + / VOL - (Volume Up / Down):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio.
- **CH+ / CH- (Channel Up / Down):** Changes the television channel.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Switches to the previously viewed channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers. The '100' button may be used for three-digit channel entry or specific functions depending on the TV model.
- **ENT (Enter):** Confirms channel selection or menu options.

Lower Section Buttons (Slide Down Cover)

To access these buttons, slide down the cover located at the lower half of the remote control.

- **SOURCE:** Cycles through available input sources (e.g., HDMI, AV, Component).
- **PIP (Picture-in-Picture):** Activates or controls the Picture-in-Picture function, if supported by your television.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **SYSTEM:** Accesses system settings or specific TV functions.
- **FREEZE:** Pauses the current image on the screen.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menu options.
- **MENU (Center):** Confirms selections within menus or acts as a secondary menu button.
- **V-CHIP:** Accesses V-Chip parental control settings.
- **CCD (Closed Captioning Decoder):** Toggles closed captions on or off.
- **SOUND:** Accesses audio settings (e.g., bass, treble, balance).
- **PICTURE:** Accesses picture settings (e.g., brightness, contrast, color).
- **AUTO:** Initiates automatic picture adjustment or channel scanning.
- **SCREEN:** Adjusts screen display modes or aspect ratios.
- *Additional unlabeled blue buttons:* These buttons are typically assigned specific functions by the television manufacturer and may vary. Refer to your television's original manual for their specific uses.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's functionality and appearance:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Care

- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	◦ Batteries are depleted or incorrectly inserted. ◦ Obstruction between remote and TV. ◦ Remote's infrared (IR) emitter is blocked. ◦ TV's IR receiver is blocked.	◦ Replace batteries with new ones, ensuring correct polarity. ◦ Remove any objects blocking the line of sight between the remote and the TV. ◦ Ensure your hand or other objects are not covering the front of the remote. ◦ Check if anything is covering the IR receiver on your TV.
Remote control range is poor.	◦ Weak batteries. ◦ Interference from strong light sources.	◦ Replace batteries. ◦ Ensure no direct sunlight or strong artificial light is interfering with the TV's IR receiver.
Certain buttons do not function.	◦ Button malfunction. ◦ Feature not supported by TV.	◦ Ensure the button is pressed firmly. ◦ Verify if the specific function is supported by your ASTAR LTV1701 or LTV3201 television model.

SPECIFICATIONS

Brand	Redi-Remote
Model Number	RTLTV3201
Compatible Devices	ASTAR LTV1701, ASTAR LTV3201 Televisions
Connectivity Technology	Infrared (IR)
Maximum Range	20 Feet
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)

SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. The seller, RemotesPro, can be reached via the Amazon platform where the purchase was made. This remote control is designed to function without programming and is not equipped to control auxiliary devices.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00A82NGO2>

More documents and user manuals: **<https://manuals.plus/>**