

[Manuals.plus](#) /

> [Smays](#) /

> Smays USB Charger Cord Instruction Manual

Smays SMAYS-6FT-MICRO-USB-CABLE

Smays USB Charger Cord User Manual

Model: SMAYS-6FT-MICRO-USB-CABLE

INTRODUCTION

This manual provides essential information for the proper use and care of your Smays USB Charger Cord. This product is designed to provide reliable charging and data syncing for a wide range of Amazon Kindle and Fire Tablet devices, as well as other compatible electronics.

The package contains two distinct cables: one with a Micro USB connector and another with a USB Type-C connector, ensuring broad compatibility with both older and newer models. Both cables feature a generous 6-foot length for convenience.

PRODUCT OVERVIEW



Image: The Smays USB Charger Cord, featuring a standard USB-A connector on one end and a Micro USB connector on the other, designed for charging and data transfer.

Different Charger Ends



Image: A visual guide illustrating the two different charger ends included: a smaller Micro USB end for older models and a larger USB-C end for newer models, ensuring broad compatibility.

The Smays USB Charger Cord set includes two cables to support various devices. One cable features a Micro USB connector, commonly found on older Kindle Paperwhite, Kindle Fire, and other Amazon Fire Tablet models. The second cable is equipped with a USB Type-C connector, compatible with newer Kindle and Fire Tablet devices, as well as other modern electronics.

Both cables are 6 feet (approximately 1.8 meters) in length, providing ample reach for convenient charging and data transfer from various power sources or computer ports.

SETUP AND CONNECTION

- 1. Identify the Correct Connector:** Examine your device's charging port to determine whether it requires a Micro USB (smaller, trapezoidal shape) or a USB Type-C (oval, reversible) connector. The product includes both types.
- 2. Connect to Power Source:**
 - For charging, insert the standard USB-A end of the cable into a compatible USB wall adapter, a USB port on a computer, or a power bank.
 - Ensure the power source is active and providing sufficient power (up to 2100 mA and 10.5 watts for fast charging).

2
Set of



Image: A person connecting the USB-A end of the charging cable into a wall outlet equipped with USB ports, demonstrating a common power source connection.

- 3. Connect to Device:** Gently insert the appropriate Micro USB or USB Type-C end of the cable into your device's charging port. Do not force the connector, as this may cause damage.



Image: A close-up view of the Micro USB end of the cable being inserted into the charging port of a tablet, illustrating the final connection step.

4. **Verify Connection:** Your device should indicate that it is charging (e.g., a battery icon with a lightning bolt or a charging animation).

Visual Guide: Cable Types

Your browser does not support the video tag.

Video: This video demonstrates the two different cable types (USB-C and Micro USB) included in the package, showing their distinct connectors and how they are used for charging various Kindle devices.

OPERATING INSTRUCTIONS

Charging Your Device

Once connected to a power source and your device, the Smays USB Charger Cord will begin charging. These cables are designed for fast charging, supporting up to 2100 mA and 10.5 watts, which can significantly reduce charging times compared to standard cables. The 6-foot length allows for flexible use while charging, enabling you to comfortably use your device even when it's plugged in.

Data Syncing

In addition to charging, these cables are fully capable of syncing data between your device and a computer. To

transfer files (e.g., e-books, documents, media):

1. Connect your device to a computer using the appropriate Smays USB Charger Cord.
2. Your computer should recognize the device as a removable storage drive.
3. You can then drag and drop files to and from your device's storage.
4. Always safely eject your device from the computer before disconnecting the cable to prevent data corruption.

MAINTENANCE AND CARE

- **Handle with Care:** Always grasp the connector head when plugging or unplugging the cable. Avoid pulling directly on the cable itself, as this can damage the internal wires or the connector.
- **Keep Dry:** Do not expose the cable to water or excessive moisture.
- **Store Properly:** When not in use, coil the cable loosely. Avoid tight coiling or sharp bends, which can stress the cable and lead to damage over time.
- **Clean Gently:** If the connectors become dirty, gently wipe them with a dry, soft cloth. Do not use liquids or abrasive cleaners.
- **Avoid Extreme Temperatures:** Do not expose the cable to extreme heat or cold, as this can affect its material integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging.	Incorrect cable type; loose connection; faulty power source; dirty port.	Ensure you are using the correct Micro USB or USB-C cable for your device. Check that both ends of the cable are securely plugged in. Try a different USB port or wall adapter. Gently clean the device's charging port.
Slow charging.	Low power output from source; device actively in use; background apps.	Use a power adapter with higher amperage (e.g., 2A or more). Avoid using the device heavily while charging. Close unnecessary background applications.
Data transfer issues.	Loose connection; driver issues on computer; device not in data transfer mode.	Ensure the cable is firmly connected to both the device and the computer. Restart your computer and device. Check your device settings to ensure it's set to "File Transfer" or "MTP" mode if prompted.

SPECIFICATIONS

- **Brand:** Smays
- **Model Number:** SMAYS-6FT-MICRO-USB-CABLE
- **Cable Type:** USB (includes Micro USB and USB Type-C)
- **Connector Type:** USB Type C, Micro USB, USB Type A
- **Cable Length:** 6 feet (approximately 1.8 meters)
- **Charging Capability:** Up to 2100 mA (2.1A) and 10.5 watts
- **Data Sync:** Supported
- **Compatible Devices:** Amazon Kindle E-reader wifi+3g, Kindle Touch, Kindle Paperwhite, Kindle Voyage, Kindle DX, Amazon Fire HD tablet, All-new Kindle models, and other devices with Micro USB or USB Type-C ports.

- **Product Dimensions:** 3.54 x 3.54 x 0.79 inches (packaged); 3.52 ounces

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Smays USB Charger Cord, please refer to the product's purchase platform or contact Smays customer service directly. Please retain your proof of purchase for warranty claims.

Additional resources, including a PDF user guide, may be available through the original product listing or the manufacturer's website.

© 2025 Smays. All rights reserved.