

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lenco](#) /

› [Lenco 05437 LDC-50 Red Female Dinse Cable Connector User Manual](#)

## Lenco 05437

# Lenco 05437 LDC-50 Red Female Dinse Cable Connector User Manual

Model: 05437

## INTRODUCTION

This manual provides essential information for the safe and effective use of the Lenco 05437 LDC-50 Red Female Dinse Cable Connector. Please read these instructions carefully before installation and operation to ensure proper function and longevity of the product.

## SAFETY INFORMATION

Always observe the following safety precautions:

- Ensure all power sources are disconnected before making or breaking electrical connections.
- Use appropriate personal protective equipment (PPE) when working with electrical equipment.
- Verify that the connector is compatible with the cable and equipment specifications (e.g., current rating, voltage).
- Inspect the connector for any damage before each use. Do not use if damaged.
- Keep the connector clean and free from moisture, dust, and debris.

## PRODUCT OVERVIEW

The Lenco 05437 LDC-50 is a red female Dinse-style connector designed for secure and reliable electrical connections, commonly used in welding and other high-current applications. It is sized for 35/50 Dinse connections.



**Figure 1:** Lenco 05437 LDC-50 Red Female Dinse Cable Connector. This image shows the red female connector, highlighting its robust construction and standard Dinse interface.

## SETUP AND INSTALLATION

---

Follow these steps to properly install the Lenco 05437 connector onto a compatible cable:

- 1. Prepare the Cable:** Strip the insulation from the end of the electrical cable to expose the conductor. Ensure the stripped length matches the connector's terminal requirements.
- 2. Insert Cable:** Insert the stripped cable conductor into the connector's terminal.
- 3. Secure Connection:** Crimp or solder the cable to the connector terminal according to industry best practices and the connector's design. Ensure a tight and secure electrical connection.
- 4. Insulate:** If applicable, slide the connector's insulating sleeve or cover over the connection point to provide electrical isolation and strain relief.
- 5. Verify:** Double-check all connections for tightness, proper insulation, and absence of exposed conductors.

**Note:** Professional installation is recommended for optimal safety and performance.

## OPERATING INSTRUCTIONS

---

Once the Lenco 05437 female connector is properly installed on a cable, it can be connected to a compatible male Dinse-style connector on equipment or another cable.

- Connecting:** Align the female connector with the male connector. Push them together firmly and twist to lock them securely in place.
- Disconnecting:** Twist the connectors to unlock them, then pull them apart. Always ensure power is off before disconnecting.

Ensure the connection is fully seated and locked to prevent arcing and ensure efficient power transfer.

## MAINTENANCE

---

Regular maintenance ensures the longevity and safe operation of your connector.

- **Inspection:** Periodically inspect the connector for signs of wear, damage, corrosion, or overheating (discoloration).
- **Cleaning:** Keep the connector contacts clean and free from dirt, grease, and oxidation. Use a non-abrasive cleaner and a clean cloth if necessary. Ensure the connector is dry before use.
- **Storage:** Store connectors in a clean, dry environment away from direct sunlight and extreme temperatures when not in use.

## TROUBLESHOOTING

---

If you encounter issues with your Lenco 05437 connector, consider the following:

- **Poor Connection/Intermittent Power:**
  - Ensure the connector is fully seated and locked.
  - Check for dirt or corrosion on the contacts; clean if necessary.
  - Inspect the cable connection to the connector for looseness or damage.
- **Overheating:**
  - Verify that the connector's current rating is appropriate for the application.
  - Check for loose connections, which can cause resistance and heat.
  - Ensure proper ventilation around the connection.
- **Difficulty Connecting/Disconnecting:**
  - Ensure the male and female connectors are compatible (e.g., both Dinse 35/50).
  - Check for physical damage or deformation on either connector.

If problems persist, discontinue use and consult a qualified technician or contact Lenco support.

## SPECIFICATIONS

---

Feature	Detail
<b>Brand</b>	Lenco
<b>Model Number</b>	05437
<b>Type</b>	Female Dinse Cable Connector
<b>Color</b>	Red
<b>Size</b>	35/50 Dinse
<b>Item Weight</b>	7.4 ounces
<b>Product Dimensions</b>	5 x 2 x 2 inches
<b>ASIN</b>	B00AB2HOTC
<b>Date First Available</b>	October 4, 2018

## WARRANTY INFORMATION

---

Lenco products are manufactured to high-quality standards. For specific warranty details, please refer to the

documentation included with your purchase or visit the official Lenco website. Keep your proof of purchase for warranty claims.

## **CUSTOMER SUPPORT**

---

If you have any questions, require technical assistance, or need to report an issue with your Lenco 05437 connector, please contact Lenco customer support through their official website or the contact information provided with your product packaging.

© 2026 Lenco. All rights reserved.