

Manuals.plus /

- › Hasbro /
- › Nerf Hail-fire Instruction Manual

## Hasbro 98952

# Nerf Hail-fire Blaster Instruction Manual

Model: 98952 | Brand: Hasbro

## INTRODUCTION

---

The Nerf Hail-fire blaster is a semi-automatic electronic clip system blaster designed for high-capacity dart firing. It features a unique rotating ammo rack, allowing for rapid access to multiple dart clips. This manual provides essential information for the safe and effective use of your Hail-fire blaster.



Image: The Nerf Hail-fire blaster, showcasing its blue and orange design with multiple dart clips loaded into the rotating rack.

## PACKAGE CONTENTS

---

- 1 x Nerf Hail-fire Blaster
- 4 x 6-dart Quick Reload Clips
- 24 x Elite Darts
- Instruction Manual



Image: The product packaging for the Nerf Hail-fire, illustrating the blaster, included clips, and darts.

## SETUP

### 1. Battery Installation

The Hail-fire blaster requires four (4) AA batteries for operation. Locate the battery compartment, typically on the side or bottom of the blaster. Use a Phillips head screwdriver to open the compartment. Insert the batteries, ensuring correct polarity (+/-). Close the compartment and secure it with the screw.

### 2. Loading Dart Clips

Each Quick Reload clip holds 6 Elite Darts. Insert darts into the clips until they are fully seated. The Hail-fire blaster's rotating ammo rack can hold up to 8 Quick Reload clips (4 included, 4 sold separately). To load, slide the filled clips into the designated slots on the rotating rack until they click into place.

## OPERATING INSTRUCTIONS

### 1. Powering On and Priming

Once batteries are installed and clips are loaded, hold the blaster firmly. Press and hold the acceleration trigger (usually located below the main trigger) to power up the motor. You will hear the motor whirring, indicating it is ready to fire.

### 2. Firing Darts

While holding the acceleration trigger, pull the main trigger to fire a single dart. The blaster is semi-automatic, meaning you must release and pull the main trigger for each shot. Darts can be fired up to 75 feet.



Image: A person demonstrating the firing action of the Nerf Hail-fire blaster, with a dart visibly launched from the barrel.

### 3. Rotating Ammo Rack

To access a new loaded clip, manually rotate the ammo rack. This allows you to quickly switch between clips when one is empty, maximizing continuous firing capability.



Image: A user kneeling and demonstrating the manual rotation of the Hail-fire's ammo rack to access different dart clips.

### 4. Tactical Rails

The Hail-fire blaster features two tactical rails compatible with most N-STRIKE accessories (sold separately). These rails allow for customization with scopes, grips, or other attachments.

## MAINTENANCE

---

### 1. Cleaning

Wipe the blaster with a clean, damp cloth to remove dust and dirt. Do not submerge the blaster in water or use harsh cleaning agents, as this can damage electronic components.

### 2. Dart Care

Ensure darts are clean and undamaged for optimal performance. Bent or torn darts may cause jams or reduce firing distance. Replace worn-out darts as needed.

### 3. Battery Storage

If the blaster will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the electronic components.

## TROUBLESHOOTING

---

- **Blaster not firing or motor not powering up:**
  - Check battery installation and ensure correct polarity.
  - Replace old or depleted batteries with new ones.
  - Ensure the acceleration trigger is fully pressed.
- **Darts not firing or jamming:**
  - Ensure darts are fully inserted into the clips.
  - Check darts for damage (bends, tears) and replace if necessary.
  - Verify that the dart clip is properly seated in the blaster's rack.
  - Ensure the ammo rack is rotated to a loaded clip.
- **Reduced firing distance:**
  - Replace batteries with fresh ones.
  - Use new, undamaged Elite Darts.

## SPECIFICATIONS

---

|                               |                                 |
|-------------------------------|---------------------------------|
| <b>Model Number</b>           | 98952                           |
| <b>Brand</b>                  | Hasbro                          |
| <b>Dimensions (L x W x H)</b> | 22.99 x 4.49 x 12.99 inches     |
| <b>Weight</b>                 | 1 pound                         |
| <b>Battery Requirement</b>    | 4 x AA batteries (not included) |
| <b>Dart Type</b>              | Nerf Elite Darts                |
| <b>Recommended Age</b>        | Ages 8 and up                   |

## SAFETY INFORMATION

---

- Do not aim at eyes or face.
- Use only official NERF darts. Other darts may not meet safety standards.
- Do not modify the blaster or darts.
- Adult supervision is recommended for younger users.

## WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Hasbro website. Keep your purchase receipt for warranty claims.

For additional assistance, you may contact Hasbro Customer Service through their official channels. Information regarding product support is typically available on the manufacturer's website.



