



Manuals.plus /

› AROMA /

› AROMA AWK-108 Electric Water Kettle User Manual

AROMA AWK-108

AROMA AWK-108 Electric Water Kettle User Manual

Model: AWK-108

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact AROMA customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- Ensure the lid is securely closed during operation.
- Do not overfill the kettle beyond the MAX fill line.

PARTS IDENTIFICATION

Familiarize yourself with the components of your AROMA Electric Water Kettle:

- **Lid:** Covers the kettle opening.

- **Spout with Filter:** For pouring water and filtering out scale.
- **Handle:** For safe handling and pouring.
- **Water Level Indicator:** Shows the amount of water inside the kettle.
- **Power Switch with Indicator Light:** Activates the heating element and shows when the kettle is operating.
- **Heating Plate:** The internal element that heats the water.
- **Power Base:** Provides power to the kettle when placed upon it.

BEFORE FIRST USE

1. Carefully unpack the electric water kettle and all its components.
2. Wash the interior of the kettle with warm, soapy water. Rinse thoroughly with clean water.
3. Fill the kettle with water up to the MAX fill line.
4. Place the kettle on its power base and boil the water.
5. Discard the boiled water. Repeat this process 2-3 times to remove any manufacturing residues and ensure optimal taste.

OPERATING INSTRUCTIONS

1. Place the power base on a dry, flat, and stable surface.
2. Fill the kettle with the desired amount of water. Ensure the water level is between the MIN and MAX fill lines indicated on the kettle.
3. Close the lid securely.
4. Place the kettle firmly onto the power base.
5. Plug the power cord into a standard electrical outlet.
6. Press the power switch down. The indicator light will illuminate, signifying that the kettle is heating.
7. The kettle will automatically shut off once the water reaches a boil, and the indicator light will turn off.
8. Carefully lift the kettle from the base to pour. *Caution:* Steam is hot and can cause burns.
9. To stop the heating process before boiling, simply lift the kettle from the base or manually switch off the power button.

CLEANING AND MAINTENANCE

Regular cleaning helps maintain the performance and longevity of your kettle.

- **Daily Cleaning:** Unplug the kettle and allow it to cool completely before cleaning. Wipe the exterior with a damp cloth. Hand wash the interior with warm, soapy water and rinse thoroughly.
- **Descaling:** Mineral deposits (limescale) can build up over time, especially in hard water areas. This can affect performance.
 - To descale, fill the kettle with a mixture of 1 part white vinegar to 2 parts water, or use a commercial descaling solution according to its instructions.
 - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy buildup.
 - Discard the mixture and rinse the kettle interior several times with fresh water. Boil fresh water and discard it 2-3 times to remove any residual vinegar taste.
 - *Do not use abrasive cleaners, scouring pads, or harsh chemicals on any part of the kettle.*
- **Product Care Instructions:** Hand wash, Wipe clean.

TROUBLESHOOTING

If your kettle is not functioning as expected, please check the following:

- **Kettle not heating:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Verify the kettle is properly seated on its power base.
 - Check that the power switch is pressed down and the indicator light is on.
- **Kettle leaks:**
 - Ensure the lid is closed securely.
 - Do not fill the kettle past the MAX fill line. Overfilling can cause water to boil over or leak from the spout/lid.
- **Kettle does not shut off automatically:**
 - Confirm the lid is closed securely. The automatic shut-off mechanism relies on steam buildup, which can escape if the lid is not properly sealed.
- **Water tastes strange or has an odor:**
 - Ensure you have completed the "Before First Use" cleaning steps.
 - Descale the kettle if mineral buildup is present.

SPECIFICATIONS

Model Number	AWK-108
Capacity	1.7 Liters
Material	Stainless Steel
Color	Black
Wattage	1500 watts
Special Feature	Indicator Light
UPC	021241101080
GTIN	021241101080

WARRANTY AND SUPPORT

This AROMA Electric Water Kettle is covered by a limited warranty. For specific warranty details, claims, or technical support, please contact AROMA customer service directly.

Please have your model number (AWK-108) and proof of purchase available when contacting support.