

[Manuals.plus](#) /

> [Orion](#) /

> Orion 24" SLED2468W 720P 60Hz LED LCD HDTV User Manual

Orion SLED2468W

Orion 24" SLED2468W LED LCD HDTV User Manual

Model: SLED2468W

INTRODUCTION

Thank you for purchasing the Orion 24" SLED2468W LED LCD HDTV. This manual provides essential information for the safe and efficient operation of your television. Please read it thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Place the TV on a stable, level surface.
- Use only the power cord supplied with the unit.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

WHAT'S IN THE BOX

Carefully unpack the box and ensure all items are present:

- Orion 24" SLED2468W LED LCD HDTV
- TV Stand
- Remote Control (batteries not included, requires 2 AAA batteries)
- Power Cord
- User Manual (this document)



Image: The side of the Orion TV box illustrating the TV and stand components packed inside.

SETUP

1. Unpacking

Remove the TV and all accessories from the packaging. Retain the packaging for future transport or storage.



Image: The front of the Orion 24" LED-LCD HDTV box, displaying the model number SLED2468W and key features such as Integrated Digital Tuner, USB Time Shift, HDMI, and Headphone/Digital Audio Output.

2. Attaching the Stand

Place the TV screen-down on a soft, clean surface. Align the TV stand with the mounting holes on the bottom of the TV. Secure the stand using the provided screws.

3. Connecting Power

Connect the power cord to the TV's power input and then to a standard 110 VAC, 60 Hz electrical outlet.

4. Connecting External Devices

Your TV supports various connections for external devices:

- **HDMI:** For high-definition audio and video from devices like Blu-ray players, game consoles, or cable/satellite boxes.
- **USB:** For media playback or USB Time Shift functionality.
- **Antenna/Cable:** For receiving broadcast television signals via the integrated ATSC tuner.
- **PC Input:** For connecting a computer monitor.
- **Headphone/Digital Audio Output (Coaxial):** For connecting external audio systems.

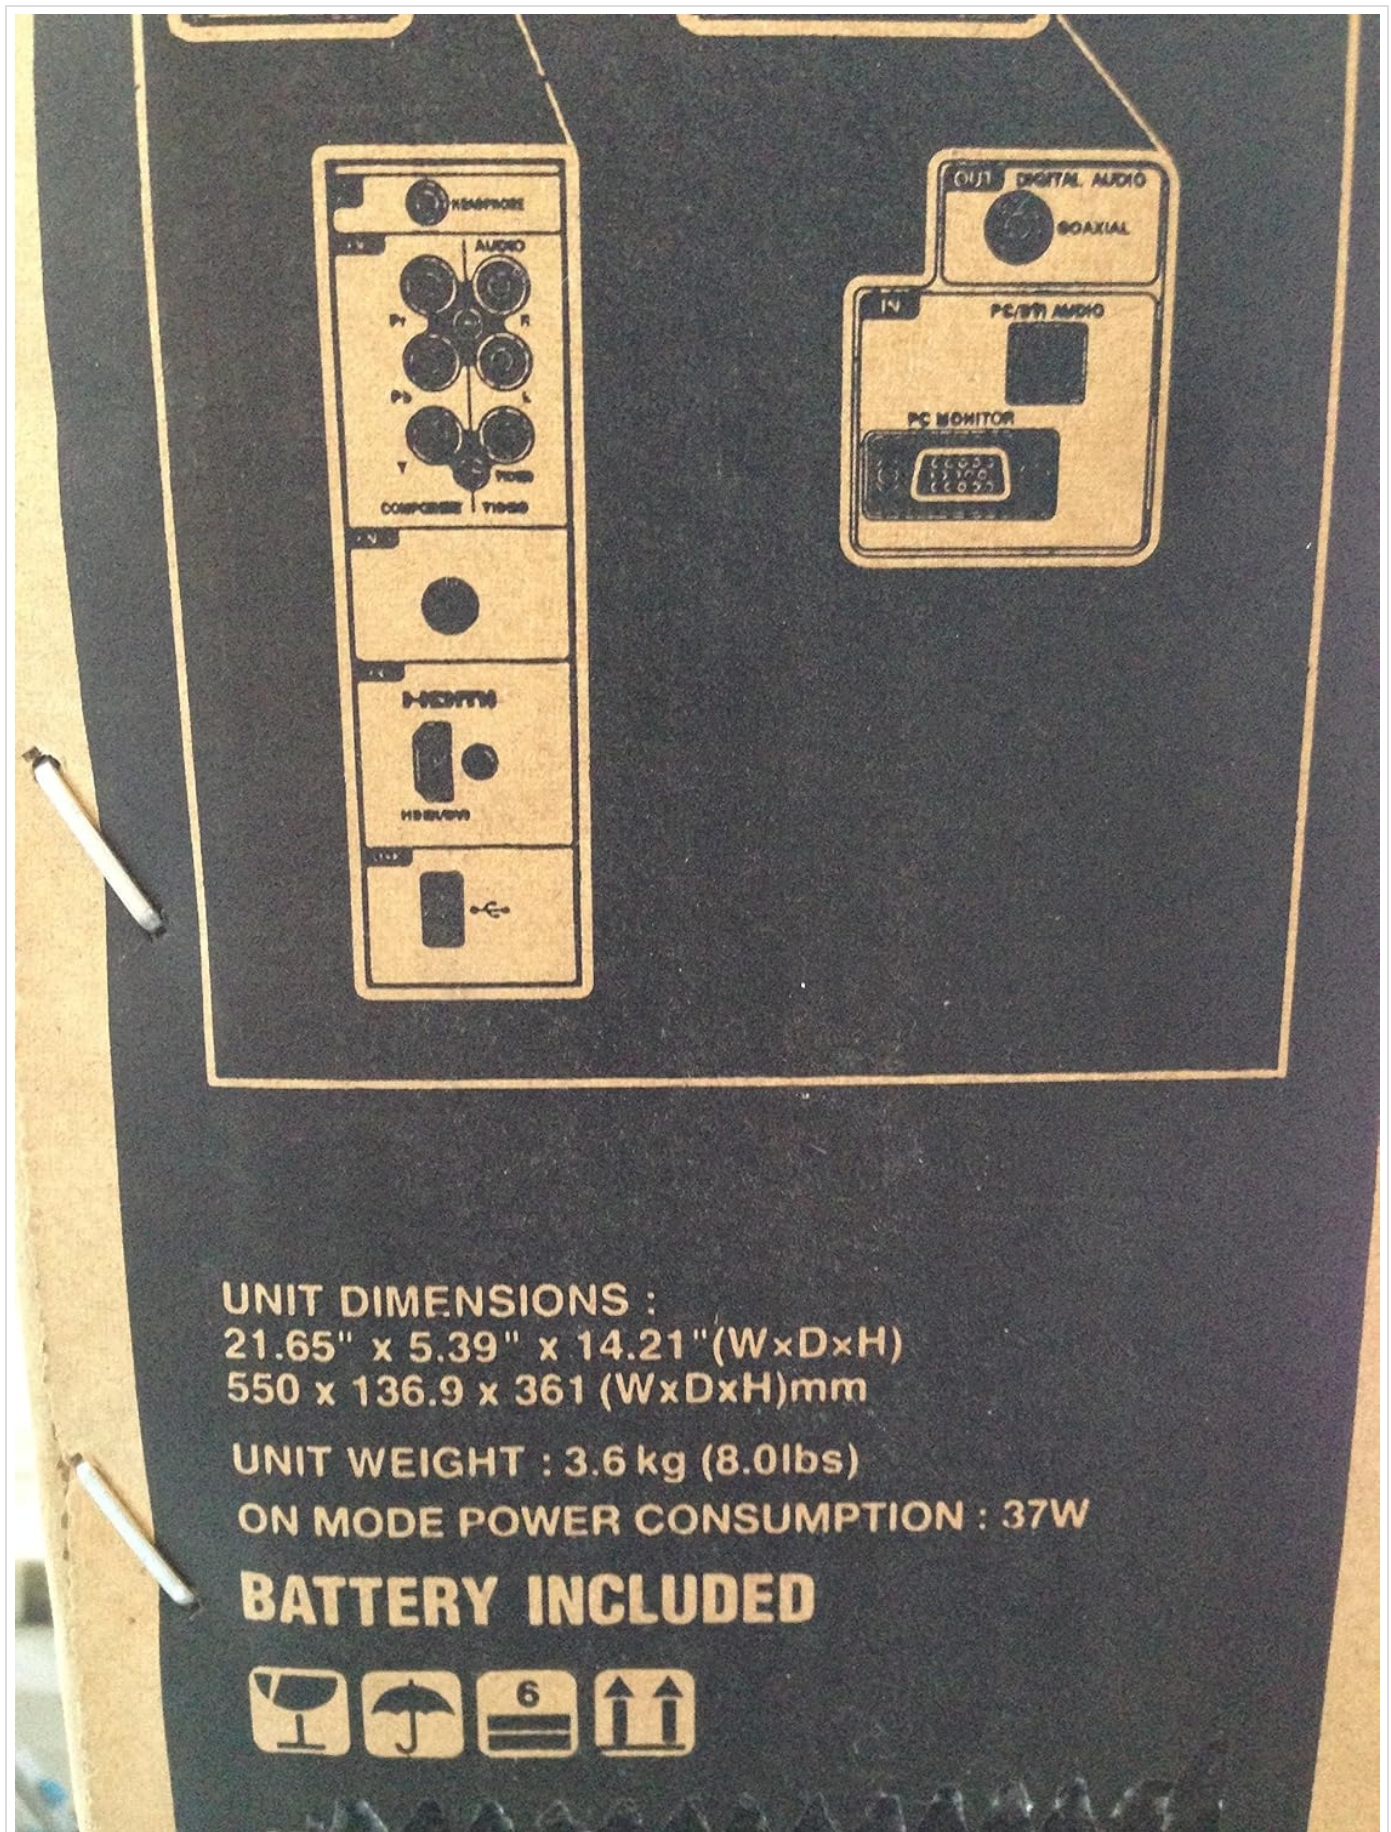


Image: A diagram illustrating various connection ports on the TV, including headphone, audio, PC monitor, and coaxial outputs. Also shown are the unit dimensions and weight.

5. Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process, including language selection, channel

scanning, and time zone settings.

OPERATING

Basic Remote Control Functions

The remote control allows you to access all TV functions. Ensure batteries are correctly inserted.

- **Power:** Turns the TV on or off.
- **Channel Up/Down:** Changes TV channels.
- **Volume Up/Down:** Adjusts the sound level.
- **Input/Source:** Selects the input source (HDMI, TV, USB, etc.).
- **Menu:** Accesses the main menu for settings adjustments.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Used to navigate menus and confirm selections.

USB Time Shift

The TV features a USB Time Shift function. Connect a USB storage device to pause, rewind, or fast-forward live TV broadcasts. Refer to the on-screen menu for detailed instructions on activating and using this feature.

Internet Browser

This TV includes a basic internet browser. Connect the TV to your network (if applicable) to access web content. Performance may vary depending on network speed and website complexity.

MAINTENANCE

Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

General Care

Keep the TV free from dust by regularly wiping the cabinet with a dry, soft cloth. Ensure adequate ventilation around the TV to prevent overheating.

TROUBLESHOOTING

If you encounter issues with your TV, consult the following table before contacting support:

Problem	Possible Solution
No power	Check if the power cord is securely connected to both the TV and the outlet. Ensure the outlet is functional.
No picture, but sound is present	Verify the correct input source is selected. Check external device connections.
No sound, but picture is present	Check volume level and mute settings. Ensure external audio connections are secure.

Problem	Possible Solution
Remote control not working	Replace batteries. Ensure no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Check antenna connection. Adjust picture settings in the TV menu.

SPECIFICATIONS

Technical specifications for the Orion 24" SLED2468W LED LCD HDTV:

Feature	Specification
Model Number	SLED2468W
Screen Size	24 Inches
Display Technology	LED-LCD
Resolution	720p
Refresh Rate	60 Hz
Aspect Ratio	16:9
Connectivity Technology	HDMI, USB
Tuner Type	ATSC
Supported Internet Services	Browser
Line Voltage	110 VAC 60 Hz
On Mode Power Consumption	37W (as per box image)
Unit Dimensions (WxDxH)	21.65" x 5.39" x 14.21" (550 x 136.9 x 361 mm) (as per box image)
Unit Weight	3.6 kg (8.0 lbs) (as per box image)
Manufacturer	Sansui
UPC	755805020776

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Orion product support website. Keep your proof of purchase for warranty claims.