

Bruder 02324

Bruder Claas Front Disc Mower 3050 FC Plus Instruction Manual

Model: 02324

INTRODUCTION

This manual provides essential information for the safe and effective use of your Bruder Claas Front Disc Mower 3050 FC Plus. This toy accessory is designed to be mounted on Bruder Pro Series tractors, transforming them into industrial-strength mowers for realistic play scenarios.

The mower features an oscillating suspension to adapt to uneven ground, and its blades are covered by a protective rubber skirt. The unit can be raised when not in use, and the front mower can be lowered and raised independently. A rotating conditioner, operated via a direct drive system, enhances its authenticity.

This product is a 1:16 scale model, suitable for both indoor and outdoor play. Please read all instructions carefully before use.



Image: The Bruder Claas Front Disc Mower 3050 FC Plus, a green and black toy accessory designed for attachment to Bruder Pro Series tractors.

SAFETY INFORMATION

Warning: Small parts. Not for children under 3 years old. Adult supervision is recommended during play.

- Ensure all components are securely attached before play.
- Keep away from heat sources and open flames.
- Do not modify the product, as this may compromise its safety and functionality.

SETUP

1. **Unpack the Mower:** Carefully remove the Claas Front Disc Mower 3050 FC Plus from its packaging. Inspect all components for any damage.
2. **Prepare the Tractor:** Ensure your Bruder Pro Series tractor is ready for attachment. The mower is designed to connect to the front hitch of compatible tractors.
3. **Attach the Mower:** Align the attachment points of the mower with the front hitch of the tractor. Securely connect the mower to the tractor. Ensure it clicks into place or is firmly seated.
4. **Adjusting the Mower:** The mower can be raised and lowered. Adjust it to the desired position for play or transport.

Your browser does not support the video tag.

Video: This video demonstrates the attachment and functionality of a Bruder Claas mower, showing how it connects to a compatible Bruder vehicle and its operational features.

OPERATING INSTRUCTIONS

The Bruder Claas Front Disc Mower 3050 FC Plus is designed for interactive play, simulating real-world agricultural tasks.

- **Lowering/Raising:** The front mower unit can be manually lowered to a working position or raised for transport.
- **Oscillating Suspension:** The mower features an oscillating suspension that allows it to adapt to uneven surfaces, enhancing realistic play.
- **Rotating Conditioner:** The conditioner, located behind the cutting discs, rotates via a direct drive system. This simulates the process of preparing cut material.
- **Movement:** Once attached to a tractor, the mower moves with the tractor, simulating mowing operations.

MAINTENANCE

To ensure the longevity and optimal performance of your Bruder Claas Front Disc Mower 3050 FC Plus, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the toy with a damp cloth to remove dust and dirt. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the mower in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check for any loose or damaged parts. While durable, excessive force can cause damage.
- **Refrigerator Safe:** This product is listed as refrigerator safe, indicating its material stability across temperature ranges, but it is not intended for food storage.

TROUBLESHOOTING

If you encounter any issues with your Bruder Claas Front Disc Mower 3050 FC Plus, consider the following common solutions:

- **Mower not attaching securely:** Ensure the attachment points on both the mower and the tractor are clean and free from obstructions. Verify that the mower is compatible with your specific Bruder Pro Series tractor model.
- **Movable parts are stiff:** Check for any debris or foreign objects obstructing the movement. Gentle manipulation may help free up the parts. Avoid forcing movement.
- **General wear and tear:** As a toy, some wear is expected over time. If a part breaks, check the warranty information for possible replacement or repair options.

SPECIFICATIONS

Brand	Bruder
Model Name	Claas Front Disc Mower 3050 FC Plus Front Mower
Model Number	02324
Scale	1:16 Scale
Material Type	Plastic
Color	Green

Item Dimensions (L x W x H)	7.48 x 6.1 x 3.54 inches (19.0 cm x 15.5 cm x 9.0 cm)
Item Weight	260 Grams
Manufacturer Minimum Age	36 Months
Manufacturer Maximum Age	180 Months
Included Components	Claas Front Disc Mower 3050 FC Plus
Operation Mode	Manual
Additional Features	Refrigerator Safe

WARRANTY INFORMATION

The Bruder Claas Front Disc Mower 3050 FC Plus comes with a manufacturer's warranty.

Warranty Description: 30 day warranty against manufacturer defects.

Please retain your proof of purchase for warranty claims. For more details or to initiate a claim, please contact Bruder customer support.

SUPPORT

For further assistance, product information, or to explore other Bruder products, please visit the official Bruder store or contact their customer service.

Bruder Official Store: [Visit the Bruder Store on Amazon](#)

For specific inquiries, refer to the contact information provided on the product packaging or the official Bruder website.