

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Boogie Board](#) /
- › [Boogie Board Basics Reusable Writing Pad \(Model PT01085CYAA0002\) Instruction Manual](#)

Boogie Board PT01085CYAA0002

Boogie Board Basics Reusable Writing Pad

Model: PT01085CYAA0002

Manufacturer: Boogie Board

1. INTRODUCTION

The Boogie Board Basics Reusable Writing Pad is a versatile digital drawing tablet designed for quick notes, doodles, and lists. Utilizing patented LCD technology, it offers a natural writing experience with instant erase functionality, eliminating the need for paper.

Key features include:

- **Reusable Writing Surface:** Write or draw repeatedly without paper waste.
- **Instant Erase:** Clear the entire screen with a single button press.
- **Stylus Included:** Use the dedicated stylus or any non-scratching object like a fingernail.
- **Clutter-Free Design:** Portable and lightweight, ideal for home, office, or on-the-go use.

2. WHAT'S IN THE BOX

Your Boogie Board Basics Reusable Writing Pad package contains:

- Reusable Writing Tablet
- Stylus Pen

3. SETUP

The Boogie Board Basics is designed for immediate use with minimal setup. It comes pre-installed with a Lithium Metal battery.

1. **Unpack:** Carefully remove the writing pad and stylus from its packaging.
2. **Attach Stylus:** Secure the stylus in the integrated stylus holder located at the top of the device.
3. **Ready to Use:** The device is now ready for writing or drawing. No charging or pairing is required.

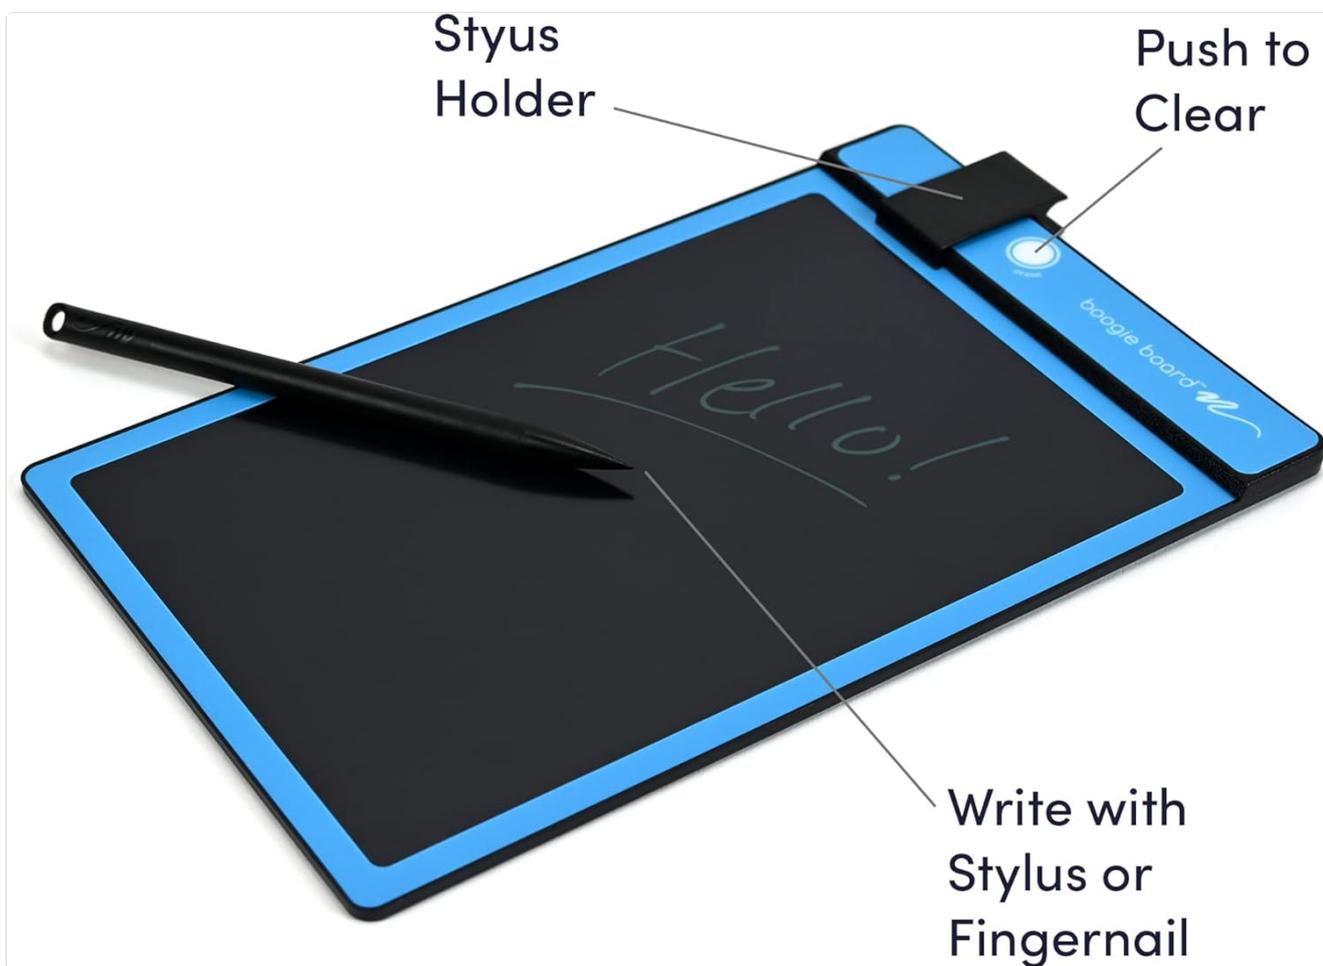


Figure 3.1: Boogie Board Basics highlighting stylus holder and erase button.

4. OPERATING INSTRUCTIONS

Using your Boogie Board Basics is straightforward:

1. **Writing/Drawing:** Use the included stylus or any non-scratching object (such as a fingernail) to write or draw directly on the black LCD screen. The writing will appear in a vibrant green color.
2. **Erasing:** To clear the entire screen, press the circular 'erase' button located at the top of the device. The screen will instantly clear, ready for new content.



Figure 4.1: Demonstrating writing on the Boogie Board Basics screen.

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating the writing and instant erase function of the Boogie Board Basics Reusable Writing Pad.

5. MAINTENANCE

- **Cleaning:** Wipe the screen with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** The Boogie Board Basics uses a CR2025 Lithium Metal battery. To replace, carefully remove the four small screws on the back of the device, replace the battery, and re-secure the screws.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Screen Not Clearing:** If the screen does not clear completely after pressing the erase button, the battery may

be low or depleted. Replace the CR2025 battery as described in the Maintenance section.

- **Faint Writing:** If writing appears faint, ensure you are applying adequate pressure with the stylus. If the issue persists, the battery may need replacement.
- **Scratches on Screen:** Avoid using sharp objects on the screen, as this can cause permanent damage.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	10.8 x 6.8 x 0.6 inches
Item Weight	3.95 ounces
Item Model Number	PT01085CYAA0002
Batteries	1 Lithium Metal battery (CR2025) required (included)
Connectivity Technology	None (Standalone device)
Special Feature	Stylus Pen, Instant Erase



Figure 7.1: Boogie Board Basics dimensions.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Boogie Board website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

