

[manuals.plus](#) /

› [Boogie Board](#) /

› [Boogie Board Basics Reusable Writing Pad - Digital Drawing Tablet, LCD Writing Pad with Instant Erase, Includes Stylus Pen Pink User Manual](#)

Boogie Board PT01085PNKA0002

Boogie Board Basics Reusable Writing Pad User Manual

Model: PT01085PNKA0002

Brand: Boogie Board

INTRODUCTION

The Boogie Board Basics Reusable Writing Pad is a digital drawing tablet designed for jotting down notes, creating sketches, and practicing writing. It utilizes patented liquid crystal technology to provide a natural writing experience on a durable screen. The device offers instant erase functionality, allowing for quick clearing of the display with the push of a button, eliminating the need for paper.



Image: Front view of the Boogie Board Basics in pink, displaying the word "Hello!" written on its black LCD screen. A black stylus is secured at the top.

WHAT'S IN THE Box

Upon opening the package, verify that all components are present:

- Boogie Board Basics Reusable Writing Tablet
- Stylus Pen

SETUP

The Boogie Board Basics is designed for immediate use with minimal setup. It comes with a pre-installed battery.

- 1. Unpack the Device:** Carefully remove the Boogie Board and its stylus from the packaging.
- 2. Attach the Stylus:** The stylus can be stored in the integrated holder at the top of the board.
- 3. Ready for Use:** The device is now ready for writing or drawing.



Image: An angled view of the pink Boogie Board, highlighting the stylus holder at the top, the "Push to Clear" button, and the main writing surface where text can be created with the stylus or a fingernail.

OPERATING INSTRUCTIONS

Writing and Drawing

- Use the included stylus pen to write or draw directly on the LCD screen.
- The pressure-sensitive surface allows for varying line thickness based on the force applied.
- Alternatively, you can use any non-scratching object, such as a fingernail, to write on the surface.



Image: A pair of hands holding the pink Boogie Board, with one hand using the black stylus to write the word "Hello!" on the screen.

Erasing Content

- To clear the screen, press the circular "Clear" button located at the top center of the device.
- The Quick Clear technology will instantly erase all content from the display.



Image: A hand's index finger pressing the circular clear button located at the top of the pink Boogie Board, indicating the erase function.

Battery Life

The Boogie Board Basics uses a sealed, non-replaceable Lithium Metal battery. The battery is primarily consumed during the clearing process. With typical use, the battery is designed to last for several years and tens of thousands of erases.

MAINTENANCE

Cleaning the Screen

- To clean the screen, use a soft, lint-free cloth.
- For stubborn marks, a slightly damp cloth with water or a mild, non-abrasive screen cleaner can be used.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the screen.

Storage

- Store the Boogie Board in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the stylus is securely placed in its holder to prevent loss.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Screen does not clear.	Battery depleted.	The battery is sealed and non-replaceable. If the board no longer clears, it may have reached the end of its lifespan.
Writing is faint or inconsistent.	Insufficient pressure applied or screen surface is dirty.	Apply more pressure with the stylus. Clean the screen as per maintenance instructions.

Problem	Possible Cause	Solution
Stylus is lost.	Stylus not secured in holder.	Any non-scratching object can be used to write on the board. Replacement styluses may be available from the manufacturer.

SPECIFICATIONS

Feature	Detail
Model Number	PT01085PNKA0002
Product Dimensions	10.8 x 6.8 x 0.6 inches
Item Weight	4.6 ounces
Visible Screen Diagonal	9 inches / 22 cm
Battery Type	1 Lithium Metal battery (included, non-replaceable)
Special Feature	Stylus Pen
Manufacturer	Boogie Board
Date First Available	January 6, 2011

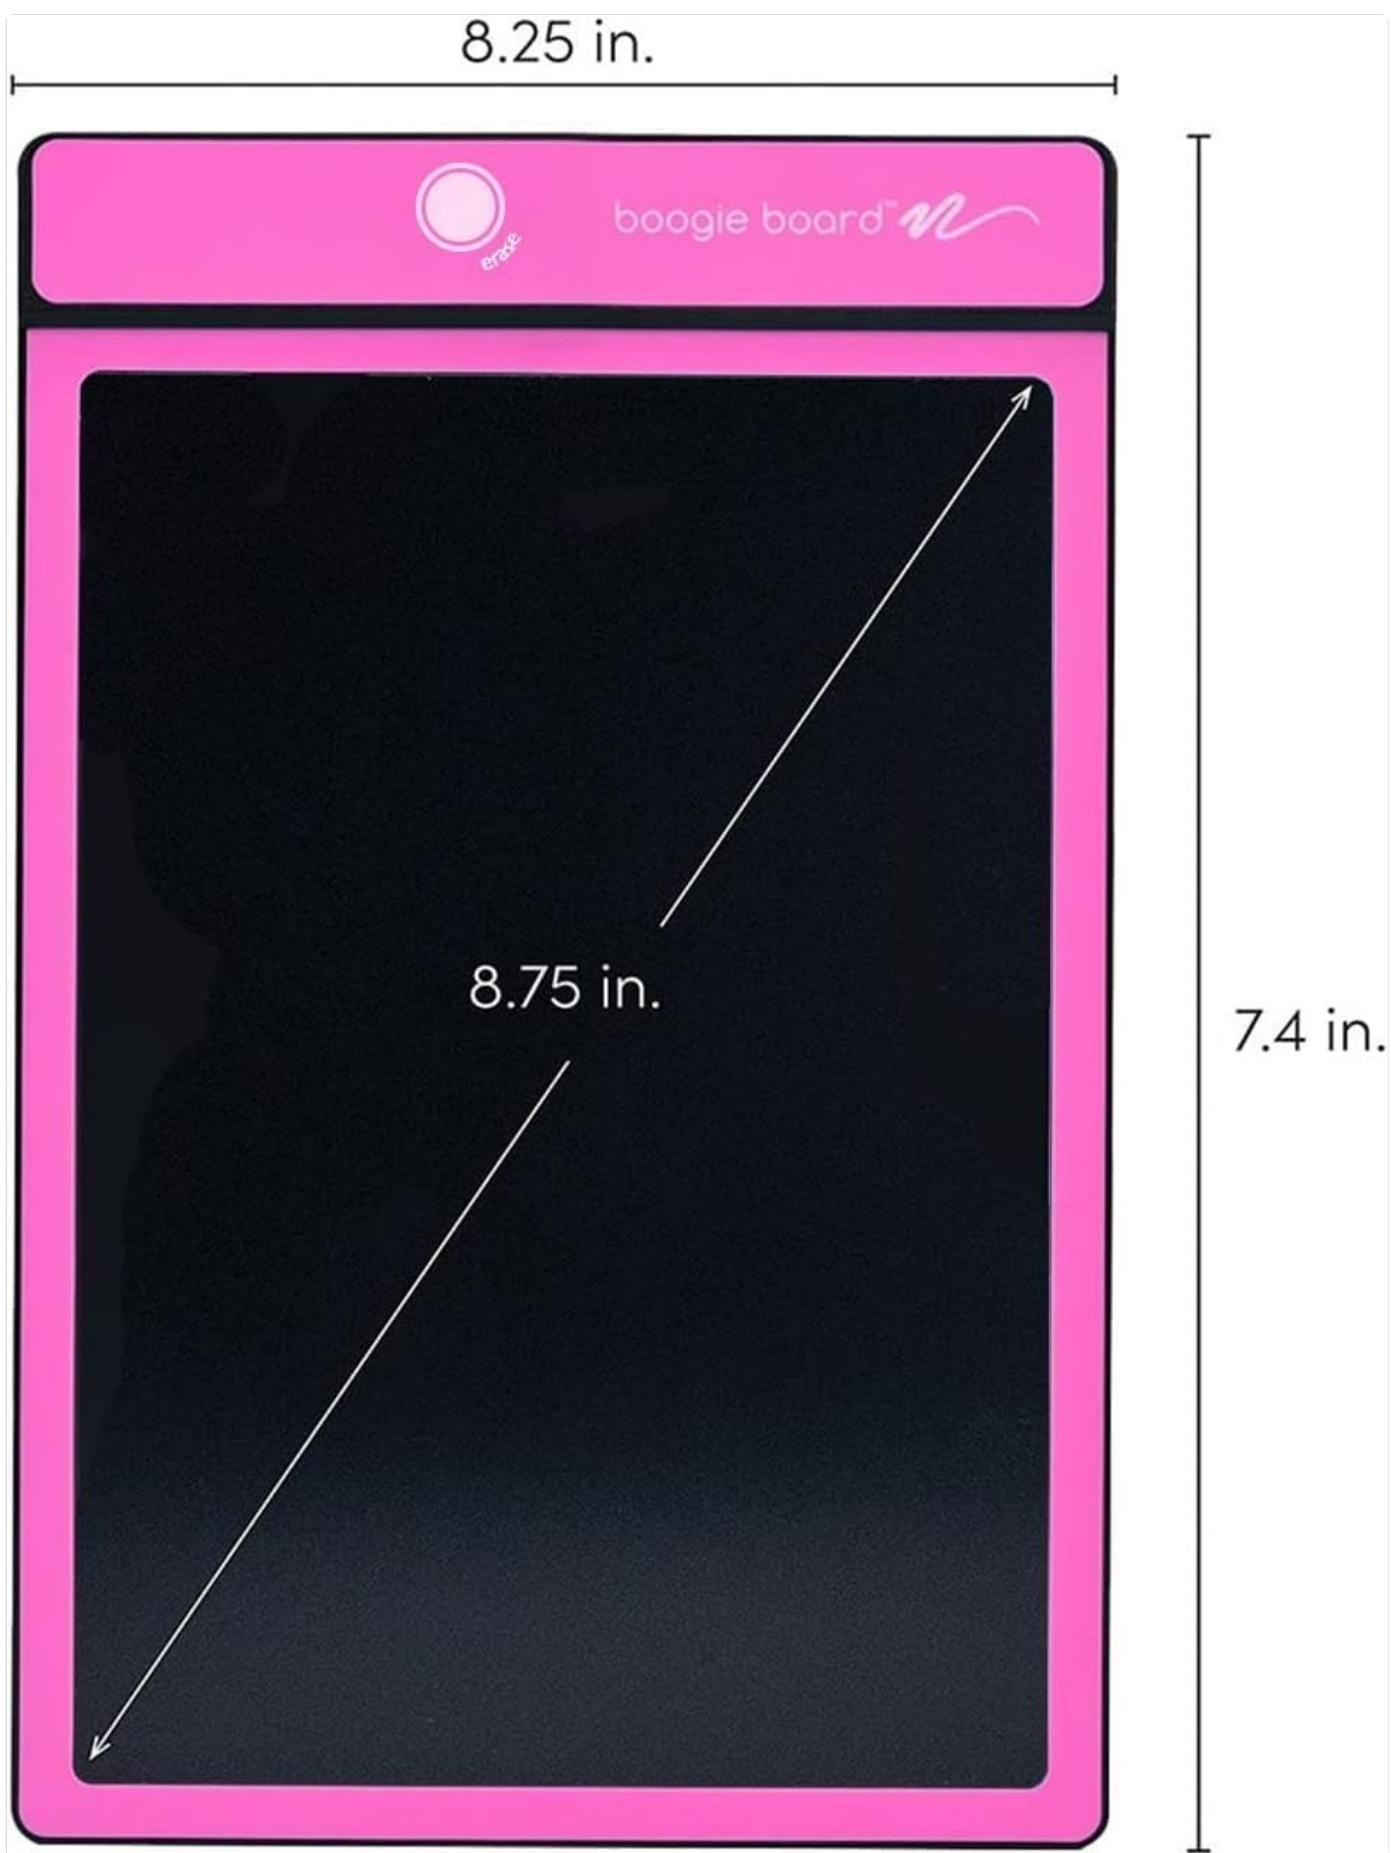


Image: A diagram showing the dimensions of the Boogie Board Basics, indicating a width of 8.25 inches, a height of 7.4 inches, and a diagonal screen size of 8.75 inches.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Boogie Board website or contact their customer service directly. The product's buybox winner information indicates a 30-day refund/replacement policy through Amazon.

Official Boogie Board Store: [Visit Store](#)

User Guide (PDF): [Download PDF](#)

© 2025 Boogie Board. All rights reserved. Information subject to change without notice.