

## Fisher-Price Y8184

# Fisher-Price Toddler's Rocker Model Y8184 Instruction Manual

Your guide to safe and proper use of the Fisher-Price Toddler's Rocker.

## INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Fisher-Price Toddler's Rocker, Model Y8184. Please read all instructions carefully before using the product and retain this manual for future reference. This product is designed to provide a comfortable and secure resting and playing space for infants and toddlers, converting from an infant seat with a toy bar to a stationary toddler chair.

## IMPORTANT SAFETY INFORMATION

**WARNING:** Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system. Adjust to fit snugly.
- Do not use this product if it is damaged or broken.
- Do not use this product for a child who can sit up unassisted or weighs more than 18 kg (40 lbs).
- Never use this product on an elevated surface (e.g., a table).
- Always place the product on a flat, level surface.
- Do not move or lift the product with the child in it.
- Strings can cause strangulation. Do not place items with a string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a product or attach strings to toys.
- This product is not intended for prolonged periods of sleep. If a child falls asleep, they should be moved to a suitable sleeping surface.

## PACKAGE CONTENTS

Carefully unpack all components and verify that you have received all items listed below. If any parts are missing or damaged, do not use the product and contact customer service.

- Fisher-Price Toddler's Rocker Frame (pre-assembled)
- Fabric Seat Pad
- Removable Toy Bar with hanging toys
- 3 LR44 Batteries (pre-installed or included separately for vibration unit)



**Figure 1:** Main view of the Fisher-Price Toddler's Rocker, showing the frame, seat pad, and toy bar.

## SETUP

---

The Fisher-Price Toddler's Rocker Model Y8184 requires minimal assembly. It is designed to be easily converted between an infant seat and a toddler rocker.

### 1. Initial Setup (Infant Seat Mode)

1. Place the rocker on a flat, stable surface.

2. Ensure the kickstand is folded back for rocking motion, or extended for stationary use. Refer to Figure 2.
3. Attach the fabric seat pad securely to the frame according to the instructions on the fabric loops and frame hooks.
4. Insert the 3 LR44 batteries into the vibration unit located at the front of the rocker, if not already installed. Ensure correct polarity.
5. Attach the removable toy bar by aligning its posts with the designated slots on the rocker frame and pressing down until it clicks into place.



**Figure 2:** Side view illustrating the rocker frame and the adjustable kickstand for stationary or rocking modes.

## 2. Converting to Toddler Rocker/Chair Mode

To convert the infant seat to a toddler rocker or stationary chair:

1. Remove the toy bar by pressing the release buttons on each side and lifting it off.
2. Adjust the seat recline position to a more upright angle suitable for a toddler. Locate the recline adjustment mechanism (typically levers or buttons on the side of the frame) and follow the indicators for the toddler position.



3. Ensure the kickstand is extended for stationary use as a toddler chair, or folded back for rocking motion.



**Figure 3:** A toddler comfortably seated in the rocker, demonstrating its use as a stationary chair.

### 1. Infant Seat Mode

- Place your infant in the seat and secure them with the three-point harness. Ensure the harness is snug but not too tight.
- The toy bar provides entertainment. Infants can bat at the hanging toys.
- To activate vibrations, press the power button on the vibration unit. Press again to turn off.



**Figure 4:** An infant engaging with the colorful hanging toys on the removable toy bar.

### 2. Toddler Rocker/Chair Mode

- Once converted, the rocker can be used as a comfortable seat for toddlers up to 18 kg (40 lbs).
- The harness can still be used for younger toddlers for added security, or tucked away for older children.
- Ensure the kickstand is in the desired position (rocking or stationary) before the child uses the chair.





Figure 5: A parent feeding an infant in the rocker, demonstrating its utility during meal times.

## MAINTENANCE

### Cleaning Instructions

- **Fabric Seat Pad:** The fabric seat pad is removable and machine washable. Use cold water on a gentle cycle. Do not bleach. Tumble dry on low heat or air dry.
- **Frame and Toys:** Wipe the frame, plastic components, and toys with a damp cloth and mild soap. Rinse thoroughly and air dry. Do not immerse the vibration unit in water.
- **Batteries:** Remove batteries from the vibration unit if the product is not used for an extended period.

### TROUBLESHOOTING

| Problem                | Possible Cause   | Solution  |
|------------------------|--|---|
| Vibrations not working | <ul style="list-style-type: none"><li>◦ Batteries are dead or incorrectly installed.</li><li>◦ Vibration unit is damaged.</li></ul>          | <ul style="list-style-type: none"><li>◦ Replace batteries with new LR44 batteries, ensuring correct polarity.</li><li>◦ Contact Fisher-Price customer service.</li></ul>                            |
| Rocker feels unstable  | <ul style="list-style-type: none"><li>◦ Product not on a flat, level surface.</li><li>◦ Kickstand not properly engaged/disengaged.</li></ul> | <ul style="list-style-type: none"><li>◦ Move the rocker to a flat, stable surface.</li><li>◦ Ensure the kickstand is fully extended for stationary mode or fully folded for rocking mode.</li></ul> |

| Problem                          | Possible Cause   | Solution  |
|----------------------------------|--|---|
| Toy bar does not attach securely | <ul style="list-style-type: none"> <li>◦ Posts not aligned with slots.</li> <li>◦ Obstruction in slots.</li> </ul> | <ul style="list-style-type: none"> <li>◦ Re-align the toy bar posts with the designated slots and press firmly until a click is heard.</li> <li>◦ Check slots for any debris and clear if necessary.</li> </ul> |

## SPECIFICATIONS



- **Model Number:** Y8184
- **Brand:** Fisher-Price
- **Material:** Plastic
- **Item Weight:** 3.4 Kilograms
- **Item Dimensions (L x W x H):** 54 x 9 x 39 centimeters
- **Maximum Weight Capacity:** 18 kg (40 lbs)
- **Batteries Required:** 3 x LR44 (included)
- **UPC:** 746775248710

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included with your product or visit the official Fisher-Price website. You may also contact Fisher-Price customer service directly for assistance with product inquiries, missing parts, or troubleshooting beyond this manual.

**Fisher-Price Official Website:** [www.fisher-price.com](http://www.fisher-price.com)

## Related Documents - Y8184

|   |   |
|---|---|
|  | <p><a href="#">Fisher-Price M5598 Calming Vibrations Baby Bouncer User Manual</a></p> <p>Comprehensive guide for the Fisher-Price M5598 Calming Vibrations baby bouncer, covering assembly, safety warnings, battery installation, usage, and care instructions.</p>  |
|  | <p><a href="#">Fisher-Price JKW50 Baby Seat Owner's Manual</a></p> <p>Comprehensive owner's manual for the Fisher-Price JKW50 baby seat. Includes detailed assembly instructions, important safety warnings regarding fall and drowning hazards, usage guidelines, care and maintenance tips, and manufacturer contact information.</p> |

