

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fossil](#) /
- › [Fossil Analog Multi-Color Dial Men's Watch-FS4788 User Manual](#)

Fossil FS4788

Fossil Analog Multi-Color Dial Men's Watch - FS4788 User Manual

Model: FS4788

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Fossil Analog Multi-Color Dial Men's Watch, model FS4788. Please read this manual carefully to ensure proper use and longevity of your timepiece.



Figure 1: Front view of the Fossil FS4788 watch, showcasing its multi-color dial, chronograph sub-dials, and brown leather strap.

SETUP

Unboxing and Initial Inspection

Upon receiving your Fossil FS4788 watch, carefully remove it from its packaging. Inspect the watch for any visible damage or defects. Ensure all protective films are removed from the crystal and case back.



Actual watch tin design may vary

Figure 2: Example of Fossil watch packaging tins. Your watch will arrive in a similar protective tin.

Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch case) to position 2 for setting the date, or position 3 for setting the time. Refer to Figure 3 for crown location.
2. **Set the date (if applicable):** If your watch has a date display, rotate the crown in position 2 until the correct date is shown.
3. **Set the time:** Rotate the crown in position 3 to move the hour and minute hands. Ensure you set the correct AM/PM time, as this affects the date change.
4. **Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch movement.



Figure 3: Side view of the Fossil FS4788 watch, highlighting the crown and pushers used for setting time and operating the chronograph.

OPERATING THE CHRONOGRAPH

Your Fossil FS4788 watch features a chronograph function, allowing you to measure elapsed time. The chronograph is operated using the two pushers located above and below the crown.



Figure 4: Close-up of the Fossil FS4788 watch dial, showing the main time display and the three chronograph sub-dials.

Chronograph Functions:

- **Start/Stop:** Press the top pusher (A) to start the chronograph. Press it again to stop the chronograph.
- **Reset:** While the chronograph is stopped, press the bottom pusher (B) to reset all chronograph hands back to their zero positions.
- **Sub-dials:** The three sub-dials typically measure seconds, minutes, and hours of elapsed time. Refer to the specific markings on your dial for precise readings.

Note: The large second hand on the main dial is usually for the chronograph function, while a smaller sub-dial often indicates the running seconds for the main timekeeping.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and crystal with a soft, dry, lint-free cloth. For the leather strap, avoid prolonged exposure to water, direct sunlight, and harsh chemicals, as these can cause damage or discoloration.

Battery Replacement

Your Fossil FS4788 watch is powered by a Lithium Metal battery. When the watch stops running, it indicates that the battery needs replacement. It is recommended to have the battery replaced by an authorized Fossil service center or a qualified watchmaker to ensure proper sealing and functionality.

Water Resistance

While your watch may offer some level of water resistance, it is important to check the specific water resistance rating engraved on the case back. Avoid operating the crown or pushers when the watch is wet to prevent water ingress. Leather straps are generally not designed for water immersion.



Figure 5: Back view of the Fossil FS4788 watch, showing the case back where water resistance information may be engraved.

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Time is inaccurate:** Ensure the crown is fully pushed in. If the time continues to be inaccurate, the watch may require servicing.
- **Chronograph hands not resetting to zero:** This may require a chronograph hand alignment procedure, which can often be done by pulling the crown to a specific position and using the pushers to adjust the hands. Refer to a detailed watch manual or consult a watchmaker if this issue persists.
- **Condensation under crystal:** This indicates moisture ingress. Immediately take the watch to a qualified watchmaker for inspection and repair to prevent further damage.

SPECIFICATIONS

Feature	Detail
Brand	Fossil
Model Number	FS4788
Watch Movement Type	Quartz
Case Diameter	45 Millimetres
Case Thickness	11 Millimetres
Band Material Type	Strap (Leather)
Band Colour	Red (as per data, though images show brown) - <i>Note: Actual band color may vary based on specific product variant. Images show brown.</i>
Item Weight	249 g (0.55 Pounds)
Batteries	1 Lithium Metal battery (included)
Special Feature	Chronograph
Manufacturer	FOSSIL INDIA PVT LTD
Date First Available	25 February 2013

Note: Specifications are subject to change without notice. Please refer to the product packaging for the most accurate and up-to-date information.

WARRANTY AND SUPPORT

Fossil watches typically come with a limited warranty covering manufacturing defects. For detailed warranty terms and conditions, please refer to the warranty booklet included with your purchase or visit the official Fossil website. For product support, service, or repair inquiries, please contact Fossil customer service or an authorized service center.

You can find more information and contact details on the official Fossil website: www.fossil.com

