

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Graco](#) /
- › [Graco TableFit High Chair Instruction Manual](#)

Graco TableFit High Chair

Graco TableFit High Chair Instruction Manual

Model: TableFit High Chair

INTRODUCTION

The Graco TableFit High Chair is designed to bring your child closer to the family table, fostering positive mealtime experiences from an early age. Its unique design allows for seamless integration with various table heights, providing easy access for feeding and interaction. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your high chair.

SAFETY INFORMATION

- Always secure your child in the harness. Never leave your child unattended in the high chair.
- Ensure the high chair is fully assembled and all locking mechanisms are engaged before use.
- Do not use the high chair if any parts are broken, torn, or missing.
- The maximum weight recommendation for this high chair is 40 pounds.
- Keep children away from the high chair during assembly and adjustment.
- Avoid placing the high chair near open flames, heaters, or other heat sources.
- Do not use the high chair on uneven surfaces.

PARTS LIST

Please ensure all parts are present before beginning assembly:

- High Chair Frame (with integrated wheels)
- Seat Unit with Infant Body Support and Harness
- Main Tray
- Dishwasher-Safe Tray Insert (Snack Tray)
- Adjustable Footrest

SETUP

The Graco TableFit High Chair is designed for minimal assembly. Follow these steps for initial setup:

1. **Unfold the Frame:** Carefully unfold the high chair frame until it locks securely into the upright position. Ensure all legs are fully extended and stable.
2. **Attach the Seat Unit:** Align the seat unit with the frame's attachment points and press down firmly until it clicks into place. Verify it is securely fastened.
3. **Attach the Main Tray:** Slide the main tray onto the armrests until it clicks into position. Ensure both sides are locked.
4. **Insert the Snack Tray:** Place the dishwasher-safe tray insert onto the main tray.



Image: Graco TableFit High Chair with key features labeled for easy identification.

OPERATING INSTRUCTIONS

Familiarize yourself with the adjustable features of your high chair:

- **Adjusting Height:** The high chair offers 8 height positions. Locate the height adjustment buttons on the side of the frame. Press these buttons simultaneously and slide the seat unit up or down to your desired height. Release the buttons to lock the position. This feature allows the high chair to slide right up to your table for a perfect fit.

- **Adjusting Recline:** The seat has 3 recline levels. Locate the recline adjustment lever on the back of the seat. Squeeze the lever and adjust the seat to one of the three recline positions. Release the lever to lock. This is ideal for infants and comfortable feeding.
- **Using the Harness:** The high chair features a convertible 3-point or 5-point harness. To secure your child, place them in the seat and fasten the shoulder straps and waist straps into the buckle. Adjust the straps for a snug fit. The one-hand harness adjustment allows you to easily adjust the harness as your child grows without rethreading.
- **Removing/Attaching Trays:** The main tray is one-hand removable. Locate the release lever under the front edge of the tray. Press the lever and slide the tray off. The dishwasher-safe tray insert (snack tray) can be lifted directly off the main tray for easy cleaning.
- **Adjusting Footrest:** The footrest is adjustable to provide comfort for your growing child. Locate the adjustment buttons or levers on the sides of the footrest and move it to the appropriate position.
- **Folding for Storage:** To fold the high chair for compact storage, locate the folding mechanisms on the frame (often near the legs). Follow the instructions to collapse the frame.

8 height adjustments and 3 recline positions help keep baby comfortable



Image: The Graco TableFit High Chair allows your baby to join family meals directly at the table.

Convertible harness easily adjusts as baby grows



Image: The high chair features 8 height adjustments and 3 recline positions for baby's comfort.

Conveniently folds for easy storage



Image: The high chair conveniently folds for easy storage when not in use.

Video: Official product video demonstrating the Graco TableFit High Chair's features, including height adjustment, recline, and tray removal.

MAINTENANCE

Regular cleaning ensures hygiene and extends the life of your high chair:

- **Seat Pad:** The seat pad is wipeable and machine-washable. Machine wash separately in cold water on a delicate cycle. Do not use bleach. Drip dry.
- **Tray Insert:** The pull-out tray insert is dishwasher-safe.
- **Main Tray, Footrest, and Frame:** Use only household soap and warm water to clean these components. Wipe thoroughly with a damp cloth.

TROUBLESHOOTING

Problem	Solution
Tray is difficult to remove or attach.	Ensure the release lever is fully pressed. Check for any food debris or obstructions in the tray tracks. Apply gentle, even pressure when sliding the tray.
Harness is too tight or too loose.	Use the one-hand harness adjustment mechanism to loosen or tighten the straps. Ensure the harness is snug but not restrictive.
High chair feels unstable.	Verify that the frame is fully unfolded and all locking mechanisms are engaged. Ensure the high chair is placed on a flat, level surface.

SPECIFICATIONS

- **Brand:** Graco
- **Model:** TableFit High Chair
- **Material Type:** Metal
- **Color:** Black/White
- **Item Weight:** 19 Pounds
- **Maximum Weight Recommendation:** 40 Pounds
- **Item Dimensions (D x W x H):** 22.5"D x 33.25"W x 43"H
- **Assembly Required:** No (minimal setup)
- **Portable:** Yes



Image: Dimensions of the Graco TableFit High Chair.

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please visit the official Graco website or contact their customer service department. Keep your purchase receipt for proof of purchase.

