

Hotpoint C00090740

Hotpoint Cooker Hood Charcoal Carbon Filter C00090740 Installation and Maintenance Guide

Model: C00090740

INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of your Hotpoint Cooker Hood Charcoal Carbon Filter, model C00090740. This genuine spare part is designed to absorb cooking odors and grease particles, ensuring a cleaner and fresher kitchen environment. Please read these instructions carefully before proceeding with installation or maintenance.

COMPATIBILITY

The Hotpoint Charcoal Carbon Filter C00090740 is compatible with select models of cooker hoods from the following brands:

- Creda
- GDA
- Homark
- Hotpoint

Always verify the compatibility with your specific cooker hood model by consulting your appliance's original manual or the manufacturer's specifications.

SAFETY INFORMATION

- **Always disconnect the cooker hood from the main power supply** before attempting any installation, removal, or maintenance procedures.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Handle the filter carefully to avoid damage.
- Keep packaging materials away from children.
- If you are unsure about any step, consult a qualified technician.

INSTALLATION INSTRUCTIONS

Follow these general steps to install or replace the charcoal carbon filter. Specific steps may vary slightly depending on your cooker hood model. Refer to your cooker hood's instruction manual for detailed, model-specific guidance.

1. **Disconnect Power:** Ensure the cooker hood is completely disconnected from the electrical supply at the mains.
2. **Access Filters:** Open the cooker hood's filter housing. This usually involves releasing clips or latches to lower the metal grease filters.
3. **Remove Old Filter (if applicable):** If replacing an existing filter, carefully remove the old charcoal carbon filter. Note its orientation for correct installation of the new filter.
4. **Install New Filter:** Position the new Hotpoint C00090740 charcoal carbon filter into the designated slot or housing. Ensure it is securely seated and correctly oriented according to your cooker hood's design. The filter typically twists or clips into place over the motor housing.
5. **Reinstall Grease Filters:** Close and secure the metal grease filters.
6. **Reconnect Power:** Reconnect the cooker hood to the main power supply.
7. **Test:** Turn on the cooker hood to ensure it operates correctly and quietly.

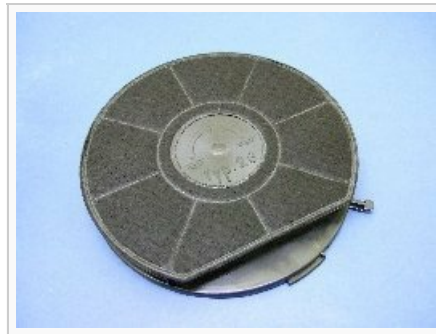


Image: Hotpoint C00090740 Charcoal Carbon Filter. This image shows the circular charcoal carbon filter, typically installed within a cooker hood to absorb odors.

OPERATION

The charcoal carbon filter operates passively as part of your cooker hood's recirculation system. When the cooker hood is turned on, air containing cooking odors and grease particles is drawn through the filter. The activated carbon within the filter traps these impurities, releasing cleaner air back into the kitchen. There are no active controls for the filter itself; its function is integrated with the cooker hood's operation.

MAINTENANCE

To maintain optimal performance and ensure effective odor absorption, the charcoal carbon filter requires regular replacement. Unlike metal grease filters, carbon filters are not washable and must be replaced when saturated.

- **Replacement Frequency:** It is generally recommended to replace the charcoal carbon filter every 3 to 6 months, depending on the frequency and intensity of cooking. Heavy cooking or frying may necessitate more frequent replacement.
- **Signs of Saturation:** Indicators that the filter needs replacement include a noticeable decrease in odor absorption efficiency and persistent cooking smells in the kitchen even when the hood is operating.
- **Replacement Procedure:** Follow the "Installation Instructions" section above to replace the old filter with a new one.

TROUBLESHOOTING

If you experience issues with your cooker hood's odor filtration, consider the following:

• **Persistent Odors:**

- Ensure the charcoal carbon filter is correctly installed and securely seated.
- Check the age of the filter. If it has been in use for more than 3-6 months, it is likely saturated and requires replacement.
- Verify that the cooker hood's fan is operating at an appropriate speed for the cooking task.

• **Reduced Airflow:**

- While carbon filters primarily affect odor, a heavily saturated filter can slightly impede airflow. Ensure the filter is not excessively clogged.
- Check the metal grease filters for cleanliness; clogged grease filters are a more common cause of reduced airflow.

If problems persist after checking these points, consult your cooker hood's main instruction manual or contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Hotpoint
Model Number	C00090740
Material Type	Activated Carbon
Compatible Devices	Cooker Hoods (Creda, GDA, Homark, Hotpoint)
Part Number	C00090740

WARRANTY INFORMATION

This genuine Hotpoint spare part is covered by the manufacturer's standard warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation provided with your original cooker hood appliance or visit the official Hotpoint website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to purchase additional genuine spare parts, please contact Hotpoint customer service or visit their official website. When contacting support, please have your cooker hood model number and the filter part number (C00090740) available.

Hotpoint Official Website: www.hotpoint.co.uk (or your regional Hotpoint website)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question