

Nikon S2600

Nikon Coolpix S2600 Digital Camera User Manual

Model: S2600

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Nikon Coolpix S2600 Digital Camera. Please read this manual thoroughly before using the camera to ensure proper operation and to maximize its performance. Keep this manual in a safe place for future reference.



Image: Front view of the Nikon Coolpix S2600 Digital Camera in black, showing the lens, flash, and brand logo.

SETUP

Getting Started

Before using your camera, ensure all necessary components are present and properly installed.

Unpacking

Verify that the following items are included in your camera package:

- Nikon Coolpix S2600 Digital Camera Body
- Rechargeable Li-ion Battery
- AC Adapter/Charging Cable
- USB Cable
- Camera Strap
- User Manual (this document)

Charging the Battery

1. Insert the rechargeable Li-ion battery into the camera.
2. Connect the camera to the AC adapter using the supplied USB cable.
3. Plug the AC adapter into a power outlet. The charging indicator will illuminate.
4. Charging is complete when the indicator light turns off. A full charge typically takes approximately 2 hours.

Inserting a Memory Card (Sold Separately)

The camera supports SD, SDHC, and SDXC memory cards. Ensure the camera is turned off before inserting or removing a memory card.

1. Open the battery/card compartment cover on the bottom of the camera.
2. Insert the memory card into the slot with the label facing the front of the camera until it clicks into place.
3. Close the compartment cover securely.

Attaching the Camera Strap

Thread the camera strap through the strap eyelet on the side of the camera and secure it as shown in the strap instructions provided with the camera.

OPERATING THE CAMERA

Basic Functions

Turning the Camera On/Off

- To turn on: Press the **Power** button located on the top of the camera.
- To turn off: Press the **Power** button again. The lens will retract.

Taking Photos

1. Turn on the camera.
2. Frame your shot using the LCD monitor.
3. Press the **Shutter-release** button halfway down to focus. The focus area will turn green when focus is achieved.
4. Press the **Shutter-release** button all the way down to take the picture.

Recording Videos

The Nikon Coolpix S2600 supports 720p video recording.

1. Turn on the camera.
2. Press the **Movie-record** button (usually marked with a red dot) to start recording.
3. Press the **Movie-record** button again to stop recording.

Playback Mode

To view your photos and videos:

- Press the **Playback** button (usually marked with a triangle icon).
- Use the multi-selector (directional pad) to navigate through your images and videos.
- Press the **OK** button to view a video or zoom into a photo.

Flash Modes

The camera features a built-in flash with automatic modes.

- **Auto Flash:** The camera automatically determines when to fire the flash based on lighting conditions.
- Consult the on-screen menu for other flash options if available.

Shooting Modes

The camera offers various shooting modes to optimize settings for different scenes:

- **Portrait:** Ideal for capturing people with soft backgrounds.
- **Landscape:** Enhances colors and sharpness for scenic views.
- **Sports:** Uses a faster shutter speed to freeze action.
- **Night:** Optimized for low-light conditions.
- **Manual:** Allows for greater control over exposure settings.

MAINTENANCE

Care and Cleaning

Cleaning the Camera Body and Lens

- Use a soft, dry cloth to clean the camera body. Do not use alcohol, thinner, or other volatile chemicals.
- For the lens, use a lens brush to remove dust, then gently wipe with a lens cleaning cloth. Avoid touching the lens surface with your fingers.

Battery Care

- Charge the battery fully before first use.
- Store the battery in a cool, dry place when not in use.
- Do not expose the battery to extreme temperatures or direct sunlight.
- If the camera will not be used for an extended period, remove the battery.

Storage

When storing the camera for long periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
---------	----------

Problem	Solution
Camera does not turn on.	Ensure the battery is fully charged and correctly inserted. Try charging the battery again.
Images are blurry.	Check if the lens is clean. Ensure the camera has focused before pressing the shutter button fully. Use sufficient lighting or flash.
Flash does not fire.	Check if the flash mode is set to Auto or Fill-flash. Ensure the subject is within flash range.
Memory card error.	Ensure the memory card is inserted correctly. Try formatting the card (this will erase all data). Use a compatible memory card.
Camera freezes or becomes unresponsive.	Remove the battery, wait a few seconds, and reinsert it. If the problem persists, contact customer support.

TECHNICAL SPECIFICATIONS

Key specifications for the Nikon Coolpix S2600 Digital Camera:

Feature	Detail
Model Name	S2600
Brand	Nikon
Photo Sensor Technology	CCD
Total Still Resolution	16 MP
Image Stabilization	Digital
Optical Zoom	5x Wide Optical Zoom
Video Resolution	720p
Display Type	LCD
Supported File Format	JPEG (Images), MP4 (Video)
Battery Type	Lithium Ion
Color	Black
Item Weight	4 Pounds
UPC	018208263233

WARRANTY AND SUPPORT

Warranty Information

Please note that this Nikon Coolpix S2600 Digital Camera is an import model and comes with **No US Warranty**. Any warranty claims or service requests should be directed to the original point of purchase or the regional distributor from which the camera was imported.

Customer Support

For additional support, product information, or to find service centers outside the US, please visit the official Nikon website:

[Nikon Official Website](#)

© 2024 Nikon Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question