

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VCM](#) /

> [VCM 30053 CD/DVD Storage Cabinet Instruction Manual](#)

VCM 30053

VCM 30053 CD/DVD Storage Cabinet Instruction Manual

Model: 30053 | Brand: VCM

1. INTRODUCTION

Thank you for choosing the VCM 30053 CD/DVD Storage Cabinet. This cabinet is designed to provide an organized and secure storage solution for your media collection. It features four safety glass doors and twelve adjustable shelves, offering versatile storage for up to 300 CDs or 130 DVDs. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.



Image 1.1: The VCM 30053 CD/DVD Storage Cabinet, fully assembled and stocked with media.

2. SAFETY INFORMATION

Always prioritize safety during assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Wall Anchoring:** It is highly recommended to anchor the cabinet to a wall to prevent tipping, especially in households with children or pets. Wall anchoring hardware may be included or sold separately.
- **Glass Handling:** The cabinet includes safety glass doors. Handle glass components with care to avoid breakage and injury. Wear protective gloves if necessary.

- **Weight Distribution:** Distribute the weight of your media evenly across the shelves. Avoid placing heavy items on the top of the cabinet.
- **Level Surface:** Ensure the cabinet is placed on a flat, level, and stable surface to prevent wobbling and instability.
- **Assembly:** Follow the provided assembly instructions precisely. Do not skip steps or use unauthorized parts.
- **Ventilation:** Do not block any ventilation openings if the cabinet is used near electronic devices.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Cabinet panels (side panels, top, bottom, back panel)
- 4 x Safety glass doors
- 12 x Adjustable shelves
- Mounting hardware (screws, dowels, hinges, shelf pins, wall anchors)
- Assembly instructions

4. SETUP AND ASSEMBLY

Assembly of the VCM 30053 cabinet requires basic tools and careful attention to the included step-by-step guide. It is recommended to have two people for assembly.

4.1 Tools Required (Not Included)

- Phillips head screwdriver
- Hammer
- Measuring tape
- Level
- Drill (for wall anchoring)

4.2 Assembly Steps

1. **Prepare Workspace:** Clear a spacious, clean, and soft area to prevent scratching the cabinet parts during assembly.
2. **Identify Parts:** Lay out all components and hardware. Refer to the parts list in the separate assembly instructions to identify each piece.
3. **Assemble Frame:** Follow the numerical sequence in the provided assembly manual to connect the side panels, top, and bottom panels using the designated hardware. Ensure all connections are secure.
4. **Install Back Panel:** Attach the back panel using the small nails or screws provided. Ensure the cabinet is square before securing the back panel completely.
5. **Insert Shelf Pins:** Place the shelf pins into the desired holes on the inner sides of the cabinet. The shelves are adjustable, allowing for customization of storage space.
6. **Install Shelves:** Carefully place the 12 adjustable shelves onto the installed shelf pins.
7. **Attach Glass Doors:** Mount the hinges to the glass doors and then attach the doors to the cabinet frame. Adjust the hinges as needed to ensure the doors close properly and are aligned.
8. **Wall Anchoring:** For safety, secure the cabinet to a wall using the provided wall anchoring kit. Mark the

drilling points, drill pilot holes, insert wall plugs, and secure the cabinet with screws.

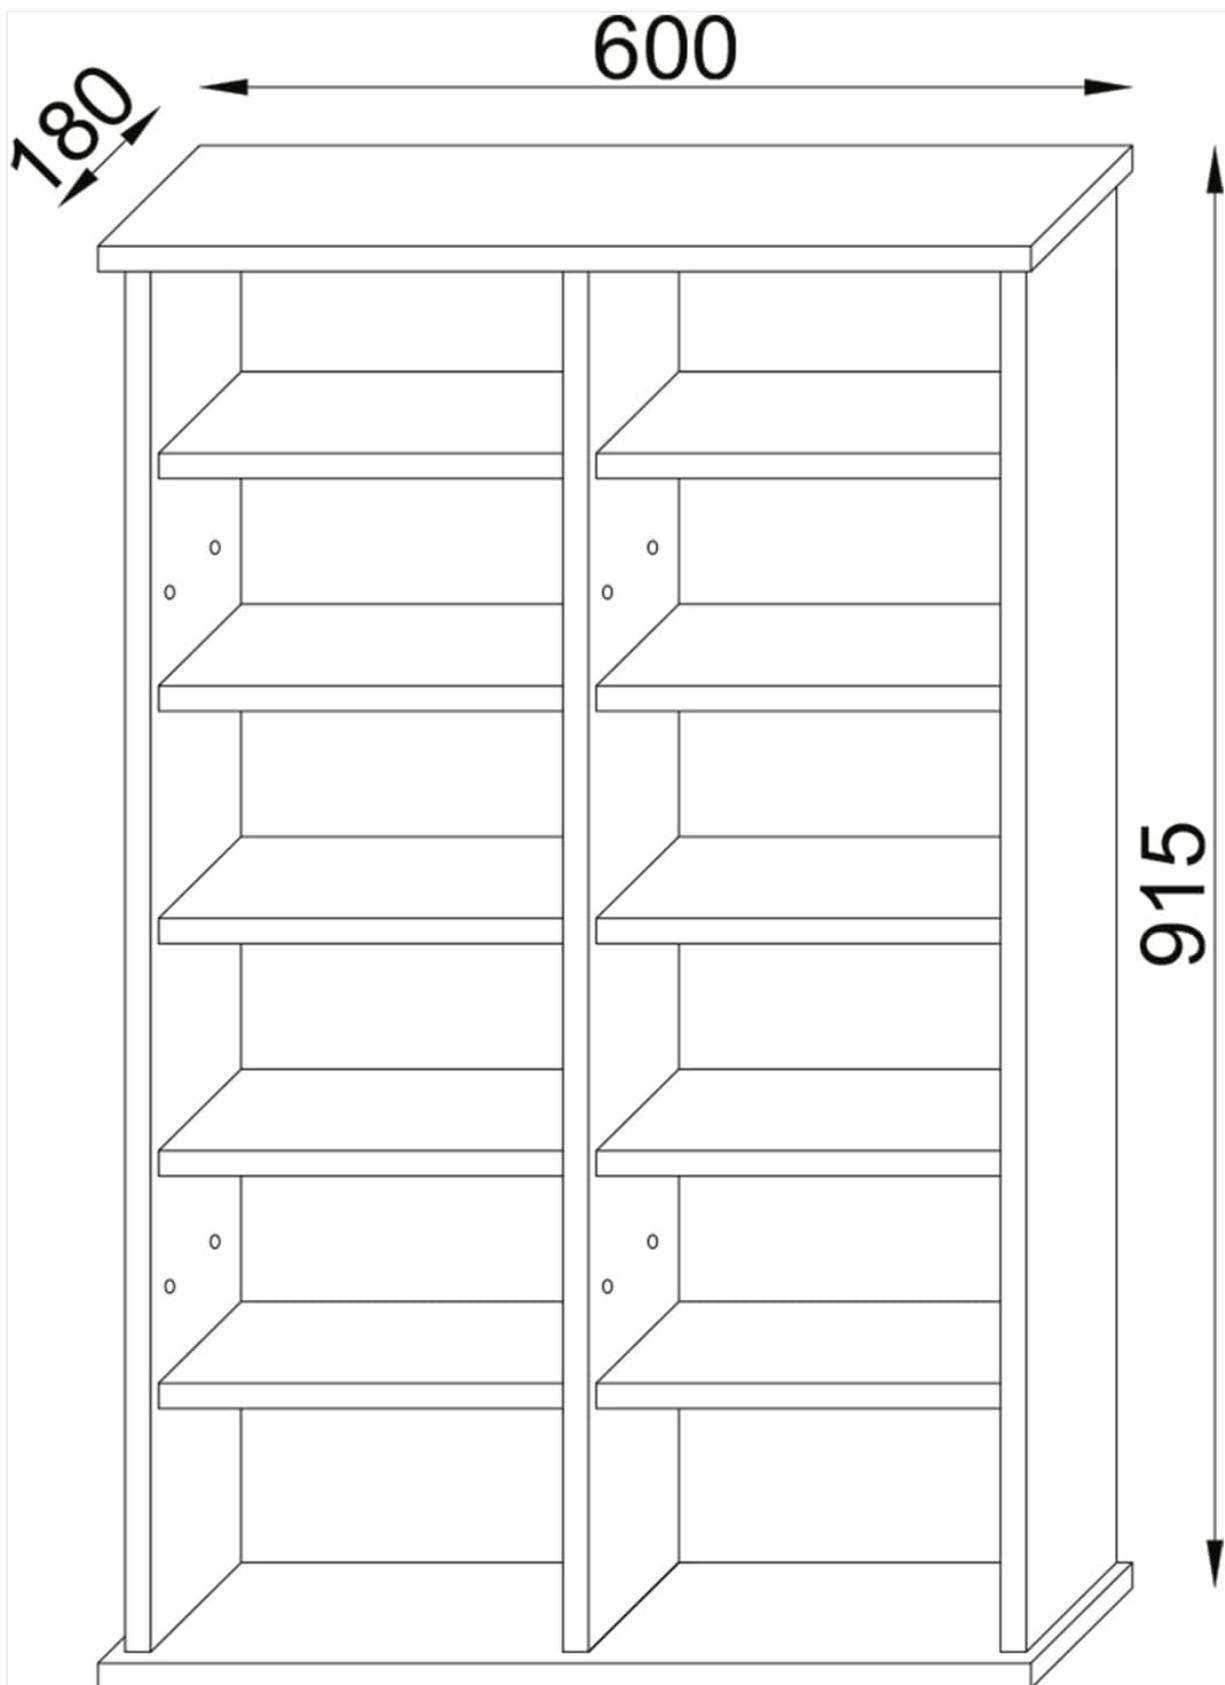


Image 4.1: Dimensional drawing of the VCM 30053 cabinet.

5. OPERATING INSTRUCTIONS (USAGE)

The VCM 30053 cabinet is designed for straightforward use to store your media collection.

5.1 Adjusting Shelves

The cabinet features 12 adjustable shelves. To adjust a shelf:

1. Empty the shelf of all contents.
2. Carefully lift the shelf and remove the shelf pins from their current holes.
3. Re-insert the shelf pins into the desired new holes, ensuring they are level on both sides.
4. Place the shelf back onto the pins, ensuring it is securely seated.

5.2 Storing Media

The cabinet can hold approximately 300 CDs or 130 DVDs. Arrange your media neatly on the shelves. Ensure that the items do not protrude beyond the front edge of the shelves, which could obstruct the closing of the glass doors.



Image 5.1: The VCM 30053 cabinet with empty, adjustable shelves.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your VCM 30053 cabinet.

- **Cleaning Wood Surfaces:** Wipe wood surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish. Dry immediately with a clean cloth.
- **Cleaning Glass Doors:** Use a standard glass cleaner and a soft, lint-free cloth to clean the glass doors. Spray cleaner onto the cloth, not directly onto the glass, to prevent liquid from seeping into the cabinet edges.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Re-tighten if necessary, but do not overtighten.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.
- **Humidity Control:** Maintain a stable room temperature and humidity level to prevent warping or cracking of wood components.

7. TROUBLESHOOTING

If you encounter issues with your VCM 30053 cabinet, refer to the following common problems and solutions:

- **Cabinet is Wobbly:**
 - Ensure the cabinet is on a level surface. Use shims if necessary.
 - Check all assembly screws and tighten them securely.
 - Verify the back panel is properly installed and secured, as it contributes to structural rigidity.
- **Glass Doors Do Not Close Properly or Are Misaligned:**
 - Check the hinge adjustments. Most hinges allow for minor adjustments to align the doors.
 - Ensure no items on the shelves are obstructing the doors.
 - Verify the cabinet frame is square. If not, re-check assembly steps.
- **Shelves Do Not Fit:**
 - Ensure shelf pins are inserted correctly and are level on both sides.
 - Confirm you are using the correct shelves for the designated slots.

8. SPECIFICATIONS

Feature	Detail
Model Number	30053
Dimensions (L x W x H)	91.5 x 60 x 18 cm
Weight	13 kg
Material	Wood, Safety Glass (ESG)
Color/Finish	Natural Beech or Patinated Beech (Wood structure imitation)
Capacity	Approx. 300 CDs or 130 DVDs

Shelves	12, adjustable
Doors	4, safety glass
Assembly Required	Yes
Installation Type	Freestanding (Wall anchoring recommended)

9. WARRANTY AND SUPPORT

The VCM 30053 CD/DVD Storage Cabinet comes with a manufacturer's warranty.

9.1 Manufacturer's Warranty

This product is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper assembly, misuse, accidents, or unauthorized modifications.

9.2 Customer Support

For technical assistance, missing parts, or warranty claims, please contact VCM customer support. Have your model number (30053) and proof of purchase ready when contacting support.

VCM Customer Service:

- **Website:** www.vcm-gruppe.de (Please refer to the website for specific contact methods in your region.)
- **Email:** Refer to the manufacturer's website for current contact email.
- **Phone:** Refer to the manufacturer's website for current contact phone numbers.