

[manuals.plus](#) /› [GPX](#) /› **GPX PD901B Portable DVD Player User Manual**

GPX PD901B

GPX PD901B Portable DVD Player

USER MANUAL

Introduction

Thank you for purchasing the GPX PD901B Portable DVD Player. This device offers a versatile entertainment experience with its 9-inch swivel screen, allowing for flexible viewing angles. Designed for portability, it includes a built-in rechargeable battery and comes with both AC and DC adapters for home and car use. This manual provides essential information for the safe and efficient operation of your portable DVD player.

Important Safety Information

- Read all instructions before operating the device.
- Keep the manual for future reference.
- Do not expose the unit to rain or moisture to prevent fire or shock hazards.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

Package Contents

Please check that all items are present:

- GPX PD901B Portable DVD Player
- Remote Control
- AC Power Adapter
- DC Car Adapter
- Stereo Earbuds
- User Manual (this document)

Product Overview

Familiarize yourself with the components of your GPX PD901B Portable DVD Player.



Image 1: The GPX PD901B Portable DVD Player shown in its open position, displaying a movie on its 9-inch swivel screen. The control panel is visible on the base unit, and the included remote control is positioned to the right.



Image 2: The GPX PD901B Portable DVD Player shown in its closed, compact state. This view highlights the sleek design and portability of the device when not in use, with the screen folded flat against the base.

Main Components:

- **9-inch TFT LCD Swivel Screen:** Provides clear visuals and can rotate for optimal viewing.
- **Control Panel:** Buttons for playback, menu navigation, volume, and power.
- **Disc Tray:** For inserting DVDs and CDs.
- **Built-in Speakers:** For audio playback.
- **Headphone Jack:** For private listening with earbuds.
- **Power Input:** For connecting AC or DC adapters.
- **Remote Control:** For convenient operation from a distance.

Setup

1. Charging the Battery:

Before first use, fully charge the built-in rechargeable battery. Connect the AC power adapter to the DC IN port on the DVD player and then to a standard wall outlet. The charging indicator light will illuminate. Charging typically takes several hours. The light will change or turn off when fully charged.

2. Powering On/Off:

Press and hold the **POWER** button on the unit or remote control to turn the player on or off.

3. Connecting to Power Sources:

- **Home Use:** Use the included AC power adapter. Connect it to the DC IN port and a wall outlet.
- **Car Use:** Use the included DC car adapter. Connect it to the DC IN port and your vehicle's 12V

accessory outlet (cigarette lighter socket).

Operating Instructions

1. Inserting a Disc:

1. Gently open the disc cover.
2. Place the DVD or CD onto the spindle with the label side facing up.
3. Press down gently on the center of the disc until it clicks into place.
4. Close the disc cover securely.

2. Basic Playback:

- After inserting a disc, the player will typically begin playback automatically.
- Use the **PLAY/PAUSE** button to pause or resume playback.
- Press the **STOP** button to stop playback.
- Use the **SKIP** buttons (forward/backward) to navigate between tracks or chapters.
- Adjust volume using the **VOL +/-** buttons on the unit or remote.

3. Using the Swivel Screen:

The 9-inch LCD screen can swivel up to 180 degrees and fold flat against the base. Carefully rotate the screen to your desired viewing angle. When finished, gently fold the screen back into its closed position for compact storage.

4. Private Listening:

Plug the included stereo earbuds into the headphone jack for private audio listening. This will mute the built-in speakers.

5. Remote Control:

The remote control provides full functionality for the DVD player, including power, menu navigation, playback controls, volume, and more. Ensure the remote has working batteries and is pointed towards the player's IR sensor.

Maintenance

Cleaning the Unit:

- Wipe the exterior of the player with a soft, dry cloth.
- For the screen, use a soft, lint-free cloth specifically designed for LCD screens. Do not use abrasive cleaners or solvents.
- Keep the disc tray and lens clean and free of dust. Use a specialized DVD lens cleaner if necessary.

Battery Care:

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the unit for an extended period, charge the battery to approximately 50% and store in a cool, dry

place.

Troubleshooting

If you encounter issues with your GPX PD901B, refer to the following common problems and solutions:

Problem	Possible Solution
Player does not power on.	Ensure the battery is charged or the AC/DC adapter is properly connected. Check power outlet.
Disc does not play.	Check if the disc is inserted correctly (label side up). Ensure the disc is clean and free of scratches. Verify the disc format is supported (DVD±R/RW, CD, CD-R/RW, JPEG-CD).
No sound.	Increase the volume. Check if headphones are plugged in (unplug to use speakers). Ensure disc audio track is selected correctly.
Picture is distorted or no picture.	Adjust the screen angle. Clean the disc. Ensure the disc is not damaged.
Remote control not working.	Check and replace batteries. Ensure there are no obstructions between the remote and the player's IR sensor.

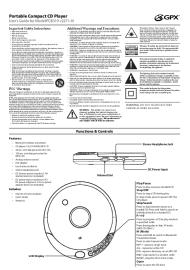
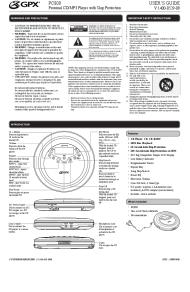
Specifications

- **Model:** PD901B
- **Screen Size:** 9 Inches
- **Display Type:** TFT LCD Swivel Screen
- **Resolution:** 1024 x 600
- **Aspect Ratio:** 16:9
- **Brightness:** 180 nits
- **Contrast Ratio:** 350:1
- **Response Time:** 25 ms
- **Supported Media:** DVD±R/RW, CD, CD-R/RW, JPEG-CD
- **Video System:** NTSC
- **Battery:** Built-in Rechargeable Lithium Ion (3 included)
- **Power Input:** AC 100-240V, DC 12V
- **Product Dimensions:** 10.2 x 3.15 x 1.8 inches
- **Item Weight:** 2.8 pounds
- **Color:** Black

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or visit the official GPX website. You may also contact GPX customer service directly for assistance with your

Related Documents - PD901B

	<p>GPX PCB319 Portable Compact CD Player User's Guide</p> <p>Comprehensive user guide for the GPX PCB319 portable compact CD player. Learn about safety precautions, device features, controls, power options, CD playback, programming, and Bluetooth connectivity.</p>
	<p>GPX Tablet Quickstart Guide: Connecting to Wi-Fi and Playing DVDs</p> <p>A quickstart guide for GPX tablets, covering essential functions like adding/deleting apps, connecting to Wi-Fi, troubleshooting network issues, and playing DVDs. Includes model TBDV1093 v3126-01.</p>
	<p>GPX MWB308 Bluetooth MP3 Player User's Guide</p> <p>Comprehensive user's guide for the GPX MWB308 Bluetooth MP3 Player, detailing features, operation, controls, charging, music management, Bluetooth connectivity, radio functions, recording capabilities, e-book reader, and settings. Includes FCC warnings and additional safety information.</p>
	<p>GPX PC800 Personal CD/MP3 Player User Guide</p> <p>User guide for the GPX PC800 Personal CD/MP3 Player with Skip Protection, detailing features, operation, safety, and troubleshooting.</p>
	<p>GPX PC332B Portable CD Player User Guide</p> <p>Learn how to operate your GPX PC332B Portable CD Player, including turning it on/off, understanding the mode button, and programming tracks for playback.</p>

GPX®



Bluetooth MP3 Player

User's Guide for Model MWB308 v.004.01

[GPX Bluetooth MP3 Player MWB308 User's Guide](#)

User's guide for the GPX Bluetooth MP3 Player Model MWB308. Learn about features, controls, charging, loading music, Bluetooth, FM radio, recording, settings, and troubleshooting.