

BRIO 33592

BRIO World Mighty Red Action Locomotive Instruction Manual

Model: 33592

1. INTRODUCTION

Welcome to the world of BRIO! This instruction manual provides essential information for the safe and optimal use of your new **BRIO World Mighty Red Action Locomotive**, Model 33592. This battery-operated toy train is designed to bring imaginative play to life on your wooden railway tracks, featuring realistic light and sound effects.

The Mighty Red Action Locomotive is a durable and high-quality addition to any BRIO World railway set, crafted from Forest Stewardship Council-certified wood, reflecting a commitment to responsible forestry and sustainability practices. It is designed for seamless integration with existing BRIO railway sets, offering endless possibilities for expanding your child's railway empire.



Figure 1.1: The Mighty Red Action Locomotive, shown both in its packaging and as a standalone unit, ready for play.

2. SAFETY INFORMATION

Your safety and the safety of the user are paramount. Please read and adhere to all safety guidelines before operating the locomotive.

- **Recommended Age:** This product is suitable for children aged 36 months (3 years) to 10 years. Small parts may pose a choking hazard for children under 3 years.
- **Battery Safety:**
 - Requires 2 AAA batteries (included).
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.

- Remove batteries if the product is not used for an extended period.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Do not short-circuit the supply terminals.
- **Supervision:** Adult supervision is recommended during play, especially during battery installation and initial setup.
 - **Cleaning:** Keep the locomotive clean and dry. Refer to the Maintenance section for cleaning instructions.

3. PACKAGE CONTENTS

Upon opening the package, ensure all components are present and undamaged.

- 1 x BRIO World Mighty Red Action Locomotive (Model 33592)
- 2 x AAA Batteries (pre-installed or included separately)



Figure 3.1: The single piece included in the package: the Mighty Red Action Locomotive.

4. SETUP

Follow these steps to prepare your locomotive for its first journey.

4.1 Battery Installation


1. Locate the battery compartment on the underside of the locomotive.
2. Using a small Phillips head screwdriver, carefully unscrew the battery compartment cover.
3. Insert 2 AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

4.2 Initial Placement on Tracks

Place the locomotive firmly on any standard wooden railway track. Ensure all wheels are properly seated on the rails.

Realistic Train Effects!

Top switch for free-wheel movement option during playtime.

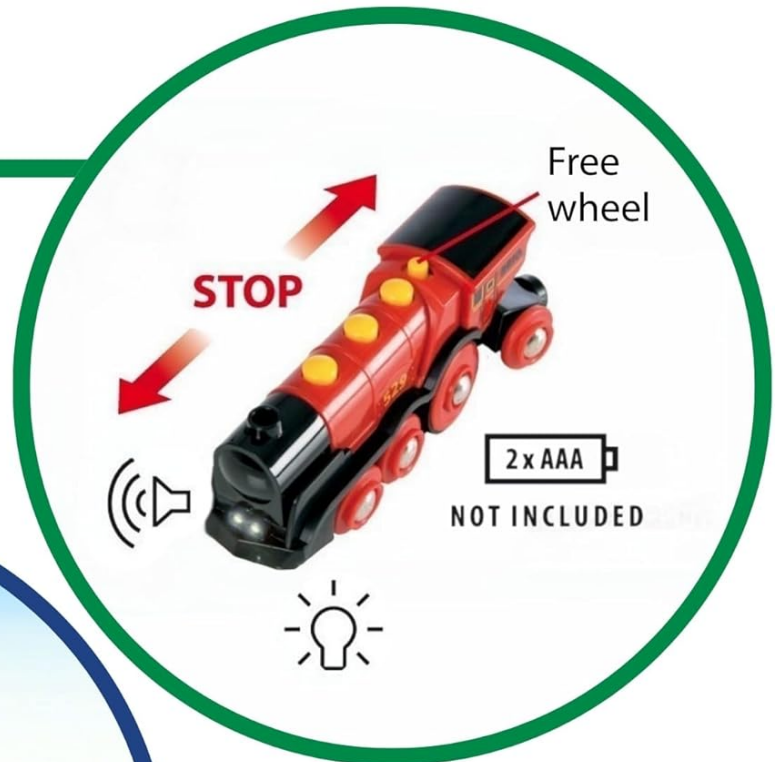

Battery-powered forward & reverse train function, lights, choo-choo sounds, & classic Brio magnetic coupling to other vehicles.

Figure 4.1: Illustration of the locomotive's top switch for free-wheel movement and the battery compartment location.

5. OPERATING INSTRUCTIONS

The Mighty Red Action Locomotive offers versatile play options.

5.1 Control Functions

- **Top Switch:** Located on the top of the locomotive, this switch controls its movement.
 - Move the switch forward for forward motion.
 - Move the switch backward for reverse motion.
 - Set the switch to the middle position to stop the locomotive and enable free-wheel movement. This allows children to push the train manually without damaging the motor.
- **Lights and Sounds:** The locomotive features fully lit front lights and an exciting 'choo-choo' sound effect, which activate automatically when the train is in motion.

5.2 Magnetic Coupling

The locomotive is equipped with classic BRIO magnetic couplings at both ends, allowing it to easily connect with other BRIO railway vehicles and wagons. This enables the creation of longer trains and diverse play scenarios.

5.3 Compatibility

This locomotive is fully compatible with all BRIO World wooden railway sets and accessories, as well as most other standard wooden railway systems.



Expand The Fun As They Grow

This toy train is fully compatible with other BRIO railway toys, so you can expand the tracks, stations, and more!

Figure 5.1: The Mighty Red Action Locomotive seamlessly integrates into extensive BRIO World railway layouts, expanding play possibilities.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your locomotive.

6.1 Cleaning

The locomotive is designed to be easy to clean. Wipe the surface with a damp cloth. Do not immerse the locomotive in water or use harsh cleaning agents, as this may damage the electronic components and wooden parts. Ensure the locomotive is completely dry before storing or re-using.

6.2 Battery Replacement

When the lights dim, sounds weaken, or the train's speed decreases, it is time to replace the batteries. Refer to Section 4.1 for battery installation instructions.

6.3 Storage

Store the locomotive in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

If you encounter any issues with your Mighty Red Action Locomotive, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Locomotive does not move or moves slowly.	Batteries are low or depleted. Batteries are inserted incorrectly. Switch is in the "stop" or free-wheel position. Wheels are obstructed.	Replace with fresh AAA batteries (refer to Section 4.1). Check battery polarity and reinsert correctly. Move the top switch to the forward or reverse position. Check wheels for debris (e.g., hair, lint) and remove any obstructions.
Lights are dim or sounds are weak.	Batteries are low.	Replace with fresh AAA batteries.
Locomotive derails frequently on curves.	Track curves are too sharp for the locomotive's wheelbase. Track pieces are not properly connected.	Ensure tracks are laid with broader curves where possible. Verify all track connections are secure and flat.

8. SPECIFICATIONS

Detailed technical specifications for the BRIO World Mighty Red Action Locomotive.

Model Number	33592
Brand	BRIO
Product Dimensions	5.12 x 1.57 x 1.97 inches (13 x 4 x 5 cm)
Item Weight	6.7 ounces (190 grams)
Recommended Age	36 months - 10 years
Batteries Required	2 x AAA (included)

Material	FSC-certified wood and durable plastic components
Features	Forward/Reverse motion, Lights, 'Choo-choo' sound, Free-wheel option, Magnetic coupling
Release Date	March 26, 2016

9. WARRANTY AND SUPPORT

BRIO products are known for their high quality and durability. While specific warranty details are not provided in this manual, BRIO stands behind its products.

For any questions, concerns, or support regarding your Mighty Red Action Locomotive, please contact BRIO customer service or visit the official BRIO website.

- Official BRIO Store: [Visit the BRIO Store on Amazon](#)
- Additional User Guide (PDF): [Download PDF User Guide](#)



© 2025 BRIO. All rights reserved.
This manual is for informational purposes only and may be subject to change without notice.

Related Documents - 33592

	BRIO Battery-Operated Steaming Train - User Manual and Instructions Comprehensive guide for the BRIO Battery-Operated Steaming Train (model 33884). Learn how to install batteries, operate the train, generate steam, and understand safety precautions. Includes tips for optimal play and maintenance.
	BRIO Remote Control Train - User Manual and Operating Instructions Comprehensive guide for the BRIO Remote Control Train, covering operation, battery installation, safety precautions, and FCC compliance. Learn how to set up and enjoy your BRIO RC train.
	BRIO Battery Metro Engine: Features, Operation & Safety Guide Comprehensive guide to the BRIO Battery Metro Engine, covering its features, how to operate it, battery replacement, and essential safety warnings.
	BRIO Builder Light Set - Enhance Your Construction Play Enhance your BRIO Builder construction play with the Builder Light Set. This set adds dynamic light effects with multiple modes. Learn about product features, care instructions, and safe battery replacement.
	BRIO Action Racer 30234: Battery Operated Toy Car Instructions and Safety Detailed instructions and safety guidelines for the BRIO Action Racer 30234 toy car. Learn about battery installation, operation, care, and important safety warnings for children.
	BRIO Central Train Station - Battery Replacement and Operation Guide Instructions and safety information for the BRIO Central Train Station toy, detailing how to replace batteries and operate its sound features. Includes important warnings and guidelines for safe use.



[pdf] User Manual

BRIO Rote Lola 33592 service ravensburger de @api deki pages 1652 |||

BRIO Rote Lola **33592** Fragen und Antworten zur „Roten Lola **33592** Das wird aufstrebende Lokführer lange beschäftigen. Die Lok hat zwei Vorderlichter und manuelle Tasten fr Volldampf voraus , den Rckwrtsgang und den typischen Choo-Choo -Ton. Schalter auf der Oberseite erlaubt die freie Bewegung des R...

lang:de score:30 filesize: 3.5 M page_count: 6 document date: 0000-00-00




[pdf]

I Karakoleva 33592 1 Локомотив Mighty red loco Brio Igra4ka bg igra4ka media |||

33592 ...

lang:de score:21 filesize: 444.47 K page_count: 1 document date: 2021-05-14

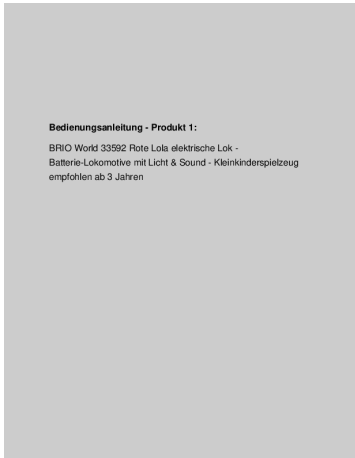

[pdf]

BRIO World 33592 Rote Lola elektrische Lok Batterie LokomotiveProdukt 1 Lokomotive mit Licht Sound

Kleinkinderspielzeug empfohlen ab 3 Jahren Page 2 A12L2CNy7PLm media amazon images I

A12L2CNy7PL ref dp product quick view |||

Bedienungsanleitung - Produkt 1: BRIO World**33592** Rote Lola elektrische Lok Batterie-Lokomotive mit Licht Sound - Kleinkinderspielzeug empfohlen ab 3 Jahren Kompatibilittsleitfaden fr Smarte Thermostate V3 Finde heraus, ob das Smarte Thermostat mit deinem Heizsystem funktioniert V2.1 September ...

lang:de score:21 filesize: 1.02 M page_count: 6 document date: 2023-07-26

[pdf] Accessories

3223 896 F 2019 LR Bekijk de handleiding BRIO Rode locomotief op batterijen 33592 bol original media s gXN3OX0AmQG3 |||

Battery compartment Runs forwards and backwards 1 2 3 4 Freewheel EN Flashing reversing light Note The engine needs to be driving in the forward direction when driving up an ascending track. Lights glow when train moves forwards BRIO quality Magnetic coupling Rubber ring for extra traction L...

lang:en score:20 filesize: 288.78 K page_count: 2 document date: 2022-08-29





[\[pdf\]](#) Catalog

Railway catalogue BRIO RAILWAY 23 BRIO brio net 3 33210 33511 33042 33010 33028 33700 22 33727 33726 33728 33729 My first train play! When children start playing with toys they show great curiosity for STEAM WORLD 33036 33391 Did you know that in the old days trains used coal as fuel Yes my grandmother told me about power ful steam engines and challange of RW Catalogue 2015 ENG Low res portal ~ media Files Customer ashx |||

Railway catalogue Hello Hi and welcome to our BRIO Railway world Join us on our journey to the ... 33576 BRIO RAILWAY 33759 33748 33595 33594 33504 33319 www.brio.net 27 BRIO RAILWAY 33214 **33592** 33596 28 www.brio.net 33215 33593 33213 33510 33746 3 3 33737 33695 33509 33610 ...

lang:en **score:19** filesize: 8.52 M page_count: 27 document date: 2015-03-31



[\[pdf\]](#) Catalog

Jernbanekatalog BRIO Portal 31 12 2015 Når barn begynner å leke med leketøy er de veldig nysgjerrige på detaljer og fokuserer en om gangen De liker kjøre våre Consumer RW Catalogue NO Low res portal brio net ~ media Files Customer Railway ashx |||

Jernbanekatalog Hei Hei og velkommen til vr BRIO jernbaneverden Bli med p en reise til byen, la ... 3576 BRIO JERNBANE 33759 33748 33595 33594 33504 33319 www.brio.net 27 BRIO JERNBANE 33214 **33592** 33596 28 www.brio.net 33215 33593 33213 33510 33746 3 3 33737 33695 33509 33610 ...

lang:no **score:19** filesize: 8.59 M page_count: 27 document date: 2015-03-31



[\[pdf\]](#) Catalog

Hallo! BRIO Portal 31 12 2015 Wenn Kinder mit dem Spielen beginnen konzentrieren sie sich immer auf ein Spielzeug und beschäftigen intensiv voller Neugier Consumer RW Catalogue DE Low res portal brio net ~ media Files Customer Railway ashx |||

Eisenbahnkatalog Hallo Hallo und willkommen in der Welt der BRIO Eisenbahn Begleite uns auf uns ... 576 BRIO EISENBAHN 33759 33748 33595 33594 33504 33319 www.brio.de 27 BRIO EISENBAHN 33214 **33592** 33596 28 www.brio.de 33215 33593 33213 33510 33746 3 3 33737 33695 33509 33610 ...

lang:de **score:19** filesize: 9.61 M page_count: 27 document date: 2015-03-31



[\[pdf\]](#) Catalog

Togbaner og tilbehør BRIO Portal Når Børn starter at lege med leketøy viser de stor nysgjerrighed for detaljer fokuserer på et ad gangen De holder af køre Consumer RW Catalogue 2015 DA Low res portal brio net ~ media Files Customer Railway ashx |||

Togbaner og tilbehr Hej Hej og velkommen til vores BRIO togverden Tag med os p vores rejse til ... 33576 BRIO TOGBANE 33759 33748 33595 33594 33504 33319 www.brio.net 27 BRIO TOGBANE 33214 **33592** 33596 28 www.brio.net 33215 33593 33213 33510 33746 3 3 33737 33695 33509 33610 ...

lang:da **score:19** filesize: 8.62 M page_count: 27 document date: 2015-03-31



[\[pdf\]](#) Catalog

Hello! BRIO Portal

Consumer RW Catalogue 2015 JA

Low res portal brio net ~ media Files Customer Railway ashx |||

Railway catalogue Hello BRIO www.brio.net www.brio.net 5 33030 6,000 33617 1,400 33522 ... 19 3,000 33506 2,500 33594 2,000 33595 2,000 www.brio.net 27 BRIO 28 www.brio.net 3 3 **33592** 3,800 33593 3,800 BRIO 900 33737 1,200 33610 1,200 33749 33746 5,000 33508 900 www.bri...

lang:nl **score:19** filesize: 8.19 M page_count: 27 document date: 2015-03-31

