

[Manuals.plus](#) /

› [Fantini Cosmi](#) /

› Fantini Cosmi EVM 10/4" T Helical Extractor Fan with Timer User Manual

Fantini Cosmi AP0604

Fantini Cosmi EVM 10/4" T Helical Extractor Fan with Timer User Manual

Model: AP0604

1. INTRODUCTION

Thank you for choosing the Fantini Cosmi EVM 10/4" T Helical Extractor Fan with Timer. This manual provides essential information for the safe installation, operation, and maintenance of your new extractor fan. Please read these instructions carefully before installation and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the power supply is disconnected before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician and in accordance with all local and national wiring regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the fan if any part is damaged. Contact customer support for assistance.
- Ensure adequate ventilation is provided to prevent the back-flow of gases from open flues of gas or other fuel-burning appliances.

3. PACKAGE CONTENTS

Please check the contents of the package to ensure all components are present and undamaged:

- Fantini Cosmi EVM 10/4" T Helical Extractor Fan
- Mounting Screws and Wall Plugs
- Instruction Manual

4. SETUP AND INSTALLATION

This section outlines the steps for installing your extractor fan. Professional installation is recommended.

4.1 Mounting Location

The fan is designed for installation on a hard surface, typically a wall or ceiling in a bathroom or utility area. Ensure the chosen location allows for proper ventilation and access for maintenance.

4.2 Electrical Connection

The fan operates on a 120 Volt power supply. Connect the fan to the mains electricity supply according to the wiring diagram provided inside the fan's terminal box. Ensure all connections are secure and insulated.

4.3 Physical Installation

1. Mark the drilling points on the wall or ceiling using the fan's mounting holes as a template.
2. Drill holes and insert the provided wall plugs.
3. Secure the fan to the surface using the mounting screws.
4. Connect the ducting (if applicable) to the fan's outlet.

The fan's package dimensions are approximately 17 x 17 x 15 cm, and it weighs 3 kg. Consider these dimensions for proper placement.

5. OPERATING INSTRUCTIONS

The EVM 10/4" T model includes an integrated timer function.

5.1 Timer Function

The timer allows the fan to continue operating for a set period after the light switch (or other trigger) is turned off. The timer duration is typically adjustable via a small potentiometer located inside the fan's casing. Consult the wiring diagram for specific adjustment instructions.

- To adjust the timer, disconnect power to the fan.
- Carefully open the fan's cover to access the timer adjustment screw.
- Use a small screwdriver to turn the potentiometer to increase or decrease the delay time.
- Close the cover and restore power to test the new setting.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your extractor fan.

6.1 Cleaning

It is recommended to clean the fan grille and impeller periodically, depending on usage and environmental conditions.

1. **Always disconnect the power supply before cleaning.**
2. Remove the front grille.
3. Gently wipe the grille and impeller blades with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. Ensure all parts are completely dry before reassembling and restoring power.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not operate	No power supply Loose wiring connection Faulty switch	Check circuit breaker/fuse Verify wiring connections (with power off) Test the switch
Fan is noisy	Obstruction in impeller Loose mounting Motor issue	Disconnect power and check for obstructions Ensure fan is securely mounted Contact customer support
Timer not working correctly	Incorrect timer setting Wiring error	Adjust timer setting (see Section 5.1) Verify timer wiring connections

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	AP0604
Brand	Fantini Cosmi
Item Weight	3 Kilograms
Surface Recommendation	Hard floor (for mounting surface)
Noise Level	20 Decibels
Voltage	120 Volts
Package Dimensions	17 x 17 x 15 cm
ASIN	B00APVSI44
First Available Date	January 15, 2020

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Fantini Cosmi website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question