

[Manuals.plus](#) /

› [Beetel](#) /

› Beetel M71 Corded Landline Phone User Manual

Beetel M71

Beetel M71 Corded Landline Phone User Manual

Model: M71 | Brand: Beetel

INTRODUCTION

The Beetel M71 Corded Landline Phone is designed for reliable communication in home or office environments. This manual provides comprehensive instructions for setting up, operating, and maintaining your phone to ensure optimal performance.

Key features include a 16-digit LCD display, caller ID functionality, two-way speakerphone, and memory for incoming and outgoing calls. It also offers various ringtone options and utility functions such as an alarm clock and basic calculator.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x Beetel M71 Corded Landline Phone (White)
- Handset
- Coiled Handset Cord
- Line Cord
- 3 x AA Batteries (included)
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: Angled view of the Beitel M71 Corded Landline Phone, showing the handset, base unit, and coiled cord.

The Beitel M71 features a compact design with an intuitive layout. The main unit houses the keypad, LCD display, and speakerphone controls. The handset connects to the base via a coiled cord.



Figure 2: Front view of the Beetel M71, highlighting the 16-digit LCD display and the alphanumeric keypad with function buttons.

The 16-digit LCD display provides clear visibility for caller ID information, time, date, and menu options. The keypad includes standard numeric keys, function keys for call management, and dedicated buttons for speakerphone, mute, and redial.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Battery Installation:** Locate the battery compartment on the underside of the phone base. Insert the 3 AA batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.
3. **Connect Handset:** Plug one end of the coiled handset cord into the handset and the other end into the designated jack on the side of the phone base.
4. **Connect Line Cord:** Plug one end of the line cord into the "LINE" jack on the back or side of the phone base. Plug the other end into your telephone wall jack.

5. **Initial Power On:** The phone should power on automatically once connected to the telephone line and batteries are installed. The LCD display will illuminate.
6. **Set Date and Time:** Follow the on-screen prompts or refer to the "Operating Instructions" section to set the current date and time. This is crucial for accurate caller ID records.

Figure 3: Side view of the Beutel M71, illustrating the connection point for the coiled handset cord and the line cord.

Basic Call Functions

- **Pause:** Use the **PAUSE** function when dialing numbers that require a pause, such as for accessing an extension or voicemail system.

Advanced Features

- **16-Digit LCD Display:** Displays incoming caller ID, time, date, call duration, and menu options. The backlight and adjustable contrast enhance readability.
- **Caller ID (CLI):** Shows the number of the incoming call. New calls and repeat calls are indicated on the display.
- **Call Memory:**
 - *Incoming Calls:* Stores up to 99 incoming calls. Use the **CAL** (Call Log) button and navigation keys to review.
 - *Outgoing Calls:* Stores up to 18 outgoing calls.
 - *Checking/Erasing:* Navigate through call records and use the appropriate button (e.g., **DEL**) to erase entries.
- **6 One-Touch Memory:** Program frequently dialed numbers for quick access. Refer to the phone's on-screen menu for programming instructions (typically involves pressing **STORE** and a memory key).
- **Ringtone Selection:** Choose between four polyphonic or five normal ringtones. Adjust the ringing volume using the dedicated controls.
- **Do Not Disturb (DND):** Activates a "ring off" function, preventing the phone from ringing for incoming calls. Consult the menu for activation/deactivation.
- **Pre-dial and Edit Function:** Enter a number before lifting the handset or pressing speakerphone. You can edit the number before dialing.
- **Alarm Clock:** Set up to 5 different alarm times. Access this feature through the phone's menu.
- **Basic Calculator:** The phone includes a basic calculator function. Access it via the menu or a dedicated button if available.
- **Flash Time Programmable Settings:** Useful for PABX systems or specific network features, allowing adjustment of the flash duration for call transfers or other services.
- **Intercom and Parallel Call Transfers:** If connected to a compatible PABX system, the phone supports intercom functionality and parallel call transfers. Consult your PABX system's manual for specific setup.

MAINTENANCE

- **Cleaning:** Use a soft, slightly damp cloth to clean the phone's surface. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the display becomes dim or functions are erratic, it may be time to replace the 3 AA batteries. Ensure the phone is disconnected from the line before replacing batteries.
- **Storage:** If storing the phone for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.
- **Environmental Conditions:** Avoid exposing the phone to extreme temperatures, direct sunlight, high humidity, or dusty environments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone.	Line cord not connected properly; telephone line issue.	Ensure line cord is securely plugged into both the phone and the wall jack. Test the wall jack with another phone if possible.

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries; power issue.	Replace the 3 AA batteries. Check if the phone line is active (some features draw power from the line).
Cannot hear caller / Caller cannot hear me.	Handset cord loose; Mute function active; volume too low.	Check handset cord connection. Ensure MUTE is not active. Adjust speaker/handset volume.
Caller ID not displaying.	Caller ID service not subscribed; batteries low; incorrect date/time.	Contact your telephone service provider to confirm Caller ID subscription. Replace batteries. Set correct date and time.
Phone not ringing.	Ringer volume set to minimum; Do Not Disturb (DND) active.	Increase ringer volume. Deactivate DND function.

SPECIFICATIONS

Feature	Detail
Model Number	M71
Telephone Type	Corded
Colour	White
Display	16-digit LCD with backlight
Call Memory	99 incoming, 18 outgoing
One-Touch Memory	6 entries
Power Source	3 AA batteries (included)
Dimensions (LxWxH)	28 x 15 x 5 cm
Item Weight	10 g
Material	Plastic
Manufacturer	Beetel Teletech Limited
Country of Origin	China

WARRANTY AND SUPPORT

This product is covered by the manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact Beetel customer support.

For technical assistance, troubleshooting, or warranty claims, please contact Beetel Teletech Limited directly. Contact information can typically be found on the manufacturer's official website or on the product packaging.

Disclaimer: The manufacturer's warranty applies to this product. Any claims or disputes are subject to the jurisdiction of the court where the manufacturer's head office is situated. Product specifications and appearance may change without prior notice as per company policy.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question