

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Casio](#) /

› [G-Shock The 6900 Bluetooth Watch User Manual](#)

## Casio 6900A

# G-Shock The 6900 Bluetooth Watch User Manual

Model: 6900A

## INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your Casio G-Shock The 6900 Bluetooth Watch, Model 6900A. This digital timepiece is designed for durability and functionality, featuring shock resistance, 200-meter water resistance, and Bluetooth connectivity for enhanced timekeeping and notification features.



Figure 1: Front view of the G-Shock The 6900 Bluetooth Watch. The watch is white with a digital display showing "SAT 12-29 3:06 22" and a "Bluetooth" indicator. Buttons are labeled "ADJUST", "MODE", "SET", "SELECT", "SPLIT-RESET", "POWER", "FIND", and "START-STOP".

## SETUP

---

### 1. Initial Power-On and Time Setting

Upon first use or after a battery replacement, the watch may require initial setup. The time can be set manually or automatically via Bluetooth connection to a compatible smartphone.

### 2. Bluetooth Pairing

To utilize the Bluetooth features, the watch must be paired with a compatible smartphone (iPhone 4s and 5 supported). Ensure Bluetooth is enabled on your smartphone and follow the pairing instructions in the dedicated G-Shock app.

1. Download and install the official G-Shock app on your smartphone.
2. On the watch, press and hold the **FIND** button (bottom right) for approximately 2 seconds until the Bluetooth indicator appears or flashes.
3. Open the G-Shock app on your smartphone and follow the on-screen instructions to complete the pairing process.
4. Once paired, the watch will automatically synchronize time and date with your smartphone.

## OPERATING THE WATCH

---

### Button Functions

- **ADJUST** (Top Left): Used to enter and exit setting modes, and to confirm settings.
- **MODE** (Bottom Left): Cycles through different modes (Timekeeping, World Time, Alarm, Stopwatch, Countdown Timer).
- **SELECT** (Middle Left): Used to select items or change values in setting modes.
- **SPLIT-RESET** (Top Right): Used for split/reset operations in Stopwatch mode.
- **START-STOP** (Bottom Right): Used to start/stop operations in Stopwatch and Countdown Timer modes.
- **FIND / POWER** (Middle Right): Activates the LED backlight, and initiates Bluetooth connection for phone finding.

### Timekeeping Mode

This is the default mode, displaying the current time, date, and day of the week. The time can be synchronized via Bluetooth or set manually.

- To toggle between 12-hour and 24-hour formats, press the **SELECT** button in Timekeeping Mode.
- To manually adjust time:
  1. In Timekeeping Mode, hold **ADJUST** until the city code flashes.
  2. Use **SELECT** and **START-STOP** to navigate and change settings (city, DST, hour, minute, year, month, day).
  3. Press **ADJUST** to exit.

### World Time Mode

The watch supports 35 time zones (100 cities + UTC). Press **MODE** to enter World Time Mode. Use **SELECT** to scroll through city codes.

### Alarms

The watch features 5 daily alarms and an hourly time signal. Press **MODE** repeatedly to cycle to the Alarm Mode.

- Use **SELECT** to choose an alarm (AL1 to AL5) or the Hourly Time Signal (SIG).
- Hold **ADJUST** to enter alarm setting mode.
- Use **SELECT** and **START-STOP** to set the alarm time.
- Press **ADJUST** to confirm.

### Stopwatch

The stopwatch measures time in 1/100-second increments up to 23 hours, 59 minutes, 59.99 seconds. Press **MODE** to enter Stopwatch Mode.

- Press **START-STOP** to start/stop the stopwatch.
- Press **SPLIT-RESET** to record a split time or to reset the stopwatch when stopped.

## Countdown Timer

The countdown timer can be set from 1 minute to 24 hours. Press **MODE** to enter Countdown Timer Mode.

- Hold **ADJUST** to enter setting mode.
- Use **SELECT** and **START-STOP** to set the countdown time.
- Press **ADJUST** to confirm.
- Press **START-STOP** to start/stop the countdown. An alarm sounds when the countdown reaches zero.

## LED Backlight (Super Illuminator)

Press the **FIND / POWER** button (middle right) to illuminate the display for easy viewing in low light conditions.

## Vibration Function and Tap Function

The watch features a vibration function for alerts and a tap function for alarm/vibration on/off. Refer to the detailed instructions in the G-Shock app or the full module manual for specific settings.

## MAINTENANCE

---

### Water Resistance

Your G-Shock watch is rated for 200-meter water resistance. This means it is suitable for recreational scuba diving. Do not operate buttons while the watch is submerged in water.

### Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzine.

### Battery Replacement

The watch uses a CR2032 battery. The approximate battery life is 2 years, assuming Bluetooth communication is used up to 12 hours per day. When the low battery warning appears, it is recommended to have the battery replaced by an authorized service center to ensure water resistance integrity.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Cannot connect via Bluetooth.	Bluetooth is off on phone/watch; watch is out of range; app not running; battery low.	Ensure Bluetooth is on for both devices. Move watch closer to phone. Restart the G-Shock app. Check watch battery level.
Time is inaccurate.	No recent Bluetooth synchronization; manual setting error.	Perform a manual Bluetooth synchronization via the app. Re-adjust time manually if necessary.
Display is dim or blank.	Low battery; power saving function active.	Check for low battery warning. Ensure watch is exposed to light if power saving is enabled. Consider battery replacement.
Buttons are unresponsive.	Watch is in a specific mode (e.g., setting mode); internal malfunction.	Try pressing <b>ADJUST</b> to exit any setting mode. If problem persists, contact customer support.

## SPECIFICATIONS

---

- **Model:** 6900A (Module 3407)
- **Case Dimensions:** 45mm gloss case
- **Water Resistance:** 200 meters (20 BAR)
- **Shock Resistance:** Yes
- **Backlight:** LED Backlight (Super Illuminator)
- **World Time:** 35 time zones (100 cities + UTC), city code display, daylight saving on/off
- **Alarms:** 5 Daily Alarms, Hourly Time Signal
- **Special Functions:** Vibration Function, Tap Function (alarm/vibration on/off)
- **Stopwatch:** 1/100 second, Measuring capacity: 23:59'59.99", Measuring modes: Elapsed time, split time
- **Countdown Timer:** Measuring unit: 1 second, Countdown range: 24 hours, Countdown start time setting range: 1 minute to 24 hours (1-minute increments and 1-hour increments), Time-up alarm
- **Calendar:** Full Auto Calendar (pre-programmed until the year 2099)
- **Time Formats:** 12/24 Hour Formats
- **Button Tone:** Button operation tone on/off
- **Accuracy:** +/- 15 seconds per month (without BLE communication)
- **Battery:** CR2032
- **Approx. Battery Life:** 2 years (assuming BLE communication function is used up to 12 hours per day)
- **Connectivity:** Bluetooth compatible with iPhone 4s and 5
- **Parcel Dimensions:** 10.92 x 9.91 x 9.91 cm
- **Item Weight:** 226.8 g

## WARRANTY AND SUPPORT

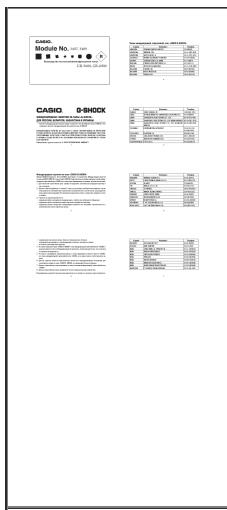
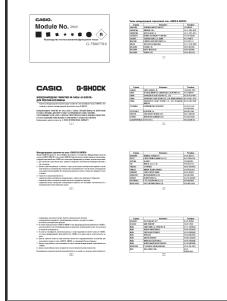
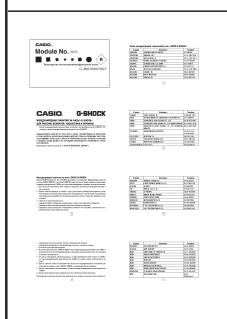
---

Your Casio G-Shock watch is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Casio website. For technical support, service, or inquiries, please contact Casio customer service or an authorized service center.

Official Casio Website: [www.casio.com](http://www.casio.com)

© 2024 Casio. All rights reserved.

## Related Documents - 6900A

	<p><a href="#"><u>CASIO G-SHOCK GB-5600, GB-6900 Руководство пользователя</u></a></p> <p>Полное руководство пользователя для часов CASIO G-SHOCK моделей GB-5600 и GB-6900 (модули 3407, 3409), включая информацию о международной гарантии, функциях Bluetooth, водозащите и уходе.</p>
	<p><a href="#"><u>CASIO G-SHOCK G-7900, GLX-6900 Watch User Manual (Module 3194)</u></a></p> <p>Comprehensive user manual for the CASIO G-SHOCK G-7900 and GLX-6900 watches (Module 3194), detailing features, operations, water resistance, care, world time, alarms, stopwatch, timer, backlight, and technical specifications.</p>
	<p><a href="#"><u>Casio G-SHOCK GLS-6900 Watch User Manual and Specifications</u></a></p> <p>Comprehensive guide to the Casio G-SHOCK GLS-6900 digital watch, covering timekeeping, alarms, stopwatch, timer, world time, water resistance, and international distributor information.</p>
	<p><a href="#"><u>Casio G-Shock G-7500/7510 Watch User Manual</u></a></p> <p>Comprehensive user manual for Casio G-Shock watches, module 2943, models G-7500 and G-7510. Covers setup, modes, features, and international warranty information.</p>
	<p><a href="#"><u>Инструкция к часам Casio G-SHOCK (Модуль 5623) и международная гарантия</u></a></p> <p>Полное руководство пользователя и информация о международной гарантии для часов Casio G-SHOCK (Модуль 5623) от i-Watch.Ru, включая инструкции по эксплуатации, настройке функций, Bluetooth-подключению и устранению неполадок.</p>
	<p><a href="#"><u>Casio G-Shock Watch Module 3031 User Manual (G-800/9000/9025)</u></a></p> <p>Comprehensive user manual for Casio G-Shock watches, Module 3031, covering models G-800, G-9000, and G-9025. Details include international warranty information, water resistance guidelines, operating modes (Current Time, Stopwatch, Countdown Timer, Alarm, World Time), care instructions, technical specifications, and product information.</p>