

Zojirushi NS-UC05-WB

Zojirushi Microcomputer Rice Cooker NS-UC05-WB Instruction Manual

Model: NS-UC05-WB

1. INTRODUCTION

Thank you for purchasing the Zojirushi Microcomputer Rice Cooker NS-UC05-WB. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.

2. IMPORTANT SAFETY PRECAUTIONS

To ensure safe operation and prevent damage to the appliance or injury to yourself and others, always follow these basic safety precautions:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance operates on 100 Volts. Ensure your power supply matches this requirement.

3. PARTS IDENTIFICATION

Familiarize yourself with the components of your rice cooker:

- **Main Body:** Houses the heating element and control panel.
- **Inner Cooking Pot:** Non-stick pot where rice is cooked.
- **Inner Lid:** Detachable lid inside the main lid.
- **Dew Collector:** Collects condensation.
- **Measuring Cup:** For accurate rice measurement.
- **Rice Spatula:** For serving rice.
- **Spatula Holder:** Attaches to the side of the unit.



This image shows the non-stick inner cooking pot of the Zojirushi NS-UC05-WB rice cooker. It is designed for even heat distribution and easy cleaning.

4. SETUP

Before using your rice cooker for the first time:

1. **Unpack:** Remove all packaging materials and accessories.
2. **Wash Components:** Wash the inner cooking pot, inner lid, measuring cup, and rice spatula with warm soapy water. Rinse thoroughly and dry completely.
3. **Wipe Main Body:** Wipe the exterior of the main body with a damp cloth. Do not immerse the main body in water.
4. **Assemble:** Place the inner cooking pot into the main body, ensuring it sits properly on the heating plate. Attach the inner lid to the main lid.
5. **Position:** Place the rice cooker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper

ventilation.

5. OPERATING INSTRUCTIONS

Follow these steps to cook rice:

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. For the NS-UC05-WB, the maximum capacity is 3 cups.
2. **Wash Rice:** Wash the rice thoroughly until the water runs clear. Drain well.
3. **Add Rice and Water:** Place the washed rice into the inner cooking pot. Add water according to the water level markings inside the pot, corresponding to the number of cups of rice. For example, if cooking 2 cups of white rice, fill water to the "2" mark for white rice.
4. **Place Pot in Cooker:** Ensure the outer surface of the inner cooking pot is dry, then place it into the main body of the rice cooker. Close the outer lid securely.
5. **Plug In:** Plug the power cord into a 100V electrical outlet.
6. **Select Menu:** Press the "Menu" button to select the desired cooking setting (e.g., White Rice, Brown Rice, Quick Cook). The selected menu will be indicated on the display.
7. **Start Cooking:** Press the "Start" button. The cooking indicator light will illuminate, and the cooking process will begin.
8. **Keep Warm:** Once cooking is complete, the rice cooker will automatically switch to the "Keep Warm" function. The "Keep Warm" indicator will light up.
9. **Serve:** Open the lid, stir the rice gently with the rice spatula to release excess moisture, and serve.

Cooking Tips:

- For best results, use the provided measuring cup.
- Do not exceed the maximum capacity of 3 cups of rice.
- Avoid opening the lid during the cooking cycle, as this can affect cooking performance.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your rice cooker.

1. **Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Cooking Pot:** Wash the inner cooking pot with warm water and a mild dishwashing detergent. Use a soft sponge to avoid scratching the non-stick coating. Rinse thoroughly and dry.
3. **Inner Lid:** Detach the inner lid and wash it with warm soapy water. Rinse and dry completely.
4. **Dew Collector:** Remove the dew collector and empty any accumulated water. Wash with warm soapy water, rinse, and dry.
5. **Main Body:** Wipe the exterior of the main body with a clean, damp cloth. Do not use abrasive cleaners or immerse the main body in water.
6. **Heating Plate:** If the heating plate has any food residue, wipe it gently with a damp cloth. Do not use sharp objects to scrape it.
7. **Storage:** Ensure all parts are dry before reassembling and storing the rice cooker in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too hard/undercooked.	Insufficient water; lid not closed properly; power interruption.	Ensure correct water level; close lid securely; check power connection.
Rice is too soft/mushy.	Too much water; rice not drained well.	Ensure correct water level; drain washed rice thoroughly.
Rice cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power outlet with another appliance.
Steam leaks from lid.	Lid not closed properly; inner lid not installed correctly; gasket worn.	Ensure lid is securely closed; re-install inner lid; contact customer support if gasket is worn.

If the problem persists after attempting these solutions, please contact Zojirushi customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Zojirushi
Model Number	NS-UC05-WB
Capacity	3 Cups
Color	White
Item Weight	2392 Grams
Wattage	440 watts
Voltage	100 Volts
Included Components	Instruction Manual, Measuring Cup, Rice Spatula
UPC	798525588690

9. WARRANTY AND SUPPORT

This Zojirushi product is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Zojirushi website. For technical support, replacement parts, or service inquiries, please contact Zojirushi customer service directly.

You can find contact information and additional resources on the official Zojirushi website:www.zojirushi.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question