

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Sharp XLDK255, RRMCGA133AWSA, XLDK225

## Redi-Remote RTRRMCGA133AWSA

# Redi-Remote Replacement Remote Control Instruction Manual

FOR SHARP MODELS: XLDK255, RRMCGA133AWSA, XLDK225

Brand: Redi-Remote | Model: RTRRMCGA133AWSA

## 1. INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control. This remote is designed to operate specific Sharp audio systems. It is a custom replacement unit and not an original Sharp product.

**Compatibility:** This remote control is compatible with the following Sharp unit models:

- Sharp XLDK255
- Sharp RRMCGA133AWSA
- Sharp XLDK225

The remote is designed to perform all functions for the specified compatible units. It cannot be programmed to control any auxiliary devices.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

*Note:* Redi-Remotes are not equipped with laser pointers or LED lights.

### 3. OPERATING INSTRUCTIONS

---

This section details the functions of the buttons on your Redi-Remote control. The remote features a sliding cover over the lower half, which reveals additional buttons when slid down.



Figure 1: Redi-Remote Replacement Remote Control. The top section features power, volume, channel, and navigation buttons. The lower section, revealed by a sliding cover, contains numerical input, playback controls, and function-specific buttons.

### 3.1 Top Section Buttons

- **PWR (Power):** Turns the unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Changes the display information on the unit.
- **VOL + / VOL - (Volume):** Increases or decreases the audio volume.
- **MUTE:** Mutes or unmutes the audio output.
- **CH+ / CH- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Recalls the previously selected channel or function.

### 3.2 Lower Section Buttons (Under Sliding Cover)

Slide the lower cover down to access these buttons.

- **Number Buttons (0-9, 100):** Used for direct input of track numbers, channel numbers, or other numerical selections.
- **ENT (Enter):** Confirms numerical input.
- **CLR/DIM (Clear/Dimmer):** Clears current input or adjusts display brightness.
- **MEM (Memory):** Stores or recalls settings.
- **CD:** Selects the CD function.
- **Play/Pause (▶/⏸):** Starts or pauses playback.
- **Stop (■):** Stops playback.
- **TUNER/BAND:** Selects tuner mode or changes radio band (AM/FM).
- **VID/AUX (Video/Auxiliary):** Selects video or auxiliary input source.
- **iPod (▶/⏸):** Selects iPod function and controls playback.
- **PRESET ◀◀ / ▶▶ (Preset Skip):** Skips to the previous or next preset radio station.
- **TUNING ▲ / ▼ (Tuning Up/Down):** Manually tunes radio frequencies up or down.
- **PLAY MODE:** Changes the playback mode (e.g., repeat, shuffle).
- **DISP (Display):** Toggles display information.
- **FOLDER:** Navigates through folders on compatible media.
- **CLK/TIMER (Clock/Timer):** Accesses clock settings or timer functions.
- **EQ MODE (Equalizer Mode):** Selects different equalizer presets.
- **X-BASS/DEMO:** Activates extra bass function or demo mode.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote's performance diminishes or it stops responding. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

## 5. TROUBLESHOOTING

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote control and the Sharp unit's infrared sensor.
  - Ensure you are within the effective operating range and pointing the remote directly at the unit.
- **Limited functionality:**
  - Verify that your Sharp unit model (XLDK255, RRMCGA133AWSA, or XLDK225) is listed as compatible.
  - Remember that this remote cannot be programmed for auxiliary devices.

## 6. SPECIFICATIONS

| Feature                         | Detail                                                 |
|---------------------------------|--------------------------------------------------------|
| Product Dimensions              | 7 x 2.5 x 1 inches (approximately)                     |
| Item Weight                     | 4.5 ounces (without batteries)                         |
| Model Number                    | RTRRMCGA133AWSA                                        |
| Batteries Required              | 4 x AAA (included)                                     |
| Connectivity Technology         | Infrared                                               |
| Max Number of Supported Devices | 1                                                      |
| Compatible Devices              | Sharp Stereo Systems (XLDK255, RRMCGA133AWSA, XLDK225) |
| Special Feature                 | No Programming Required                                |

## 7. SUPPORT

For any concerns or questions regarding your Redi-Remote replacement remote control, please contact the seller directly. They can provide assistance with product functionality and compatibility.