

Redi-Remote RTWJ194400

Redi-Remote Replacement Remote Control User Manual

For Yamaha HTR6080BL, RXV861BL, HTR6080, RAV326, WJ194400, RXV661BL, RXV861, HTR6060, RXV661

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed to operate specific Yamaha audio/video receivers. This remote is a custom-built replacement and is not an original Yamaha product. It is pre-programmed to function with the listed Yamaha models without additional setup.

Compatible Yamaha Models:

- HTR6080BL
- RXV861BL
- HTR6080
- RAV326
- WJ194400
- RXV661BL
- RXV861
- HTR6060
- RXV661

2. SETUP AND BATTERY INSTALLATION

The Redi-Remote replacement remote control requires 4 AAA batteries for operation. Batteries are included with the remote.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: This remote control does not require programming. It is ready for use with your compatible Yamaha unit immediately after battery installation.

3. OPERATING THE REMOTE CONTROL

The remote control features a standard layout for easy navigation and control of your Yamaha audio/video receiver. A sliding cover conceals additional buttons for advanced functions.

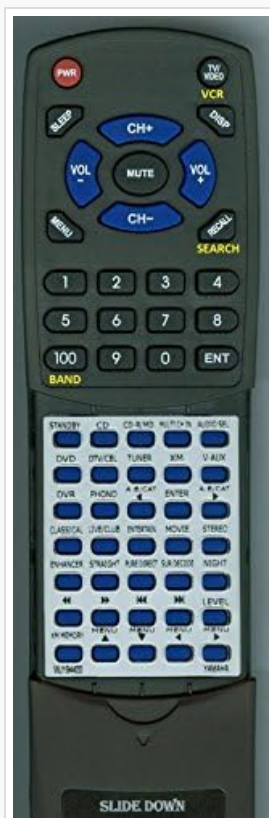


Figure 1: Redi-Remote Replacement Remote Control. This image displays the full remote control, including the upper section with power, volume, and channel controls, and the lower section with input selectors and advanced functions, revealed by sliding down the cover.

3.1 Basic Functions (Upper Section)

The upper section of the remote provides primary controls for daily use.

- **PWR (Power):** Turns the Yamaha unit on or off.
- **VOL +/- (Volume):** Adjusts the master volume level.
- **MUTE:** Mutes or unmutes the audio output.
- **CH +/- (Channel):** Navigates through channels (if applicable to the connected unit's tuner function).
- **SLEEP:** Activates the sleep timer function.
- **MENU:** Accesses the unit's main menu.
- **DISP (Display):** Changes the display mode or shows information.
- **RECALL:** Recalls previous settings or channels.
- **SEARCH:** Initiates a search function.

- **Number Pad (0-9):** Direct input for channels or settings.
- **ENT (Enter):** Confirms selections.
- **BAND:** Selects radio bands (AM/FM).

3.2 Advanced Functions (Lower Section)

Slide down the cover at the bottom of the remote to reveal additional buttons for input selection and advanced audio controls.

- **Input Selectors (e.g., DVD, CD, TUNER, XM, V-AUX, DVR, PHONO):** Selects the desired audio/video input source.
- **Sound Field Programs (e.g., CLASSICAL, LIVE/CLUB, MOVIE, STEREO):** Activates various sound modes.
- **Audio Enhancements (e.g., ENHANCER, STRAIGHT, SUR. MODE, NIGHT):** Adjusts audio processing settings.
- **Navigation/Control Buttons:** Additional menu navigation and playback controls.
- **LEVEL:** Adjusts individual channel levels.

Refer to your Yamaha unit's original manual for detailed explanations of specific functions and their effects.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace all 4 AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the Yamaha unit's infrared sensor.
 - Ensure you are within the operating range and line of sight of the Yamaha unit.
- **Certain buttons not working:**
 - Verify that the button corresponds to a function available on your specific Yamaha model.
 - Clean the remote's surface, especially around the unresponsive button, to remove any debris.

- **Remote controls other devices:**

- This Redi-Remote is designed to control only the specified Yamaha units and cannot be programmed for auxiliary devices. If it is affecting other devices, ensure no other universal remotes are in use or interfering.

If issues persist, please contact Redi-Remote customer support for assistance.

6. SPECIFICATIONS

Model Number	RTWJ194400
Brand	Redi-Remote
Compatible Devices	Yamaha HTR6080BL, RXV861BL, HTR6080, RAV326, WJ194400, RXV661BL, RXV861, HTR6060, RXV661 (Stereo System)
Connectivity Technology	Infrared
Power Source	4 x AAA Batteries (included)
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Special Feature	No Programming Required
Max Number of Supported Devices	1

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact information provided with your purchase or visit the official Redi-Remote website. This product is a replacement remote and its warranty is typically handled by the seller or manufacturer of the replacement unit.

If you have any concerns with the remote after purchase, please contact the seller directly as indicated in the product description.