

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for JBL ESC200, SVCJB010CREMO, Model RTSVCJB010CREMO

Redi-Remote RTSVCJB010CREMO

Redi-Remote Replacement Remote Control User Manual

Model: RTSVCJB010CREMO

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote Replacement Remote Control, model RTSVCJB010CREMO. This remote is designed as a direct replacement for specific JBL units, ensuring full functionality without the need for complex programming. It is compatible with JBL models ESC200, SVCJB010CREMO, and 901121.

Please read this manual carefully before using your new remote control to ensure proper setup and operation.

SETUP

Battery Installation

Your Redi-Remote requires 4 AAA batteries (included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Initial Use

This Redi-Remote is pre-programmed and requires no additional setup or coding. It is ready for use immediately after battery installation.

- Point the remote control directly at your JBL unit (ESC200, SVCJB010CREMO, or 901121).
- Press the desired function button (e.g., Power, Volume Up) to begin operation.

OPERATING YOUR REMOTE

The Redi-Remote is designed to replicate all essential functions of your original JBL remote control. It will control only the specific unit it is designed for and cannot be programmed to control auxiliary devices.

Basic Functions

The upper half of the remote control provides access to frequently used functions:

- **Power:** Turns the unit on or off.
- **Volume Up/Down:** Adjusts the audio level.
- **Mute:** Silences the audio output.
- **Input/Source:** Selects the audio input source.

Accessing Additional Buttons

The lower half of the remote control, containing additional function buttons, is concealed by a sliding cover. To access these buttons:

1. Locate the cover on the lower front of the remote.
2. Gently slide the cover downwards to reveal the hidden buttons.
3. After use, you may slide the cover back up to protect the buttons.



Image: Redi-Remote Replacement Remote Control. This image displays the overall design of the remote, including the sliding cover for additional buttons.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote's performance diminishes or it stops responding. Always replace all 4 AAA batteries at the same time with new ones.

1. Open the battery compartment as described in the Setup section.
2. Remove the old batteries.
3. Insert new AAA batteries, observing correct polarity (+/-).
4. Close the battery compartment cover.

Cleaning

To clean your remote control:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

If you experience issues with your Redi-Remote, please refer to the following common solutions:

Problem	Solution
Remote is not responding.	• Check if the batteries are inserted correctly with the correct polarity. • Replace the batteries with fresh AAA batteries. • Ensure there is a clear line of sight between the remote and the JBL unit, with no obstructions. • Confirm the remote is pointed directly at the unit's infrared receiver.
Some buttons are not working.	• Ensure the sliding cover is fully open if you are trying to access buttons on the lower half. • Clean the remote's surface and buttons to remove any dirt or debris that might be obstructing them.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	RTSVCJB010CREMO
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Compatible Devices	JBL ESC200, SVCJB010CREMO, 901121 (Stereo System)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1

SUPPORT AND WARRANTY

For any concerns or issues with your Redi-Remote Replacement Remote Control after purchase, please contact the seller directly. The seller for this product is RemotesPro.

While specific warranty details are not provided in this manual, it is recommended to retain your proof of purchase for any potential support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00ARM9DVI>

More documents and user manuals: <https://manuals.plus/>