

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual

Redi-Remote RTZ253B

Redi-Remote Replacement Remote Control User Manual

For Zenith Models: Z213W, Z213B, Z253B

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed specifically for use with select Zenith television models. This remote is a custom-built replacement and is not an original Zenith product. It is engineered to provide full functionality for the compatible units without requiring any programming.

PRODUCT FEATURES

- Custom-built replacement remote control.
- No programming required for immediate use.
- Designed to control all functions of the specific compatible unit.
- Does not control auxiliary devices.
- Does not include laser pointers or LED lights.

COMPATIBILITY

This Redi-Remote replacement remote control is compatible with the following Zenith models:

- Zenith Z213W
- Zenith Z213B
- Zenith Z253B

Please ensure your Zenith unit's model number matches one of those listed above for proper functionality.

SETUP

Battery Installation

The remote control requires four (4) AAA batteries, which are included with your purchase. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the cover downwards to open the compartment.
3. Insert the four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Initial Use

Once batteries are installed, the remote is ready for immediate use. No programming or code entry is required. Simply point the remote at your compatible Zenith unit and begin operating it.

OPERATING INSTRUCTIONS

The Redi-Remote is designed to replicate the functions of your original Zenith remote. Familiarize yourself with the button layout as shown in the image below.



Image: Front view of the Redi-Remote replacement remote control. The top section features primary controls like Power, Volume, Channel, and Number Pad. The bottom section, initially covered, slides down to reveal additional function buttons.

Primary Controls (Top Section)

- **PWR (Power):** Turns the Zenith unit on or off.
- **TV/VIDEO:** Switches between TV and video input modes.
- **DISP (Display):** Shows on-screen information.
- **SLEEP:** Activates the sleep timer function.
- **VOL +/- (Volume):** Adjusts the audio volume up or down.
- **MUTE:** Silences or restores the audio.
- **CH +/- (Channel):** Changes channels up or down.
- **MENU:** Accesses the on-screen menu system.
- **RECALL:** Switches to the previously viewed channel.
- **Number Pad (0-9, 100., ENT):** Directly enters channel numbers. Use "ENT" to confirm multi-digit channel entries. "100." may be used for channels 100 and above or specific functions depending on the Zenith model.

Advanced Controls (Hidden Panel)

The lower half of the remote features a sliding cover. Slide this cover downwards to reveal additional function buttons.

- **PRESET +/-:** Navigates through preset channels or settings.
- **TUNING +/-:** Adjusts manual tuning settings.
- **BAND:** Cycles through different frequency bands (e.g., TV, FM, AM if applicable).
- **FUNCTION:** Activates specific functions depending on the Zenith model.
- **ALARM:** Sets or activates an alarm function.
- **SKIP forward:** Skips forward in media playback.
- **STOP:** Stops media playback.
- **PLAY/PAUSE:** Toggles between playing and pausing media.
- **SNOOZE:** Snoozes an active alarm.
- *Additional unlabeled buttons:* These buttons may correspond to specific functions on your Zenith unit not explicitly labeled on the remote. Refer to your Zenith unit's original manual for their specific uses.

MAINTENANCE

Battery Replacement

If the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all four AAA batteries at the same time with new ones.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the remote's electronics or finish.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with fresh AAA batteries.
- **Line of Sight:** Ensure there is a clear line of sight between the remote's infrared emitter and the Zenith unit's IR receiver. Obstructions can block the signal.

- **Distance:** Operate the remote within a reasonable distance from the Zenith unit.
- **Compatibility:** Double-check that your Zenith model (Z213W, Z213B, or Z253B) is listed as compatible. This remote is specifically designed for these models and will not work with others.

Specific Functions Not Working

- **Hidden Panel:** Ensure the sliding cover is fully open to access all buttons.
- **Unit Specificity:** Some functions may be specific to certain Zenith models or require the unit to be in a particular mode (e.g., VCR mode for VCR controls). Refer to your Zenith unit's original manual for detailed function explanations.

If you continue to experience issues after following these troubleshooting steps, please refer to the "Support" section for assistance.

SPECIFICATIONS

Model Number	RTZ253B
Dimensions (L x W x H)	7 x 2.5 x 1 inches (approximately)
Weight	4.5 ounces (approximately)
Power Source	4 x AAA Batteries (included)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (Specific Zenith unit)

WARRANTY

This Redi-Remote replacement remote control is manufactured to high standards. As a custom-built replacement, any concerns regarding its functionality or compatibility after purchase should be directed to the seller. Please retain your proof of purchase.

SUPPORT

For any questions, concerns, or technical assistance regarding your Redi-Remote replacement remote control, please contact the seller directly. The seller, RemotesPro, is best equipped to provide support for this product. You can typically find seller contact information through your purchase history on the platform where the item was acquired.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question