

## Cuisinart CSB-75

# Cuisinart CSB-75 Smart Stick 2-Speed Immersion Hand Blender User Manual

Model: CSB-75 | Brand: Cuisinart

## 1. PRODUCT OVERVIEW

The Cuisinart CSB-75 Smart Stick 2-Speed Immersion Hand Blender is a versatile kitchen tool designed for various blending tasks. Its powerful 200-watt motor efficiently handles ingredients, while the stick design allows it to reach into pots, pitchers, and bowls, expanding blending options. The ergonomically designed grip ensures comfortable handling and enhanced control during use. This model features two speed controls (low and high) for adaptable food preparation.

Key features include:

- Powerful 200-watt motor for efficient blending.
- Two-speed control (low and high) for diverse tasks.
- Ergonomic grip for comfortable and controlled operation.
- Detachable blending shaft and beaker for easy cleaning.
- Dishwasher-safe blending shaft and beaker.



Image 1: Cuisinart CSB-75 Smart Stick 2-Speed Immersion Hand Blender, showing the motor body and blending shaft.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before operating the appliance.
2. To protect against electrical shock, do not immerse the motor body in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
7. The use of attachments not recommended or sold by Cuisinart may cause fire, electric shock, or injury.
8. Do not use outdoors.

9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the blender is not running.
12. Blades are sharp. Handle carefully.

### 3. WHAT'S INCLUDED

Your Cuisinart CSB-75 Smart Stick Immersion Hand Blender package includes the following components:

- **Motor Body:** The main unit containing the 200-watt motor and controls.
- **Blending Shaft:** A detachable stainless steel shaft with a blade guard, ideal for blending directly in pots or bowls.
- **Chopper/Grinder Attachment:** A separate attachment for chopping and grinding smaller quantities of food.
- **Whisk Attachment:** For whipping cream, egg whites, and other light mixing tasks.
- **Measuring Beaker:** A 413 ml (16 oz) clear plastic beaker with measurement markings, suitable for blending and measuring.

The Cuisinart Hand Blender is designed with a special Lock/Unlock feature which prevents the blender from operating until you are ready to use it.

#### To Operate/Activate Your Hand Blender

- 1) Press and HOLD the Lock/Unlock button located on the top of the hand Blender (Fig 1)
- 2) Press and HOLD the High, Low or Power button (Models Configurations May Vary) (Fig 2)
- 3) RELEASE the Lock/Unlock button located on the top of the hand Blender (Fig 1)
- 4) The hand blender is now activated and in use.
- 5) To stop operation, release the High/Low or Power button. (Fig 2)



#### PLEASE NOTE:

You can also PRESS and HOLD the High, Low or Power button FIRST.  
Than Press the Lock/Unlock button.  
Once the Hand Blender is activated, you can release the Lock/Unlock button.

Image 2: The included 413 ml (16 oz) measuring beaker with clear markings for convenient use.

### 4. SETUP AND ASSEMBLY

Before first use, ensure all parts are clean. The blending shaft, chopper/grinder attachment, whisk attachment, and measuring beaker are dishwasher-safe. The motor body should be wiped clean with a damp cloth.

#### Attaching/Detaching Accessories:

1. To attach the blending shaft, align the motor body with the shaft and twist until it clicks securely into place.

2. To detach, press the release button located on the back of the motor body and twist to separate the shaft.
3. The chopper/grinder and whisk attachments connect to the motor body in a similar twist-and-lock fashion.

## 5. OPERATING INSTRUCTIONS

---

The Cuisinart Smart Stick Hand Blender features a special Lock/Unlock safety mechanism to prevent accidental operation. Follow these steps to operate your blender:

1. Press and HOLD the Lock/Unlock button located on the top of the hand blender (Fig 3, item 1).
2. While holding the Lock/Unlock button, press and HOLD either the High or Low speed button (Fig 3, item 2).
3. Once the blender is activated, you can RELEASE the Lock/Unlock button. The blender will continue to operate as long as the speed button is held down.
4. To stop operation, release the High or Low speed button.

**PLEASE NOTE:**

You can also PRESS and HOLD the High or Low speed button FIRST, then press the Lock/Unlock button. Once the Hand Blender is activated, you can release the Lock/Unlock button.



Image 3: Diagram illustrating the Lock/Unlock button (1) and High/Low speed buttons (2) for operating the Cuisinart Smart Stick.

Video 1: Official Cuisinart demonstration of the Smart Stick 2-Speed Immersion Hand Blender, showcasing its features and basic operation.

## 6. CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Cuisinart Smart Stick Immersion Hand Blender.

### Cleaning:

- Always unplug the blender before cleaning.
- The blending shaft, chopper/grinder attachment, whisk attachment, and measuring beaker are all dishwasher-safe (top rack recommended).
- To clean the motor body, wipe it with a damp cloth. Do not immerse the motor body in water or any other liquid.
- For stubborn food residue on the blending shaft, soak it in warm, soapy water before cleaning.

### Storage:

Store the blender and its attachments in a dry place when not in use. Ensure all parts are completely dry before storing.

## 7. TROUBLESHOOTING

---

If your Cuisinart Smart Stick Immersion Hand Blender is not functioning as expected, please refer to the following common issues and solutions:

- **Blender does not turn on:** Ensure the unit is properly plugged into a working electrical outlet. Verify that the blending shaft or attachment is securely connected to the motor body. Remember to press and hold the Lock/Unlock button before or simultaneously with the speed button.
- **Attachments are difficult to connect/disconnect:** Ensure the release button on the motor body is fully depressed when attempting to detach an accessory. For attachment, ensure proper alignment before twisting to lock.
- **Motor sounds strained:** This may occur if the blender is overloaded or if the ingredients are too thick. Reduce the quantity of ingredients or add more liquid. Do not operate continuously for more than 1 minute.
- **Food is not blending smoothly:** Ensure the blending shaft is fully immersed in the ingredients. Move the blender up and down gently to circulate ingredients. For chopping, ensure ingredients are cut into small, manageable pieces before placing them in the chopper attachment.

If the issue persists after trying these steps, please contact Cuisinart Customer Service for further assistance.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand	Cuisinart
Model Number	CSB-75
Motor Power	200 Watts
Number of Speeds	2 (Low, High)
Voltage	110 Volts
Blade Material	Stainless Steel
Product Dimensions	2.13"D x 2.60"W x 14.00"H
Item Weight	2.2 pounds
Beaker Capacity	413 Milliliters (16 oz)
Control Type	One-touch control
Special Feature	Detachable Attachment

## 9. WARRANTY AND SUPPORT

The Cuisinart CSB-75 Smart Stick 2-Speed Immersion Hand Blender comes with a Limited 3-year warranty. For warranty claims, product support, or any inquiries, please refer to the official Cuisinart website or contact their customer service department.

For additional information and support, visit the official Cuisinart Store: [Cuisinart Store on Amazon](#)