

[Manuals.plus](#) /

› [Digital Nc](#) /

› Digital Nc Stereo Microphone with Windscreen (Shotgun) Instruction Manual

Digital Nc NIKD80000MIC150

Digital Nc Stereo Microphone with Windscreen (Shotgun) Instruction Manual

Model: NIKD80000MIC150

INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Digital Nc Stereo Microphone with Windscreen. This compact shotgun microphone is designed to capture clear, wide-range audio, minimizing unwanted background noise, especially from wind.

What's in the Box

- Digital Nc Stereo Microphone

SETUP

1. Attaching the Microphone

The Digital Nc Stereo Microphone is designed for easy mounting on a camera's hot-shoe. Align the microphone's mounting foot with the hot-shoe slot on your camera. Slide the microphone into place until it is secure. Tighten the locking ring, if present, to ensure stability.



Image 1: Digital Nc Stereo Microphone mounted on a camera's hot-shoe.

2. Connecting to Your Device

Connect the microphone's audio cable to the appropriate microphone input jack on your recording device (e.g., camera, camcorder, audio recorder). Ensure the connection is firm to prevent audio interruptions.



Image 2: The Digital Nc Stereo Microphone with its included windscreen.

OPERATING INSTRUCTIONS

1. Powering the Microphone

This microphone operates via a corded electric connection, typically drawing power directly from the device it is connected to. No separate batteries are required for operation. Once connected, the microphone should be ready for use.

2. Optimal Audio Capture

Position the microphone to face the primary sound source. Its shotgun design offers directional mobility, allowing you to focus audio capture on your subject while reducing ambient noise. For best results, ensure the microphone is not obstructed.

3. Using the Windscreen

The included windscreen is designed to minimize wind noise during outdoor recordings. Gently slide the foam windscreen over the microphone head. This will help to eliminate unwanted noise caused by air movement, ensuring clearer audio recordings.

MAINTENANCE

Cleaning

To clean the microphone, gently wipe the exterior with a soft, dry cloth. Do not use liquid cleaners or solvents, as these can damage the microphone's components. The windscreen can be carefully removed and cleaned with a mild soap solution if necessary, then allowed to air dry completely before reattaching.

Storage

Store the microphone in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it protected from dust and physical impact when not in use.

TROUBLESHOOTING

- No Audio Output:**
Ensure the microphone is securely connected to the device's microphone input. Check your device's audio settings to confirm the correct input source is selected. Test with another device if possible.
- Poor Audio Quality / Excessive Noise:**
Verify the windscreen is properly installed, especially in windy conditions. Ensure the microphone is positioned correctly towards the sound source. Check for any loose connections. Adjust recording levels on your device to prevent clipping or low volume.
- Microphone Not Recognized:**
Confirm compatibility with your recording device. Some devices may require specific drivers or settings adjustments. Refer to your device's manual for external microphone support.

SPECIFICATIONS

Brand	Digital Nc
Model Number	NIKD80000MIC150
Special Feature	Lightweight
Compatible Devices	Headphone, Laptop, Personal Computer, Smartphone
Color	Black
Polar Pattern	Unidirectional
Microphone Form Factor	Shotgun
Power Source	Corded Electric
Signal-to-Noise Ratio	76 dB

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or visit the official Digital Nc website. Keep your purchase receipt as proof of purchase for any warranty claims.