

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Oral-B](#) /
- › [Oral-B Deep Sweep Electric Toothbrush Model D34.515.5X User Manual](#)

Oral-B D34.515.5X

Oral-B Deep Sweep Electric Toothbrush Model D34.515.5X User Manual

This manual provides instructions for the safe and effective use of your Oral-B Deep Sweep Electric Toothbrush. Please read thoroughly before first use.

1. PRODUCT OVERVIEW

The Oral-B Deep Sweep Electric Toothbrush combines the familiar brushing motion of a manual toothbrush with advanced triple-action, deep cleaning technology. It features 3D cleaning action, a visible pressure sensor, and multiple cleaning modes to enhance your oral hygiene routine.



Image: The Oral-B Deep Sweep Electric Toothbrush packaging, highlighting the toothbrush, SmartGuide, and key features like 5 cleaning modes and wireless brush coach.

Package Contents

- 1 x Oral-B Deep Sweep Electric Toothbrush Handle
- 1 x Charger
- 1 x Deep Sweep Refill Brush Head
- 1 x Refill Stand
- 1 x Travel Case
- 1 x SmartGuide

2. SETUP

Charging the Toothbrush

Before first use, fully charge the toothbrush. A full charge can take up to 24 hours.

1. Connect the charging base to a power outlet.
2. Place the toothbrush handle onto the charging base. The charge indicator on the handle will show

charging status.

Attaching the Brush Head

Align the brush head with the shaft of the toothbrush handle and push down until it clicks into place.

SmartGuide Setup

The included SmartGuide provides real-time guidance during brushing. Install batteries (if not pre-installed) and place it in a visible location in your bathroom. The SmartGuide will automatically pair with your toothbrush when both are powered on and in close proximity.

3. OPERATING INSTRUCTIONS

Powering On/Off

Press the power button on the handle to turn the toothbrush on or off.

Selecting Cleaning Modes

The toothbrush offers 5 cleaning modes. Press the mode button to cycle through the available modes:

- **Daily Clean:** Standard daily cleaning for everyday plaque removal.
- **Deep Clean:** Extended brushing time for a thorough clean, reaching 2x deeper between teeth.
- **Sensitive:** Gentle cleaning for sensitive areas, gums, or after dental procedures.
- **Whitening:** Designed to polish and remove surface stains for naturally whiter teeth.
- **Massage:** Gentle gum stimulation for improved gum health.

Pressure Sensor

The visible pressure sensor lights up red if you are brushing too hard. Reduce pressure to protect your gums and teeth from excessive force. The pulsation will also stop when too much pressure is applied.

Professional Timer

The built-in timer signals after 2 minutes of brushing, indicating the dentist-recommended brushing time. For Deep Clean mode, the timer is set for 3 minutes. The SmartGuide also provides quadrant guidance, prompting you to move to a different section of your mouth every 30 seconds (or 45 seconds in Deep Clean mode).

4. MAINTENANCE

Cleaning the Toothbrush

After each use, rinse the brush head thoroughly under running water with the handle switched on. Detach the brush head and clean both the handle and the brush head separately. Wipe the handle with a damp cloth. Do not immerse the charger in water.

Replacing the Brush Head

Replace the brush head every 3 months, or sooner if the Indicator bristles fade halfway or appear worn. Worn bristles can reduce cleaning effectiveness.

Charging

For optimal performance, keep the toothbrush charged on its base when not in use. The battery life may

decrease over time, requiring more frequent charging. The toothbrush is designed to be portable, allowing you to remove it from the charging base for travel, but it will need to be recharged regularly.

5. TROUBLESHOOTING

- **Red Light Activates Frequently:** This indicates you are applying too much pressure. Reduce the force when brushing to protect your gums and teeth.
- **Toothbrush Not Holding Charge:** Over time, rechargeable batteries can lose capacity. Ensure the toothbrush is properly seated on the charging base. If the issue persists after prolonged use, the battery may be at the end of its lifespan.
- **SmartGuide Display Issues:** Check the batteries in the SmartGuide. Replace them if necessary. Ensure the SmartGuide is within range of the toothbrush for proper communication.
- **Damaged or Leaking SmartGuide Batteries:** Some users have reported issues with included SmartGuide batteries being corroded or leaking upon arrival. If this occurs, safely dispose of the damaged batteries and replace them with new ones. Contact customer support if the SmartGuide itself appears damaged.

6. SPECIFICATIONS

Feature	Detail
Model Number	Model D34.515.5X
Brand	Oral-B
Power Source	Corded Electric
Special Feature	Pressure Sensor
Age Range	Adult
Product Dimensions	7.68 x 3.9 x 9.96 inches
Item Weight	1.7 Pounds
UPC	069055043400
Manufacturer	Procter & Gamble - HABA Hub

Important Safety Information

- Do not use on children under the age of 3.
- Adult supervision is recommended when the brush is used by children (+3) and persons with special needs.
- Small parts may present a choking hazard.

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official Oral-B website. Warranty terms and conditions may vary by region.

For customer support, technical assistance, or to inquire about replacement parts, please contact Oral-B customer service through their official channels. Contact information can typically be found on the product

packaging or the Oral-B website.