



[Manuals.plus](#) /

> [Zoop](#) /

> Zoop Digital Children's Watch Model NEC3001PV03J User Manual

Zoop NEC3001PV03J

Zoop Digital Children's Watch User Manual

Model: NEC3001PV03J

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Zoop Digital Children's Watch, Model NEC3001PV03J. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

PRODUCT OVERVIEW



This image shows the Zoop Digital Children's Watch, featuring a grey digital display, a round case, and a black polyester strap with a buckle clasp.

The Zoop Digital Children's Watch is designed for durability and ease of use. It features a clear digital display, a robust case, and a comfortable strap. Key components include the display screen, function buttons (typically MODE, SET, START/STOP, LIGHT), and the watch strap with a buckle clasp.

SETUP

Battery Installation

Your Zoop Digital Children's Watch comes with a product-specific battery pre-installed. No initial battery installation is required. If the display is blank or dim, the battery may need replacement (refer to the Maintenance section).

Setting the Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is activated. Digits, typically hours or minutes, will begin to flash.
2. Use the **SET** or **ADJUST** button (location varies by model, usually on the side) to change the flashing digits.
3. Press the **MODE** button again to cycle through hours, minutes, seconds, month, date, and day of the week.

4. Adjust each value using the **SET** or **ADJUST** button.
5. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

OPERATING INSTRUCTIONS

Time Display

In normal mode, the watch displays the current time (hours, minutes, seconds) and often the date (month, day, day of the week).

Using the Alarm Function

To set the alarm:

1. Press the **MODE** button until the alarm setting screen appears (usually indicated by an alarm icon or 'AL').
2. Use the **SET** or **ADJUST** button to set the desired alarm hour.
3. Press **MODE** to move to minutes and adjust them.
4. Press **MODE** again to confirm and exit.
5. To activate/deactivate the alarm, typically press a specific button (e.g., **START/STOP** or **ADJUST**) while in alarm mode. An alarm icon will appear on the display when active.

Using the Timer Function

To use the timer (countdown or stopwatch):

1. Press the **MODE** button until the timer or stopwatch screen appears (often indicated by 'TR' or 'ST').
2. For a stopwatch, press **START/STOP** to begin counting, press again to pause, and press **RESET** (if available) to clear.
3. For a countdown timer, you may need to set the desired time first using **SET** or **ADJUST** buttons, then press **START/STOP** to begin the countdown.

Using the Backlight

Press the **LIGHT** button (usually located on the top left or right side of the watch) to illuminate the display for a few seconds in low-light conditions.

MAINTENANCE

Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or display. While the watch is water-resistant up to 30 meters, it is not designed for prolonged submersion or hot water exposure. Avoid pressing buttons underwater.

Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance. Refer to the Specifications section for battery type.

Storage

When not in use for extended periods, store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Watch display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time following the instructions in the 'Setting the Time and Date' section. Ensure you are in the correct 12-hour or 24-hour format.
- **Alarm is not sounding:** Ensure the alarm function is activated (check for the alarm icon on the display). Verify the alarm time is set correctly.
- **Buttons are unresponsive:** The watch may require a soft reset. If possible, remove and reinsert the battery (consult a technician). Avoid excessive force on buttons.

SPECIFICATIONS

Feature	Detail
Model Number	NEC3001PV03J
Display Type	Digital
Movement Type	Automatic
Case Shape	Round
Case Diameter	38 Millimetres
Case Thickness	13 Millimetres
Dial Colour	Grey
Band Colour	Black
Band Material Type	Polyester
Clasp Type	Buckle
Water Resistance Depth	30 Metres
Water Resistance Level	Water Resistant
Special Features	Alarm, Timer
Power Source Type	Battery Powered
Batteries	1 Product Specific battery (included)
Item Weight	70 g

WARRANTY AND SUPPORT

Warranty Information

Your Zoop Digital Children's Watch comes with a 12-month manufacturer warranty covering manufacturing defects. To avail warranty service, present your original purchase invoice at any authorized Titan Service Center. No separate warranty card is required.

Customer Support

For further assistance, service-related queries, or to locate an authorized service center, please contact Titan India customer support:

- Toll-free number: **1800-266-0123** (available 10 AM to 7 PM, all days of the week)
- Email: customercare@titan.co.in