

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [H.Koenig](#) /

› [H.Koenig KM78 Multifunction Food Processor User Manual](#)

## H.Koenig KM78

# H.Koenig KM78 Multifunction Food Processor User Manual

Model: KM78

## INTRODUCTION

---

Thank you for choosing the H.Koenig KM78 Multifunction Food Processor. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---


**WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:**

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the container while processing food to prevent severe injury to persons or damage to the food processor.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.


## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your H.Koenig KM78 Food Processor.



**Figure 1: Main Unit.** This image shows the core food processor unit, including the motor base, the stainless steel mixing bowl, and the speed control dial on the side. The power cord is visible extending from the back.



**Figure 2: Included Attachments.** This image displays the range of accessories that come with the KM78, such as the whisk, dough hook, flat beater, the glass blender jug with lid, and the components of the meat grinder attachment.

## Components List:

1. Motor Base with Control Dial
2. Stainless Steel Mixing Bowl (5L capacity)
3. Splash Guard
4. Dough Hook
5. Flat Beater
6. Whisk
7. Glass Blender Jug (1.5L capacity)
8. Meat Grinder Attachment (with various plates)
9. Pusher for Meat Grinder

## SETUP

---

Before first use, clean all parts that will come into contact with food. Ensure the appliance is placed on a stable, flat, and dry surface.

### Initial Assembly:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Wash the mixing bowl, splash guard, and all attachments (dough hook, flat beater, whisk, blender jug, meat grinder parts) in warm soapy water. Rinse thoroughly and dry completely. The motor base should only be wiped with a damp cloth.
3. **Position:** Place the motor base on a clean, dry, and stable countertop. Ensure there is adequate ventilation around the unit.
4. **Attach Mixing Bowl:** Place the stainless steel mixing bowl onto the base, aligning the grooves, and turn clockwise until it locks securely into place.
5. **Install Attachment:** Lift the head of the food processor. Select the desired attachment (dough hook, flat beater, or whisk) and insert it into the attachment shaft, pushing upwards and turning slightly until it clicks into place. Lower the head until it locks.
6. **Attach Splash Guard:** If desired, place the splash guard over the mixing bowl before lowering the head.

## OPERATING INSTRUCTIONS

---

### Using the Mixer Function:

1. Ensure the appliance is unplugged.
2. Follow the "Initial Assembly" steps to set up the mixing bowl and desired attachment.
3. Add ingredients to the mixing bowl. Do not overfill.
4. Lower the head of the food processor until it locks.

5. Plug the appliance into a suitable power outlet.
6. Turn the speed control dial to the desired setting (1-6). Use lower speeds for gentle mixing and higher speeds for whipping or beating.
7. For short bursts of maximum power, turn the dial to the "PULSE" setting and hold. Release to stop.
8. When finished, turn the speed dial to "0" (off) and unplug the appliance.
9. Lift the head, remove the attachment, and then remove the mixing bowl.

### Using the Blender Function:

1. Ensure the appliance is unplugged.
2. Remove the mixing bowl and any mixer attachments.
3. Assemble the glass blender jug by ensuring the blade assembly is securely attached to the base of the jug.
4. Add ingredients to the blender jug. Do not exceed the MAX fill line.
5. Place the lid securely on the blender jug.
6. Place the assembled blender jug onto the designated blender port on top of the motor base, turning clockwise to lock it into place.
7. Plug the appliance into a suitable power outlet.
8. Turn the speed control dial to the desired setting (1-6) or use the "PULSE" function for quick blending.
9. When finished, turn the speed dial to "0" (off) and unplug the appliance.
10. Carefully remove the blender jug from the base.

### Using the Meat Grinder Function:

1. Ensure the appliance is unplugged.
2. Assemble the meat grinder attachment according to the instructions provided with the attachment. Ensure the cutting blade and desired grinding plate are correctly installed.
3. Attach the assembled meat grinder to the front port of the motor base, turning to lock it securely.
4. Prepare meat by cutting it into small pieces that fit into the feeding tube. Remove bones, gristle, and excessive fat.
5. Place a bowl or container under the output of the grinder.
6. Plug the appliance into a suitable power outlet.
7. Turn the speed control dial to a medium speed (e.g., 3-4).
8. Feed the meat pieces into the feeding tube using the pusher. **Never use your fingers or other utensils to push food into the grinder.**
9. When finished, turn the speed dial to "0" (off) and unplug the appliance.
10. Disassemble the meat grinder for cleaning.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your H.Koenig KM78 Food Processor.

- **Always unplug the appliance before cleaning.**
- **Motor Base:** Wipe the motor base with a soft, damp cloth. Do not immerse it in water or any other liquid.
- **Mixing Bowl and Attachments:** The stainless steel mixing bowl, splash guard, dough hook, flat beater, and whisk are generally dishwasher safe, but hand washing with warm soapy water is recommended to preserve their finish. Rinse thoroughly and dry immediately.

- **Glass Blender Jug:** Disassemble the blade assembly from the jug. Wash all parts (jug, lid, blade assembly) in warm soapy water. Use a brush for the blades. Rinse well and dry.
- **Meat Grinder Attachment:** Disassemble all parts immediately after use. Wash thoroughly in warm soapy water. Use a brush to clean small crevices and holes in the grinding plates. Dry all metal parts completely to prevent rust.
- **Storage:** Store the appliance and its accessories in a clean, dry place, away from direct sunlight and moisture.

## TROUBLESHOOTING

If you encounter issues with your H.Koenig KM78, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power switch off; head not locked down; attachment not correctly installed.	Ensure plug is firmly in outlet; turn speed dial to "0" then desired speed; ensure head is fully lowered and locked; check attachment installation.
Motor stops during operation.	Overload protection activated; ingredients too tough.	Turn off and unplug. Reduce load or cut ingredients into smaller pieces. Let motor cool for 15-20 minutes before restarting.
Loud noise or vibration.	Appliance not on a stable surface; attachment not properly secured; too much load.	Place on a flat, stable surface; ensure attachment is clicked into place; reduce ingredients.
Blender leaks.	Blade assembly not tightened; lid not properly sealed; jug not correctly seated on base.	Tighten blade assembly; ensure lid is securely closed; re-seat jug on motor base.
Meat grinder clogs.	Meat not cut small enough; too much gristle/fat; feeding too fast.	Cut meat into smaller, boneless, gristle-free pieces; feed slowly; use reverse function (if available) or disassemble and clean.

## SPECIFICATIONS

Feature	Detail
Model	KM78
Power	1000 W
Voltage	220-240V ~ 50/60Hz
Mixing Bowl Capacity	5 Liters (Stainless Steel)
Blender Jug Capacity	1.5 Liters (Glass)
Speed Settings	6 Speeds + Pulse Function
Included Attachments	Dough Hook, Flat Beater, Whisk, Glass Blender, Meat Grinder

## WARRANTY AND SUPPORT

H.Koenig products are manufactured to the highest quality standards. This product is covered by a standard

manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please refer to the warranty card included with your product for specific terms and conditions, including warranty period and claim procedures.

For technical support, spare parts, or warranty claims, please contact H.Koenig customer service through their official website or the contact information provided in your product's packaging. Please have your model number (KM78) and proof of purchase ready when contacting support.

*Note: The warranty does not cover damage caused by misuse, neglect, unauthorized modifications, or normal wear and tear.*