

Fujifilm FinePix XP60 Yellow

Fujifilm FinePix XP60 Digital Camera User Manual

Model: FinePix XP60 Yellow

Introduction	Features	Setup	Operating	Maintenance & Support	Troubleshooting	Specifications	Warranty
--------------	----------	-------	-----------	--------------------------	-----------------	----------------	----------

1. INTRODUCTION

Welcome to the user manual for your Fujifilm FinePix XP60 Digital Camera. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your camera. Please read it thoroughly to ensure optimal performance and longevity of your device.

The FinePix XP60 is a robust and versatile digital camera designed to capture high-quality images and videos in various challenging environments. Its durable construction makes it an ideal companion for outdoor adventures.

2. KEY FEATURES

- **16.4MP CMOS Sensor:** Delivers high-resolution images with excellent clarity, even in low-light conditions.
- **4-Way Protection:**
 - **Waterproof:** Submersible up to 20 feet (6 meters).
 - **Shockproof:** Withstands drops from up to 5 feet (1.5 meters).
 - **Freezeproof:** Operates in temperatures as low as 14°F (-10°C).
 - **Dustproof:** Sealed against dust and sand.
- **5x Optical Zoom & 10x Intelligent Digital Zoom:** Features a FUJINON lens (28mm - 140mm equivalent) for versatile framing, from wide-angle landscapes to distant subjects.
- **Optical Image Stabilization:** Reduces blur caused by camera shake, especially when zoomed in.
- **Full HD Movies (1080i/60fps):** Records high-definition video with a dedicated movie recording button.
- **High-Speed Movie:** Capture fast-moving action at up to 240fps for slow-motion playback.
- **New "Burst Mode Button":** Enables rapid continuous shooting at up to 10 frames/sec (full resolution) or 60 frames/sec (ultra-high-speed bursts).

- **Bright and Clear LCD:** 2.7-inch LCD monitor with anti-reflective coating for excellent visibility in bright sunlight.
- **Advanced Filters:** Seven special filters (Pop Color, Toy Camera, Miniature, Soft Focus, Partial Color, Cross Screen, High-Key) for creative photo effects.
- **Motion Panorama 360:** Effortlessly creates stunning 360-degree panoramic shots.
- **Versatile Shooting Modes:** Includes Scene Recognition Auto, Tracking Auto Focus, Pro Low-light Mode, Dynamic Range (HDR), Natural Light and Flash, and Face Detection.
- **Social Networking Integration:** Tag photos and videos in-camera for automatic upload to FACEBOOK or YouTube when connected to a PC.

3. SETUP

3.1. Unpacking the Camera

Carefully remove all contents from the packaging. Ensure you have the Fujifilm FinePix XP60 camera and the included Lithium Ion battery.

3.2. Inserting the Battery and Memory Card

The FinePix XP60 uses one Lithium Ion battery (included). A memory card (SD/SDHC/SDXC, not included) is required to store photos and videos.

1. Locate the battery/memory card compartment door on the side of the camera.
2. Slide the lock mechanism to open the door. The door features a secure turn-lock knob for enhanced water resistance.
3. Insert the battery with the correct orientation, ensuring it clicks into place.
4. Insert the memory card into its slot until it clicks.
5. Close the compartment door firmly and slide the lock mechanism back to secure it. Ensure it is fully sealed to maintain waterproof integrity.

3.3. Initial Power On

Press the **ON/OFF** button located on the top of the camera to power it on. The LCD monitor will display the initial setup screen, prompting you to set the date, time, and language. Follow the on-screen instructions using the directional buttons and the **MENU/OK** button.



Figure 1: Top view of the camera, highlighting the power and shutter buttons.

4. OPERATING THE CAMERA

4.1. Basic Photography

To take a photo:

1. Turn on the camera by pressing the **ON/OFF** button.
2. Frame your shot using the LCD monitor.
3. Press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
4. Press the shutter button all the way down to take the picture.



Figure 2: Rear view of the camera, showing the LCD and control layout.

4.2. Zoom Operation

Use the **W** (Wide) and **T** (Telephoto) buttons located on the back of the camera to adjust the optical and intelligent digital zoom.

4.3. Burst Mode

The FinePix XP60 features a dedicated **Burst Mode Button** for quick access to continuous shooting. Press this button to switch into continuous shooting mode and capture a rapid sequence of images.

4.4. Video Recording

To record a video, press the dedicated red **Movie Recording Button** on the back of the camera. Press it again to stop recording. The camera supports Full HD (1080i/60fps) and high-speed video modes.

4.5. Using Advanced Filters

Access the camera's menu to select from seven special filters to add creative effects to your photos. You can preview the effect on the LCD monitor before taking the shot.

4.6. Motion Panorama 360

Select "Motion Panorama 360" mode from the shooting options. Press the shutter button and sweep the camera across the scene. The camera will automatically stitch the images together to create a seamless 360-degree panorama.

4.7. Underwater Photography

Ensure the battery/memory card compartment door is securely closed and locked before submerging the camera. The FinePix XP60 is waterproof up to 20 feet (6 meters). Use the camera's underwater scene mode for optimized color and clarity.



Figure 3: The FinePix XP60 demonstrating its waterproof capability.

4.8. Connecting to a Computer for Upload

The camera allows you to tag photos and videos for direct upload to FACEBOOK or YouTube. Connect the camera to your computer using a USB cable (not included). The tagged files will automatically upload to the designated sites via MyFinePix Studio software (if installed).

5. MAINTENANCE

5.1. Cleaning the Camera

- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water and then dry thoroughly.
- **Lens and LCD:** Use a lens brush or a soft, lint-free cloth specifically designed for optical surfaces. Do not use abrasive cleaners or solvents.

5.2. Waterproof Seal Care

After using the camera in water, rinse it with fresh water to remove salt, sand, or chlorine. Dry the camera thoroughly before opening any compartments. Inspect the rubber seals (gaskets) around the battery/memory card compartment for any debris, cracks, or damage. Keep the seals clean and free of foreign particles to maintain waterproof integrity. Do not use sharp objects to clean the seals.

5.3. Battery Care

- Charge the battery fully before each use, especially for extended shooting sessions.
- Store the battery in a cool, dry place when not in use.
- Avoid exposing the battery to extreme temperatures.
- If the camera will not be used for an extended period, remove the battery.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your FinePix XP60. For more detailed troubleshooting, please refer to the full product manual available on the Fujifilm support website.

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery. Reinsert the battery correctly.
Cannot take pictures.	Memory card is full, locked, or not inserted.	Delete some images, replace the card, unlock the card, or insert it correctly.
Images are blurry.	Camera shake, subject movement, or out of focus.	Hold the camera steady, use optical image stabilization, ensure proper focus.
Water inside the camera.	Compartment door not properly sealed.	Immediately power off the camera, remove battery and memory card, and seek professional service. Ensure all seals are clean and properly closed before water use.

7. SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Number	FinePix XP60 Yellow
Product Dimensions	1 x 4 x 2.6 inches
Item Weight	6.4 ounces
Sensor Technology	CMOS
Optical Zoom	5x
Maximum Focal Length	140 Millimeters
Image Stabilization	Sensor-shift
Supported File Format	JPEG (Exif Ver 2.3)
Batteries	1 Lithium Ion battery (included)
Waterproof Rating	IPX8 (up to 6.0m, within 120min.)
Shockproof Rating	MIL-STD-810F-516.5 Fuji's standard; 1.5m.
Dustproof Rating	IP6X

8. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official Fujifilm website. Fujifilm provides customer support for product inquiries, technical assistance, and service requests.

Fujifilm Support: www.fujifilm.com/us/en/consumer/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00ATM1MF6>

More documents and user manuals: <https://manuals.plus/>