

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm FinePix XP60 Digital Camera Instruction Manual

Fujifilm FinePix XP60 Blue

Fujifilm FinePix XP60 Digital Camera User Manual

Model: FinePix XP60 Blue

Brand: Fujifilm



Image: Fujifilm FinePix XP60 Digital Camera, showcasing its robust design and key features like 6m/20ft waterproof and 1.5m/5ft shockproof capabilities.

1. INTRODUCTION

The Fujifilm FinePix XP60 is a durable and versatile 16 MP digital camera designed for active lifestyles. It features a robust construction that is **waterproof to 20ft (6m)**, **shockproof to 5ft (1.5m)**, **freezeproof to 14°F (-10°C)**, and **dustproof**, making it an ideal companion for various environments. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your FinePix XP60 camera.

Please read this manual thoroughly to ensure proper use and to maximize the performance and longevity of your camera.

2. SAFETY INFORMATION

Always observe the following precautions to prevent injury or damage to the camera.

- **Waterproof and Shockproof Limits:** Adhere strictly to the specified waterproof depth (20ft/6m) and shockproof height (5ft/1.5m). Exceeding these limits may cause damage.
- **Temperature Limits:** Do not expose the camera to temperatures outside its operating range (14°F to 104°F / -10°C to 40°C).
- **Battery Safety:** Use only the specified battery. Do not disassemble, heat, or short-circuit the battery. Dispose of batteries properly.
- **Dust and Debris:** Ensure the battery/memory card compartment door is securely closed before exposing the camera to water, dust, or sand. Clean any debris from the seals.
- **Cleaning:** Use a soft, dry cloth for cleaning. For stubborn dirt, a slightly damp cloth may be used, but ensure no moisture enters the camera.

3. SETUP

3.1 Unpacking

Verify that all items are present in the package:

- Fujifilm FinePix XP60 Digital Camera
- Battery
- USB Cable (for charging and data transfer)
- AC Power Adapter
- Strap

3.2 Battery and Memory Card Installation

The camera uses one Lithium Ion battery (included).

1. Locate the battery/memory card compartment door on the side of the camera.
2. Slide the lock mechanism and open the door.

3. Insert the battery with the correct orientation, ensuring it clicks into place.
4. Insert an SD/SDHC/SDXC memory card into the designated slot until it clicks.
5. Close the compartment door firmly until it locks securely. **Important:** Ensure the door is completely sealed to maintain waterproof and dustproof integrity.

3.3 Charging the Battery

Connect the camera to the AC power adapter using the supplied USB cable to charge the battery. The charging indicator will illuminate.

3.4 Initial Power On and Basic Settings

Press the power button to turn on the camera. Follow the on-screen prompts to set the date, time, and language.

4. OPERATING THE CAMERA

4.1 Power On/Off

Press the **POWER** button located on the top of the camera to turn it on or off.

4.2 Basic Photography

- **Shutter Button:** Press halfway to focus, press fully to take a picture.
- **Zoom:** Use the zoom lever to adjust the 5x optical zoom (28-140mm equivalent) or up to 10x intelligent digital zoom.
- **Tracking Auto Focus:** Keeps fast-moving subjects in focus, even when zoomed in.
- **Burst Mode:** The dedicated **BURST MODE BUTTON** allows instant switching to continuous shooting. Capture up to 10 frames/sec (max. 10 frames) at full resolution or ultra-high-speed bursts at 60 frames/sec (max. 70 frames at 16:9 S size).

4.3 Video Recording

- **Dedicated Movie Button:** Press the movie recording button to start/stop recording Full HD video (1920 x 1080 pixels) at 60 frames/second (1080i/60fps).
- **High-Speed Movie:** Record slow-motion video at speeds up to 240fps (320 x 120 pixels), 160fps (320 x 240 pixels), or 80fps (VGA 640 x 480 pixels).
- **Movie Editing:** Utilize in-camera features like "movie trimming" to cut unwanted footage and "movie join" to combine multiple clips.
- **Noise Cancellation:** The camera features noise cancellation to minimize zoom lens sounds during recording.

4.4 Shooting Modes and Features

- **6 Scene SR AUTO:** Automatically optimizes camera settings for various scenes.
- **Advanced Filters:** Apply creative effects such as Pop Color, Toy Camera, Miniature, Soft Focus, Partial Color (Red/Orange/Yellow/Green/Blue/Purple), Cross Screen, and High-Key.
- **Motion Panorama 360:** Sweep the camera to effortlessly create stunning 360° panoramic shots.
- **3D Shooting (Individual Shutter 3D):** Capture two exposures to create images with a 3D effect.
- **Pro Low-light Mode:** Combines multiple exposures to reduce noise in low-light conditions.

- **Dynamic Range (HDR):** Captures three exposures (under, normal, over) and combines them for balanced detail in shadows and highlights.
- **Natural Light and with Flash:** Takes two shots, one with natural light and one with Intelligent Flash, allowing you to choose the best result.
- **Face Detection:** Optimizes focus and exposure for up to 6 faces, includes red-eye removal and a self-timer function that activates when faces are detected.

4.5 Playback

Use the playback button to review your photos and videos on the bright, anti-reflective LCD monitor. The LCD brightness adjusts automatically for optimal visibility.

4.6 Connecting to a Computer and Sharing

The FinePix XP60 allows for easy sharing of your images and videos:

- **In-Camera Tagging:** Tag photos and movies for upload to FACEBOOK or YouTube directly on the camera.
- **Automatic Upload:** When connected to your computer, marked images and videos will automatically upload via MyFinePix Studio, eliminating manual selection and processing.

5. MAINTENANCE

5.1 Cleaning the Camera

- **Lens and LCD:** Use a soft, lint-free cloth specifically designed for optical surfaces. For stubborn smudges, use a lens cleaning solution sparingly.
- **Camera Body:** Wipe with a soft, dry cloth. For dirt, use a cloth lightly dampened with water. Do not use organic solvents.
- **Waterproof Seals:** After use in water, rinse the camera with fresh water and dry thoroughly with a soft cloth. Inspect the seals around the battery/memory card compartment for any debris or damage before and after each use.

5.2 Battery Care

To prolong battery life, avoid exposing it to extreme temperatures. Store the battery in a cool, dry place when not in use. If the camera will not be used for an extended period, remove the battery.

5.3 Storage

Store the camera in a dry, well-ventilated area, away from direct sunlight and high humidity. If storing for a long period, remove the battery and memory card.

6. TROUBLESHOOTING

If you encounter issues with your FinePix XP60, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is depleted. Charge the battery. / Battery is inserted incorrectly. Reinsert the battery.
"Battery door not closed" error.	The battery/memory card compartment door is not fully sealed. Ensure it is clicked shut and no debris is obstructing the seal.
Images are blurry.	Camera shake. Hold the camera steady or use a tripod. / Subject is out of focus. Ensure the camera has focused before pressing the shutter fully. / Lens is dirty. Clean the lens.
Battery drains quickly.	Frequent use of flash or video recording. / LCD brightness is set too high. / Battery is old and needs replacement.
Cannot record video.	Memory card is full. Delete some files or insert a new card. / Memory card is too slow for video recording. Use a higher speed card.

If the problem persists after trying these solutions, please contact Fujifilm customer support.

7. SPECIFICATIONS

Key technical specifications for the Fujifilm FinePix XP60 Digital Camera:

Feature	Detail
Sensor	16 MP CMOS Sensor
Optical Zoom	5x (28-140mm equivalent)
Digital Zoom	10x Intelligent Digital Zoom
Image Stabilization	Sensor-shift Optical Image Stabilization
Video Recording	Full HD 1080i/60fps (1920 x 1080 pixels)
High-Speed Video	Up to 240fps (320 x 120 pixels)
Waterproof Rating	20ft (6m)
Shockproof Rating	5ft (1.5m)
Freezeproof Rating	14°F (-10°C)
Dustproof Rating	IP6X
Display	2.7-inch LCD with anti-reflective coating
Dimensions (W x H x D)	1 x 4 x 2.6 inches (approx.)

Feature	Detail
Weight	6.4 ounces (approx.)
Battery Type	Lithium Ion (included)

8. WARRANTY INFORMATION

Based on available product information, this product is sold "as is" with no returns. Specific warranty details are not provided in the product description. Please refer to your point of purchase or contact Fujifilm directly for any applicable warranty information.

9. SUPPORT

For further assistance, technical support, or service inquiries regarding your Fujifilm FinePix XP60 Digital Camera, please visit the official Fujifilm website or contact their customer service department.

Fujifilm Official Website: www.fujifilm.com

© 2023 Fujifilm. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question