

[Manuals.plus](#) /

› [Wildgame Innovations](#) /

› Wildgame Innovations Razor 6 Infrared Digital Scouting Camera User Manual

Wildgame Innovations Razor 6

Wildgame Innovations Razor 6 Infrared Digital Scouting Camera User Manual

INTRODUCTION

The Wildgame Innovations Razor 6 is a digital scouting camera designed for capturing still images and video footage of wildlife. This camera features a 4 MP sensor, infrared flash for night vision, and Flextime Time Lapse Technology. It is equipped with Redux Anti-Blur technology and a 1-second trigger speed to ensure clear captures. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your Razor 6 camera.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Wildgame Innovations Razor 6 Digital Scouting Camera
- USB Cable
- Mounting Strap
- Flextime Software (digital download or included media)

CAMERA COMPONENTS

Familiarize yourself with the key components of your Razor 6 camera:



Image Description: A front view of the Wildgame Innovations Razor 6 camera. The camera is black with a camouflage pattern. Visible components include the lens, the infrared LED array, and the motion sensor window. The camera features a rugged, weather-resistant casing suitable for outdoor use.

- **Lens:** Captures images and video.
- **Infrared LEDs:** Provide illumination for night vision without a visible flash.
- **PIR Sensor:** Passive Infrared sensor detects motion to trigger the camera.
- **Control Panel:** Located inside the camera housing, includes LCD screen and navigation buttons.
- **Battery Compartment:** Holds the required batteries (typically 8 AA batteries, not included).
- **SD Card Slot:** For inserting an SD memory card (not included) to store photos and videos.
- **USB Port:** For connecting the camera to a computer using the provided USB cable.
- **Mounting Bracket/Strap Slots:** For securing the camera to a tree or post.

SETUP

1. Install Batteries

1. Open the camera housing latch.
2. Locate the battery compartment.
3. Insert 8 new AA alkaline or lithium batteries, observing the polarity markings (+/-).
4. Close the battery compartment securely.

2. Install SD Card

1. With the camera housing open, locate the SD card slot.
2. Insert a formatted SD card (up to 32GB recommended) into the slot with the metal contacts facing down. Push until it clicks into place.
3. To remove, push the card in again until it springs out.

3. Mounting the Camera

1. Select a suitable location, such as a tree or post, ensuring a clear view of the desired area.
2. Thread the provided mounting strap through the slots on the back of the camera.
3. Securely fasten the strap around the mounting surface. Adjust the camera angle as needed.
4. Ensure the camera is stable and not prone to movement from wind or animals.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To power on, slide the power switch to the 'ON' position. The LCD screen will illuminate.
- To power off, slide the power switch to the 'OFF' position.

2. Menu Navigation and Settings

Once powered on, use the navigation buttons (UP, DOWN, LEFT, RIGHT, OK/ENTER) to access and adjust camera settings.

- **Mode Selection:** Choose between Photo, Video, or Time-Lapse mode.
- **Resolution:** Set image resolution (e.g., 4MP) or video resolution (e.g., HD 720).
- **Trigger Speed:** Adjust the delay before the camera takes a picture after detecting motion (default is 1 second).
- **Flash Range:** The camera features a 60 ft. flash range. This setting is typically automatic.
- **Delay:** Set the time interval between consecutive captures.
- **Date/Time:** Set the current date and time for accurate timestamps on your media.
- **Flextime Technology:** Configure time-lapse intervals for specific periods. Refer to the Flextime software for advanced settings.

3. Retrieving Images and Videos

- **Via SD Card:** Power off the camera, remove the SD card, and insert it into a computer's SD card reader.
- **Via USB Cable:** Connect the camera to your computer using the provided USB cable. The camera should appear as a removable drive, allowing you to access files.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and PIR sensor window. Avoid abrasive materials or harsh chemicals.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the LCD screen or when performance degrades. Always use fresh batteries of the same type.
- **SD Card Management:** Regularly format your SD card to prevent data corruption and ensure optimal performance. Back up important files before formatting.
- **Storage:** When not in use, store the camera in a cool, dry place. Remove batteries if storing for extended periods to prevent leakage.

TROUBLESHOOTING

Problem	Possible Solution
Camera not powering on	Check battery installation and ensure batteries are fresh. Verify the power switch is in the 'ON' position.
No images/videos captured	Ensure the SD card is properly inserted and formatted. Check PIR sensor for obstructions. Verify camera settings (e.g., delay, mode).
Poor image/video quality	Clean the camera lens. Ensure adequate lighting (for day shots) or proper distance for IR flash (for night shots). Check resolution settings.
Camera not detecting motion	Ensure the PIR sensor is clear. Adjust camera placement to optimize motion detection range. Check sensitivity settings if available.
Flextime software issues	Refer to the Flextime software documentation or Wildgame Innovations support for specific instructions and troubleshooting.

SPECIFICATIONS

Feature	Detail
Effective Still Resolution	4 MP
Video Capture Resolution	HD 720 (4 MP)
Flash Type	21 pc High Intensity LED Infrared Flash
Flash Range	Up to 60 feet
Trigger Speed	1 second
Technology	Redux Anti-Blur, Flextime Time Lapse
Power Source	AC/DC (Batteries not included)
Waterproof Rating	IP54
Connectivity Technology	Wireless (Wi-Fi)
Control Method	Remote, Android Controller Type
Item Dimensions	4 x 8 x 12 inches
Model Number	M6

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Wildgame Innovations Razor 6 camera, please refer to the official Wildgame Innovations website or contact their customer service department directly. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question