

Manuals.plus /

› NordicTrack /

› NordicTrack T7-SI Treadmill Safety Key User Manual

NordicTrack NTL079080

NordicTrack T7-SI Treadmill Safety Key User Manual

Model: NTL079080 | Part Number: 268449

PRODUCT OVERVIEW

This manual provides essential information for the proper use and maintenance of your NordicTrack T7-SI Treadmill Safety Key. This safety key is a critical component designed to ensure the safe operation of compatible NordicTrack treadmills by immediately stopping the treadmill if the user falls or steps off.



Image: NordicTrack Treadmill Safety Key. The image displays the safety key, which consists of a rectangular red magnetic block connected by a black braided cord to a black plastic clip. The red block is designed to attach to the treadmill's console, while the clip attaches to the user's clothing.

Compatible Models:

- Epic: TL 1700 - EPTL796100
- Healthrider: HRTL785090 H75t
- Image: 10.4QD - IMTL14990

- Lifestyler: 2100 - 831.287241
- NordicTrack:
 - T7.3 - NCTL178100
 - T7si - 831.248670, 831.248671, 831.248672, 831.248673, NTL079080, NTL079081, NTL079082, NTL079083
 - T9ci - 831.248790, 831.248791, 831.308780, NTL099080, NTL099081
- V4000 - RBTL17919

SETUP

The safety key is designed for immediate use with compatible treadmills. No assembly is required.

1. **Locate the Safety Key Receptacle:** Identify the designated safety key receptacle on your treadmill's console. This is typically a magnetic port or a slot designed to hold the safety key's magnetic end.
2. **Insert the Safety Key:** Firmly insert the red magnetic end of the safety key into the receptacle on the treadmill console. Ensure it is securely seated. The treadmill will not operate without the safety key properly inserted.
3. **Attach the Clip:** Clip the black plastic end of the safety key cord to your clothing (e.g., waistband, shirt) before beginning your workout. This ensures that if you move too far from the console or fall, the key will detach, stopping the treadmill.

OPERATING INSTRUCTIONS

The safety key is an essential safety feature. Always use it during treadmill operation.

1. **Before Starting:** Ensure the safety key is properly inserted into the treadmill console and the clip is securely attached to your clothing.
2. **During Operation:** The treadmill will operate normally with the safety key in place. If the safety key is pulled from the console for any reason, the treadmill will immediately come to a stop. This is a safety mechanism to prevent injury.
3. **Emergency Stop:** In an emergency, pulling the safety key from the console is the quickest way to stop the treadmill.
4. **After Use:** Once your workout is complete and the treadmill has stopped, you may remove the safety key from the console. Store it in a safe place to prevent loss.

MAINTENANCE

The NordicTrack Treadmill Safety Key requires minimal maintenance to ensure its longevity and proper function.

- **Cleaning:** Wipe the safety key with a soft, dry cloth periodically to remove dust or debris. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly inspect the cord for any signs of fraying, cuts, or damage. Check the magnetic end for any cracks or chips, and ensure the clip mechanism is intact and functions correctly.
- **Storage:** Store the safety key in a dry place, away from extreme temperatures and direct sunlight, when not in use. Avoid placing heavy objects on the key or cord.
- **Replacement:** If the safety key shows any signs of damage or malfunction, replace it immediately with an official NordicTrack replacement part to ensure continued safety.

TROUBLESHOOTING

If you encounter issues with your treadmill related to the safety key, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Treadmill does not start.	Safety key not inserted correctly or missing.	Ensure the safety key is fully and securely inserted into its receptacle on the console.
Treadmill stops unexpectedly during use.	Safety key has been dislodged from the console.	Re-insert the safety key. If this happens frequently, ensure the clip is securely attached to your clothing and you are not pulling on the cord inadvertently.
Safety key magnet does not hold firmly.	Magnet is weakened or damaged; receptacle may be dirty.	Clean the safety key receptacle on the treadmill. If the magnet is still weak, the safety key may need to be replaced.

If troubleshooting steps do not resolve the issue, please contact NordicTrack customer support or a qualified service technician.

SPECIFICATIONS

Feature	Detail
Model Number	NTL079080
Part Number	268449
Package Dimensions	3.62 x 2.2 x 0.79 inches
Item Weight	0.63 ounces
Compatibility	Specific NordicTrack, Epic, Healthrider, Image, Lifestyler, and V4000 treadmill models (refer to Product Overview)
Material	Plastic, Magnet, Cord

WARRANTY INFORMATION

This NordicTrack Treadmill Safety Key comes with a **30 Days Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

For warranty claims or inquiries, please retain your proof of purchase and contact NordicTrack customer support.

SUPPORT

For further assistance, technical support, or to order replacement parts, please visit the official NordicTrack website or contact their customer service department.

NordicTrack Official Website: www.nordictrack.com

Please have your treadmill model number and the safety key part number (NTL079080, 268449) ready when

contacting support.