

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beetel](#) /
- › [Beetel B77 Corded Feature Phone User Manual](#)

Beetel B77

Beetel B77 Corded Feature Phone User Manual

Model: B77

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Beetel B77 Corded Feature Phone. Please read this manual carefully before using the phone to ensure proper functionality and to maximize its features.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present:

- 1 x Beetel B77 Corded Feature Phone



Image: The Beetel B77 Corded Feature Phone, black in color, with its handset resting in the cradle and the coiled cord visible. The phone features a numeric keypad, function buttons, and a space for a paper directory.

SETUP

1. **Unpacking:** Carefully remove the phone and all accessories from the packaging.

2. **Connecting the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the designated port on the phone base.
3. **Connecting to the Telephone Line:** Connect one end of the telephone line cord into the phone's line jack and the other end into your wall telephone outlet.
4. **Placement:** Place the phone on a stable, flat surface, away from direct sunlight, heat sources, and moisture.

OPERATING INSTRUCTIONS

Basic Call Functions

- **Making a Call:** Lift the handset, wait for a dial tone, and then dial the desired phone number.
- **Answering a Call:** When the phone rings, lift the handset to answer.
- **Ending a Call:** Place the handset back into the cradle.
- **Redial Function:** Lift the handset and press the **Redial** button to call the last dialed number.

Advanced Features

- **Ringer Volume Control:** Adjust the ringer volume using the switch located on the phone base.
- **Mute Function:** During a call, press the **Mute** button to temporarily disable your microphone. Press it again to unmute.
- **Flash Function:** Use the **Flash** button for call waiting, transferring calls, or initiating a three-way conference call (requires network service support).
- **Pause Function:** Press the **Pause** button to insert a pause in a dialing sequence, useful for accessing external lines or voicemail systems.
- **Intercom Facility:** This feature allows internal communication between connected phones (e.g., in an office boss-secretary setup). Consult your system administrator or the phone system's specific instructions for configuration and use.
- **Call Transfer:** For transferring calls, typically involves pressing **Flash**, dialing the extension, and then hanging up. Specific steps depend on your PBX or network service.
- **Holding Lines/Music on Hold:** This function allows you to place a caller on hold. The specific method may vary depending on your telephone system.
- **Pulse/Tone Dialing:** The phone supports both Pulse and Tone dialing. A switch on the phone base usually allows selection between these modes. Ensure it is set to the correct mode for your telephone line.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the phone's surface. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the phone for an extended period, keep it in a cool, dry place, away from direct sunlight.
- **Cord Care:** Avoid tangling or excessive pulling of the handset and line cords to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line not connected or faulty.	Check all cable connections. Test with another phone if possible. Contact your telephone service provider.
Cannot hear caller / Caller cannot hear me	Handset cord loose or faulty; Mute function activated.	Ensure handset cord is securely plugged in. Press the Mute button to deactivate.

Problem	Possible Cause	Solution
Phone not ringing	Ringer volume set to low or off.	Adjust the ringer volume control switch.
Cannot dial out	Incorrect dialing mode (Pulse/Tone); Line issue.	Ensure the Pulse/Tone switch is set correctly. Verify line connection.

SPECIFICATIONS

Feature	Detail
Model Number	B77
Type	Corded Feature Phone
Color	Black
Material	Plastic
Dimensions (Package)	24.8 x 24.4 x 13.6 cm
Item Weight	1.59 kg
Dialing Mode	Pulse/Tone Switchable
Key Features	Ringer volume control, Mute, Redial, Flash, Pause, Intercom, Call Transfer, Hold

WARRANTY AND SUPPORT

Your Beetel B77 Corded Feature Phone comes with a manufacturer-sponsored warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including the warranty period and coverage details. For any service-related queries, technical assistance, or to claim warranty, you may contact Beetel India Service Facilities across India. Keep your retail invoice and dealer-stamped warranty card handy as proof of purchase.

Disclaimer: The warranty is subject to the manufacturer's terms. Any claim or dispute is subject to the jurisdiction of the court where the store head office is situated.

SAFETY INFORMATION

- Do not expose the phone to water or excessive moisture.
- Avoid dropping the phone or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the phone yourself. Refer to qualified service personnel.
- Keep the phone away from sources of heat and direct sunlight.