

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Beetel](#) /
- › Beetel M53 CLI Corded Phone Instruction Manual

Beetel M53

Beetel M53 CLI Corded Phone

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Beetel M53 CLI Corded Phone. This manual provides detailed instructions for setting up, operating, and maintaining your new telephone. Please read this manual carefully before use to ensure proper functionality and to maximize your experience with the product.



Figure 1: Beetel M53 CLI Corded Phone. This image displays the main unit of the Beetel M53 corded phone, showcasing its compact design and keypad.

Setup

Follow these steps to set up your Beetel M53 CLI Corded Phone:

1. **Connect the Handset:** Plug one end of the coiled cord into the handset and the other end into the jack labeled **HANDSET** on the side of the phone base.
2. **Connect the Line Cord:** Plug one end of the telephone line cord into the jack labeled **LINE** on the back of the phone base. Plug the other end into your telephone wall jack.
3. **Power Connection:** The phone is powered via the telephone line. No external power adapter is required for basic operation.
4. **Initial Display:** Upon successful connection, the 12-digit green/orange backlit LCD will display the current

time and date.



Figure 2: Connection Diagram. This diagram illustrates how to connect the handset and the telephone line cord to the Beetel M53 phone base.

Operating Instructions

Making and Receiving Calls

- **To Make a Call:** Lift the handset or press the **SPEAKER** button. Dial the desired telephone number.
- **To Receive a Call:** When the phone rings, lift the handset or press the **SPEAKER** button.
- **To End a Call:** Place the handset back on the cradle or press the **SPEAKER** button again if using speakerphone.

Caller ID (CLI) Features

The Beetel M53 supports FSK/DTMF compatible caller ID and Centrex enabled CLIP (Calling Line Identification Presentation).

- **Incoming Call Display:** The 12-digit LCD will display the incoming number, new call indicator, total calls, and repeat calls.
- **Incoming Memory:** The phone stores up to 80 incoming call records.
- **Outgoing Memory:** The phone stores up to 24 outgoing call records.
- **Checking Calls:** Use the **UP/DOWN** navigation buttons to scroll through incoming and outgoing call records.
- **Erasing Calls:** While viewing a call record, press the **DELETE** button to erase it.
- **Call Back:** While viewing an incoming call record, press the **CALL BACK** button to dial the number.

LCD Display and Clock

- The 12-digit green/orange backlit LCD provides clear visibility of numbers, time, and date.
- The real-time clock displays the year, date, and month.
- To set the time and date, refer to the specific instructions in the full manual (if available, otherwise this feature is typically automatic or set via network).

Speakerphone Facility

To use the speakerphone, press the **SPEAKER** button during a call or before dialing. Press it again to end the call or switch back to the handset.

Basic Calculator

The phone includes a basic calculator function. To access it, press the **CALC** button (if present, or refer to specific key mapping). Use the numeric keypad for input and the designated function keys for operations.



Figure 3: LCD Display. This image shows the 12-digit LCD of the Beetel M53, illustrating how caller ID information and the real-time clock are displayed.

Maintenance

- **Cleaning:** Wipe the phone with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- **Avoid Liquids:** Keep the phone away from water and other liquids.
- **Temperature:** Avoid exposing the phone to extreme temperatures or direct sunlight.
- **Storage:** If storing the phone for an extended period, disconnect it from the telephone line.

Troubleshooting

Problem	Possible Solution
No dial tone	Check if the telephone line cord is securely connected to both the phone and the wall jack. Test with another phone if available.
Caller ID not displaying	Ensure you have subscribed to Caller ID service from your telephone service provider. Verify the phone is connected correctly.
Display is blank or dim	Check line connection. The display is line-powered. If the issue persists, contact customer support.
Cannot hear caller / Caller cannot hear me	Adjust volume. Check handset cord connection. If using speakerphone, ensure microphone is not obstructed.

Specifications

Feature	Description
Brand	Beetel
Model	M53
Telephone Type	Corded
Material	Plastic
Power Source	Corded Electric (Line Powered)
Answering System Type	Digital
Caller ID	Yes (FSK/DTMF compatible, Centrex enabled CLIP)
Incoming Call Memory	80 records
Outgoing Call Memory	24 records
LCD Display	12-digit, Green/Orange Backlit
Clock	Real time clock with year, date, and month display
Additional Features	Speakerphone, Basic Calculator

Warranty and Support

Your Beetel M53 CLI Corded Phone comes with a standard manufacturer's warranty. Please retain your purchase receipt for warranty claims. For technical support, service, or warranty inquiries, please contact Beetel customer service through their official website or the contact information provided with your purchase documentation.

For further assistance, please visit the [Beetel Store on Amazon](#).

