

Vibe OT795-KO

Vibe Axxess 5-in-1 Universal Remote Instruction Manual

Model: OT795-KO

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Vibe Axxess 5-in-1 Universal Remote. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience. This remote is designed to control up to five different audio/video devices.

2. PRODUCT OVERVIEW

The Vibe Axxess 5-in-1 Universal Remote is designed to consolidate control of multiple home entertainment devices into a single unit. It features dedicated buttons for various functions and device types.





Figure 1: Front view of the Vibe Axxess 5-in-1 Universal Remote. This image displays the remote's layout, including device selection buttons (DVR, VCR, CBL.DTC, HDTV, AUX, DVD, SAT, TV), navigation pad, number keys, and media control buttons (REW, PLAY, FWD, REC, STOP, PAUSE).



Figure 2: Packaging of the Vibe Access 5-in-1 Universal Remote. The packaging highlights the remote's 5-in-1 capability and compatibility with various device types such as DVD/VCR, HDTV, DVD, AUX, and CBL/SAT/CABLE.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the

diagrams inside the compartment.

4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

***Note:** Always use fresh batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.*

3.2 Programming the Remote

To control your devices, the universal remote must be programmed with the correct codes for each device. There are typically two methods for programming:

3.2.1 Direct Code Entry

This method involves entering a specific code from a code list (usually provided with the remote or available online) for your device's brand.

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the desired device button on the remote (e.g., **TV**, **DVD**) for approximately 3 seconds until the indicator light (usually red) illuminates and stays on.
3. While the indicator light is on, enter the 3-digit or 4-digit code for your device's brand using the number keys.
4. If the code is valid, the indicator light will turn off. If the light flashes and remains on, the code was invalid; re-enter the code.
5. Test the remote by pressing the **POWER** button. If the device turns off, the code is correct. If not, try the next code listed for your brand.

3.2.2 Auto Code Search

If you cannot find a code or direct code entry fails, use the auto code search method.

1. Turn on the device you wish to control.
2. Press and hold the desired device button (e.g., **TV**) for approximately 3 seconds until the indicator light illuminates and stays on.
3. While holding the device button, press the **POWER** button once. The indicator light will start flashing, indicating it is searching for a code.
4. Point the remote at the device and wait for the device to turn off. This may take several minutes as the remote cycles through codes.
5. Once the device turns off, immediately press the **ENTER** button to save the code. The indicator light will turn off.
6. Test the remote's functions. If some functions do not work, repeat the auto search process to find a more compatible code.

4. OPERATING INSTRUCTIONS

Once programmed, operating your Vibe Axxess 5-in-1 Universal Remote is straightforward.

1. **Select Device:** Press the corresponding device button (e.g., **TV**, **DVD**, **CBL.DTC**) for the device you wish to control. The indicator light will briefly illuminate to confirm selection.
2. **Power On/Off:** Press the **POWER** button to turn the selected device on or off.
3. **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
4. **Channel Control:** Use the **CH+** and **CH-** buttons to change channels.

5. **Number Keys:** Use the number keys (0-9) to directly enter channel numbers or other numerical inputs.
6. **Navigation:** Use the directional pad (up, down, left, right) and **OK** button for menu navigation.
7. **Media Controls:** Use **PLAY**, **PAUSE**, **STOP**, **REW**, **FWD**, and **REC** for controlling media playback on compatible devices.

5. MAINTENANCE

5.1 Cleaning

To clean your remote, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.

5.2 Battery Replacement

When the remote's performance degrades or the indicator light fails to illuminate, it is time to replace the batteries. Follow the battery installation steps in Section 3.1. Dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

- **Remote not working:**
 - Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
 - Ensure you have selected the correct device button (e.g., **TV** for your television).
 - Verify that the remote is programmed with the correct code for your device. Re-program if unsure.
 - Ensure there are no obstructions between the remote and the device's infrared sensor.
- **Some functions not working:**
 - Some universal remote codes may not support all original remote functions. Try another code for your device brand using the programming steps.
 - Ensure the device you are trying to control supports the specific function (e.g., not all TVs have a dedicated 'INFO' button function).
- **Indicator light not illuminating:**
 - Check and replace batteries.
 - If the issue persists after battery replacement, the remote may be faulty.

7. SPECIFICATIONS

- **Model:** OT795-KO
- **Brand:** Vibe
- **Product Dimensions:** 10.7 x 4 x 0.8 inches
- **Item Weight:** 4 ounces
- **Batteries:** 2 AAA batteries required (not included)
- **Max Number of Supported Devices:** 5
- **Connectivity Technology:** Infrared




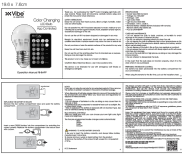

- **Special Feature:** Universal


8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Specific warranty terms may vary.

© 2023 Vibe. All rights reserved.

Related Documents - OT795-KO

	<p>VIBE BlackBox Amplifiers: Stereo 2, Stereo 4, Bass 1 - User Manual & Specifications</p> <p>Comprehensive user manual and technical specifications for VIBE BlackBox car amplifiers, including Stereo 2, Stereo 4, and Bass 1 models. Learn about installation, setup, troubleshooting, product features, and accessories from VIBE.</p>
	<p>VIBE BDC15D1SPL-V4 & BDC18D1SPL-V4 Component Subwoofer User Manual</p> <p>User manual for VIBE BDC15D1SPL-V4 and BDC18D1SPL-V4 component subwoofers, covering specifications, installation, run-in procedures, and warranty information.</p>
	<p>VIBE CVEN Series 7 Component Speaker Systems - Product Guide & Specifications</p> <p>Explore the VIBE CVEN Series 7 component speaker systems, featuring advanced midwoofer, midrange, and tweeter drivers designed for exceptional audio reproduction. Detailed specifications, features, and wiring diagrams for CVEN62C-V4 and CVEN63C-V4 models.</p>
	<p>Vibe Color Changing LED Bulb with App Control - Operation Manual</p> <p>Operation manual for the Vibe™ Color Changing LED Bulb with App Control. Includes safety instructions, specifications, care, remote operation, battery replacement, bulb modes, and FCC compliance.</p>
	<p>Vibe FLED1 LED Wireless Speaker Quick Start Guide</p> <p>Concise guide for the Vibe FLED1 LED Wireless Speaker, detailing charging, pairing, media functions, specifications, warranty, and FCC compliance.</p>

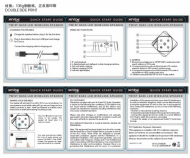

[Vibe Twist Bass LED Wireless Speaker Quick Start Guide](#)

A quick start guide for the Vibe Twist Bass LED Wireless Speaker, covering charging, media key functions, pairing, and FCC statements.