

## OneConcept DB003

# oneConcept DB003 Mini Washing Machine User Manual

Model: DB003 (Article No. MNW2-DB003)

## 1. INTRODUCTION

Thank you for choosing the oneConcept DB003 Mini Washing Machine. This compact and efficient appliance is designed for single households, students, and campers, offering convenient washing and spinning capabilities. With a 2 kg washing capacity and separate spin compartment, it is ideal for small loads and quick laundry cycles. Please read this manual thoroughly before operation to ensure safe and proper use.

## 2. SAFETY INFORMATION

**WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.**

- Ensure the power supply matches the specifications: 220 - 240V, 50/60Hz.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Always unplug the machine from the power outlet before cleaning or maintenance.
- Do not operate the machine if the power cord or plug is damaged.
- Place the machine on a stable, level surface to prevent tipping.
- Do not overload the washing or spinning compartments.
- Only use liquid detergent suitable for washing machines.
- Ensure the spin compartment lid is securely closed before starting the spin cycle.
- The appliance is rated IPX4 for water resistance, meaning it is protected against splashing water from any direction. However, do not expose it to direct water jets or heavy rain.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your oneConcept DB003 Mini Washing Machine.



**Figure 3.1:** Front view of the oneConcept DB003 Mini Washing Machine, showing its compact, two-tone white and blue design.



**Figure 3.2:** Top view of the control panel, featuring the wash timer, wash/drain selector, and spin timer dials, along with the two blue-tinted lids for the wash and spin compartments.



**Figure 3.3:** Top view with both the washing and spinning compartment lids open, revealing the interior drums.



**Figure 3.4:** Side view of the washing machine, showing the integrated drain hose extending from the side.



**Figure 3.5:** Rear view of the washing machine, displaying the power cord storage and the product label with specifications.



**Figure 3.6:** The washing machine positioned next to neatly folded laundry, illustrating its intended use for small loads.



**Figure 3.7:** A size comparison image showing the compact washing machine next to an adult figure, highlighting its small footprint.

### Key Components:

- **Wash Timer:** Dial to set washing duration (0-15 minutes).
- **Wash/Drain Selector:** Switch to select washing mode (Soft/Strong) or drain function.
- **Spin Timer:** Dial to set spinning duration (0-5 minutes).
- **Wash Compartment:** Main compartment for washing clothes (2 kg capacity).
- **Spin Compartment:** Smaller compartment for spinning clothes.
- **Transparent Lids:** Covers for both compartments.
- **Water Inlet Hose:** For filling water into the wash compartment.
- **Drain Hose:** For draining water from the machine.
- **Power Cord:** For connecting to an electrical outlet.

## 4. SETUP

1. **Unpacking:** Carefully remove the washing machine and all accessories from the packaging. Check for any damage.
2. **Placement:** Place the machine on a firm, level, and dry surface. Ensure there is enough space around it for ventilation and operation.
3. **Drainage:** Position the drain hose so that it can discharge water directly into a sink, bathtub, or drain. Ensure the hose is not kinked or blocked. The drain hose is approximately 30cm long, so ensure the machine is placed close to a suitable drain point. Note that this model does not have a pump function, so water drains by gravity.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240V, 50/60Hz).

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Washing Clothes

1. **Load Laundry:** Open the lid of the wash compartment and place up to 2 kg of dry laundry inside. Do not overload.
2. **Add Water:** Fill the wash compartment with water using the water inlet hose or manually with a bucket. Ensure the water level covers the clothes but does not exceed the maximum fill line. Use warm or cold water as appropriate for your laundry.
3. **Add Detergent:** Add the appropriate amount of liquid detergent directly into the wash compartment. Only use liquid detergent.
4. **Select Wash Mode:** Turn the "WASH/DRAIN SELECTOR" dial to either "SOFT" for delicate items or "STRONG" for normal laundry.
5. **Set Wash Timer:** Turn the "WASH TIMER" dial to the desired washing time (up to 15 minutes). The machine will start washing automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the "WASH/DRAIN SELECTOR" dial to "DRAIN" to empty the water from the wash compartment. Ensure the drain hose is positioned correctly.
7. **Rinse (Optional):** For rinsing, refill the wash compartment with clean water and set the wash timer for a short cycle (e.g., 3-5 minutes) without detergent. Drain the water again after rinsing. Repeat if necessary.

### 5.2. Spinning Clothes

1. **Transfer Laundry:** After washing and rinsing, transfer the wet laundry from the wash compartment to the spin compartment. Distribute the laundry evenly to ensure balance.
2. **Secure Spin Lid:** Place the safety cover over the laundry in the spin compartment and close the transparent lid securely.
3. **Set Spin Timer:** Turn the "SPIN TIMER" dial to the desired spinning time (up to 5 minutes). The machine will begin spinning.
4. **Remove Laundry:** Once the spin cycle is complete, open the lid and carefully remove the spun laundry.

## 6. MAINTENANCE

---

Regular cleaning and maintenance will prolong the life of your washing machine.

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Interior:** After each use, wipe down the inside of the wash and spin compartments to remove any residue. You can run a short cycle with clean water occasionally to flush out the system.
- **Drain Hose:** Ensure the drain hose is clear of blockages.
- **Storage:** When not in use for extended periods, ensure the machine is clean and dry. Store it in a cool, dry place.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; timer not set.	Check power connection; check circuit breaker; set wash/spin timer.
Water does not drain.	Drain hose kinked or blocked; drain selector not set to "DRAIN".	Straighten drain hose; clear any blockages; turn selector to "DRAIN". Ensure drain point is lower than the machine.
Machine vibrates excessively during spin.	Laundry unevenly distributed in spin compartment; machine not on a level surface.	Redistribute laundry evenly; ensure machine is on a stable, level surface.
Lid of spin compartment does not close.	Safety cover not properly placed; laundry too high.	Ensure safety cover is flat; reduce laundry load in spin compartment.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

- **Brand:** OneConcept
- **Model:** DB003 (Article No. MNW2-DB003)
- **Type:** Mini Washing Machine with Spin Dryer
- **Washing Power:** 250 W
- **Spin Power:** 120 W
- **Washing Capacity:** 2 kg
- **Wash Timer:** 0 - 15 minutes
- **Spin Timer:** 0 - 5 minutes
- **Power Supply:** 220 - 240V, 50/60Hz
- **Dimensions (L x H x D):** 57 x 58 x 35 cm (approx. 22.4 x 22.8 x 13.8 inches)
- **Power Cable Length:** approx. 1.5 m (4.9 ft)
- **Water Inlet Hose Length:** approx. 1 m (3.3 ft)
- **Drain Hose Length:** approx. 30 cm (11.8 inches)
- **Weight:** approx. 10 kg (22 lbs)
- **Material:** High-quality, stable, and unbreakable plastic
- **Water Resistance:** IPX4

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact your retailer. A notice in French is available upon request from customer service.

For further assistance or technical inquiries, please visit the official OneConcept website or contact their customer service department.

