

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bomann](#) /

› [Bomann ST 5016 CB Sandwich Maker User Manual](#)

## Bomann ST 5016 CB

# Bomann ST 5016 CB Sandwich Maker User Manual

Model: ST 5016 CB

## INTRODUCTION

---

This user manual provides essential information for the safe and efficient operation of your Bomann ST 5016 CB Sandwich Maker. Please read these instructions carefully before first use and keep them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use the insulated handle.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The appliance features overheat protection and a safety shut-off mechanism for enhanced safety.
- Ensure the appliance is placed on a stable, heat-resistant surface, utilizing its rubberized feet for stability.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Bomann ST 5016 CB Sandwich Maker.



**Image 1:** Top view of the Bomann ST 5016 CB Sandwich Maker, highlighting the red power indicator light, green heating indicator light, the locking system on the handle, and the rubberized feet for stability.

- **Power Indicator Light (Red):** Illuminates when the appliance is connected to power.
- **Heating Indicator Light (Green):** Illuminates during the heating cycle and turns off when the desired temperature is reached.
- **Insulated Handle:** Designed for safe opening and closing of the appliance during operation.
- **Locking System:** Secures the top plate during cooking.
- **Non-stick Sandwich Plates:** Triangular plates for preparing two sandwiches, featuring a non-stick coating for easy food release and cleaning.
- **Rubberized Feet:** Provide stability and prevent the appliance from sliding on surfaces.

# BOMANN®



**Image 2:** The Bomann ST 5016 CB Sandwich Maker opened, revealing the non-stick coated triangular cooking plates.

## SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the sandwich maker from its packaging. Remove all packaging materials, stickers, and labels.
2. **Initial Cleaning:** Wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly. The exterior can be wiped with a soft, damp cloth. Do not use abrasive cleaners.
3. **First Heating:** Before first use, plug the appliance into a suitable wall outlet (220-240V). The red power indicator light will illuminate. Allow the appliance to heat up for approximately 5-10 minutes without any food inside. This process helps to burn off any manufacturing residues and may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated.
4. **Cool Down:** Unplug the appliance and allow it to cool completely. Wipe the plates again if necessary. Your sandwich maker is now ready for use.

## OPERATING INSTRUCTIONS

---

1. **Preparation:** Prepare your sandwiches. For best results, use standard sliced bread and avoid overfilling. You may lightly butter the outside of the bread for a crispier finish.
2. **Preheating:** Close the sandwich maker and plug it into a 220-240V wall outlet. Both the red power indicator and green heating indicator lights will illuminate. The green light will turn off once the appliance reaches the optimal cooking temperature, indicating it is ready for use.
3. **Placing Sandwiches:** Open the sandwich maker using the insulated handle. Place one sandwich on each triangular plate. Close the lid and engage the locking system. The green heating light may cycle on and off during cooking to maintain temperature.
4. **Cooking:** Cook for approximately 3-5 minutes, or until the sandwiches are golden brown and the filling is heated through. Cooking time may vary depending on the type of bread, filling, and desired crispness.
5. **Removing Sandwiches:** Carefully open the lid using the insulated handle. Use a heat-resistant plastic or wooden spatula to remove the cooked sandwiches. Do not use metal utensils, as they can damage the non-stick coating.
6. **Finishing:** Unplug the appliance from the wall outlet after use.



**Image 3:** The Bomann ST 5016 CB Sandwich Maker in use, with freshly prepared triangular sandwiches shown on a plate.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your sandwich maker.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
2. **Cleaning Plates:** The non-stick cooking plates are easy to clean. Wipe them with a soft, damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used. Avoid abrasive pads or harsh chemicals that can damage the non-stick coating.
3. **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners.
4. **Do Not Immerse:** Never immerse the sandwich maker, its cord, or plug in water or any other liquid.
5. **Storage:** Once clean and dry, the sandwich maker can be stored in a cool, dry place. Its compact design allows for easy storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet faulty; appliance malfunction.	Ensure the appliance is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer service.
Sandwiches are not cooking evenly or are too soft.	Insufficient preheating; too much filling; cooking time too short.	Ensure the green indicator light has turned off before placing sandwiches. Reduce filling. Increase cooking time slightly.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for the first use. Ensure good ventilation. It should dissipate after a few minutes.
Lid does not close properly.	Overfilled sandwiches.	Reduce the amount of filling in your sandwiches.

## SPECIFICATIONS

**Brand:** Bomann

**Model Number:** ST 5016 CB (650160)

**Power:** 750 Watts

**Voltage:** 220-240 V

**Material:** Plastic housing, Stainless Steel insert, Non-stick coating

**Dimensions (L x W x H):** Approximately 23 x 23 x 8 cm (9.06 x 9.06 x 3.15 inches)

**Weight:** 1.02 Kilograms

**Special Features:** Non-stick coating, Automatic temperature control, Overheat protection, Safety shut-off, Insulated handle, Locking system, Rubberized feet.



**Image 4:** Dimensions of the Bomann ST 5016 CB Sandwich Maker, showing length, width, and height measurements.

## WARRANTY AND SUPPORT

Bomann products are manufactured with quality and care. This product comes with a 2-year availability for spare parts. For technical support, warranty claims, or questions regarding your appliance, please contact Bomann customer service. Refer to your purchase documentation for specific contact details or visit the official Bomann website.

**Website:** [www.bomann.de](http://www.bomann.de) (Example link, actual link may vary by region)