

Manuals.plus /

› Bosch /

› Bosch MMR08A1GB Universal Chopper Instruction Manual

## Bosch MMR08A1GB

# Bosch MMR08A1GB Universal Chopper Instruction Manual

Model: MMR08A1GB

## 1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, maintenance, and care of your Bosch MMR08A1GB Universal Chopper. Please read these instructions thoroughly before first use and keep them for future reference. This appliance is designed for household use only.

The Bosch MMR08A1GB Universal Chopper is a versatile kitchen appliance designed to simplify food preparation tasks such as chopping, mincing, and whipping. With its powerful 400W motor and compact design, it offers convenience and efficiency for daily use.

## 2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent personal injury or damage to the appliance.

### 2.1 General Safety

- Read all instructions before operating the appliance.
- Keep the appliance and its cord out of reach of children.
- Supervise children to ensure they do not play with the appliance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always disconnect the appliance from the power supply when unattended, before assembly, disassembly, or cleaning.

### 2.2 Electrical Safety

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

- Never immerse the motor unit in water or any other liquid.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Avoid letting the power cord hang over the edge of a table or counter, or touch hot surfaces.

## 2.3 Usage Safety

- The blades are very sharp. Handle them with extreme care during assembly, disassembly, and cleaning.
- Never touch the moving parts during operation.
- Do not overfill the chopping bowl. Observe the maximum fill line.
- Do not operate the appliance empty.
- Ensure the lid is securely locked in place before operating.

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Bosch Universal Chopper.



Image 1: Main components of the Bosch MMR08A1GB Universal Chopper, including the motor unit, chopping bowl, and stainless steel blade.

### 3.1 Components

- **Motor Unit:** Contains the 400W motor and control button.
- **Chopping Bowl:** 800 ml capacity plastic bowl with measurement markings.
- **Stainless Steel Blade:** Sharp blade for chopping and mincing.
- **Whipping Disk:** Accessory for whipping cream and eggs.



Image 2: The chopping bowl features clear measurement markings for precise ingredient quantities.



Image 3: The whipping disk accessory, used for aerating liquids like cream and eggs.

### 3.2 Key Features

- **Powerful Motor:** 400 Watt motor for efficient processing.
- **Versatile:** Suitable for chopping, mincing, and whipping.
- **Generous Capacity:** 800 ml plastic bowl.
- **Easy to Clean:** Dishwasher-safe bowl, blade, and whipping disk.
- **Compact Design:** Facilitates easy storage.

## 4. SETUP AND ASSEMBLY

Follow these steps to correctly assemble your chopper before use.

1. **Unpack:** Carefully remove all components from the packaging. Dispose of packaging materials responsibly.
2. **Clean:** Before first use, wash the chopping bowl, stainless steel blade, and whipping disk in warm soapy water, then rinse and dry thoroughly. Wipe the motor unit with a damp cloth.
3. **Place Bowl:** Position the chopping bowl on a stable, flat surface.
4. **Insert Blade/Disk:** For chopping, carefully place the stainless steel blade onto the central pin inside the bowl. For whipping, place the whipping disk onto the central pin.
5. **Add Ingredients:** Place your ingredients into the bowl. Do not exceed the maximum fill line (0.8 liters).
6. **Attach Motor Unit:** Place the motor unit onto the chopping bowl, ensuring it is correctly seated and locked into position.

## 5. OPERATING INSTRUCTIONS

---

Your Bosch Universal Chopper is designed for simple and effective food preparation.

Image 4: A user operating the Bosch Universal Chopper to process ingredients.

### 5.1 Chopping and Mincing

1. Ensure the stainless steel blade is correctly installed in the chopping bowl with ingredients added.
2. Place the motor unit securely on top of the bowl.
3. Connect the appliance to a power outlet.
4. Press and hold the button on top of the motor unit to start chopping. Use short pulses for coarse chopping or hold longer for finer results.
5. Release the button to stop operation.
6. Once desired consistency is achieved, disconnect from power, remove the motor unit, and carefully remove the blade before emptying the bowl.



Image 5: The chopper effectively processes hard ingredients like cheese.



Image 6: The chopper efficiently minces vegetables such as onions.

## 5.2 Whipping

1. Ensure the whipping disk is correctly installed in the chopping bowl with ingredients (e.g., cream, eggs) added.
2. Place the motor unit securely on top of the bowl.
3. Connect the appliance to a power outlet.
4. Press and hold the button on top of the motor unit to start whipping. Continue until the desired consistency is reached.
5. Release the button to stop operation.

6. Disconnect from power, remove the motor unit, and carefully remove the whipping disk before emptying the bowl.

## 6. MAINTENANCE AND CLEANING

---

Proper maintenance ensures the longevity and optimal performance of your chopper.

### 6.1 Cleaning

- Always disconnect the appliance from the power supply before cleaning.
- The chopping bowl, stainless steel blade, and whipping disk are dishwasher safe. Alternatively, they can be washed by hand in warm soapy water.
- Handle the blade with extreme care due to its sharpness.
- Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid.
- Ensure all parts are completely dry before reassembling or storing.

### 6.2 Storage

- The compact design of the Bosch MMR08A1GB allows for easy storage.
- The power cord can be rolled up around the device for neat storage.
- Store the appliance in a dry, safe place, out of reach of children.

## 7. TROUBLESHOOTING

---

If you encounter issues with your chopper, refer to the following common problems and solutions.

- **Appliance does not turn on:**
  - Check if the power cord is securely plugged into a working outlet.
  - Ensure the motor unit is correctly seated and locked onto the chopping bowl.
- **Ingredients are not chopping effectively:**
  - Ensure the stainless steel blade is properly installed.
  - Do not overfill the bowl; process ingredients in smaller batches if necessary.
  - Ingredients may be too large; cut them into smaller pieces before processing.
- **Motor stops during operation:**
  - The appliance may have overheated due to continuous use or overloading. Disconnect from power and allow it to cool down for at least 30 minutes before resuming.
  - Reduce the amount of ingredients in the bowl.

If the problem persists after checking these points, please contact Bosch customer service.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand	Bosch
Model Number	MMR08A1GB
Power / Wattage	400 watts
Voltage	220 Volts
Bowl Capacity	0.8 Liters
Material (Blade)	Stainless steel
Product Dimensions	19.5 x 19.5 x 25 cm
Item Weight	1.22 Kilograms
Special Features	Dishwasher safe parts
Recommended Uses	Chop, Grind, Knead, Shredder (Note: Knead/Shredder may refer to general capabilities, primary functions are chopping/whipping)

## 9. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or the terms and conditions provided by your retailer. Bosch offers reliable customer service and support for its products.

If you require assistance, spare parts, or have any questions not covered in this manual, please contact Bosch customer service through their official website or the contact details provided in your product documentation.

You can visit the official Bosch store for more information: [Bosch Store](#)