



Manuals.plus /

- › RELIC /
- › RELIC Payton Bracelet Men's Gunmetal Watch Instruction Manual

RELIC ZR11998

RELIC Payton Bracelet Men's Gunmetal Watch Instruction Manual

1. PRODUCT OVERVIEW

The RELIC Payton Bracelet Men's Gunmetal Watch (Model ZR11998) is a sophisticated timepiece designed for daily wear. It features a durable stainless steel case and bracelet with a gunmetal finish, a three-hand analog display, and a date function. This watch is equipped with a reliable quartz movement and is water-resistant for practical use.



Image: Front view of the RELIC Payton Bracelet Men's Gunmetal Watch.

2. COMPONENTS

- **Case:** Gunmetal gray plated stainless steel, 44mm diameter.
- **Bezel:** Screw-down, textured logo pattern.
- **Dial:** Textured logo pattern with Roman numerals and bar hour markers.
- **Hands:** Luminous three-hand analog display.
- **Crown:** Used for setting time and date.
- **Date Window:** Displays the current date.
- **Crystal:** Mineral crystal face.
- **Bracelet:** Gunmetal gray plated stainless steel, 22mm band size.
- **Clasp:** Deployant clasp closure.
- **Movement:** Quartz.







Image: Side view of the watch, highlighting the crown.



Image: Back view of the watch, showing the deployant clasp.

3. SETUP

3.1 Setting the Time

1. Pull the crown out to the second click position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back into the normal position to start the watch.

3.2 Setting the Date

1. Pull the crown out to the first click position.

2. Turn the crown clockwise or counter-clockwise (depending on the model) to set the date.
3. Once the correct date is displayed, push the crown back into the normal position.

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism. If you need to set the date during this period, first set the time outside this range, adjust the date, then reset the time.

3.3 Adjusting the Bracelet

The stainless steel bracelet may require adjustment for a comfortable fit. This typically involves removing or adding links. It is recommended to have this adjustment performed by a qualified jeweler or watch technician to prevent damage to the bracelet or clasp.



Image: Men's Watch Case Size Guide for reference.

4. OPERATING INSTRUCTIONS

4.1 Timekeeping

Your RELIC Payton watch uses a precise quartz movement for accurate timekeeping. Once the time is set, the watch will continuously display the current time. The luminous hands provide visibility in low-light conditions.

4.2 Date Function

The date window automatically advances once every 24 hours. If the watch has not been worn for an extended period, you may need to manually adjust the date as described in Section 3.2.

4.3 Water Resistance

This watch is water-resistant to 50 meters (165 feet) or 5 ATM. This rating means it is suitable for short periods of recreational swimming and showering. It is **not** suitable for diving, snorkeling, or high-pressure

water activities. Always ensure the crown is fully pushed in before exposing the watch to water.

5. MAINTENANCE

5.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by drying thoroughly. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

5.2 Battery Replacement

The watch is powered by a product-specific battery (included). When the battery runs low, the watch hands may stop or move erratically. Battery replacement should be performed by a professional watch technician to ensure the watch's water resistance and proper functioning are maintained.

5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box can be used for storage.

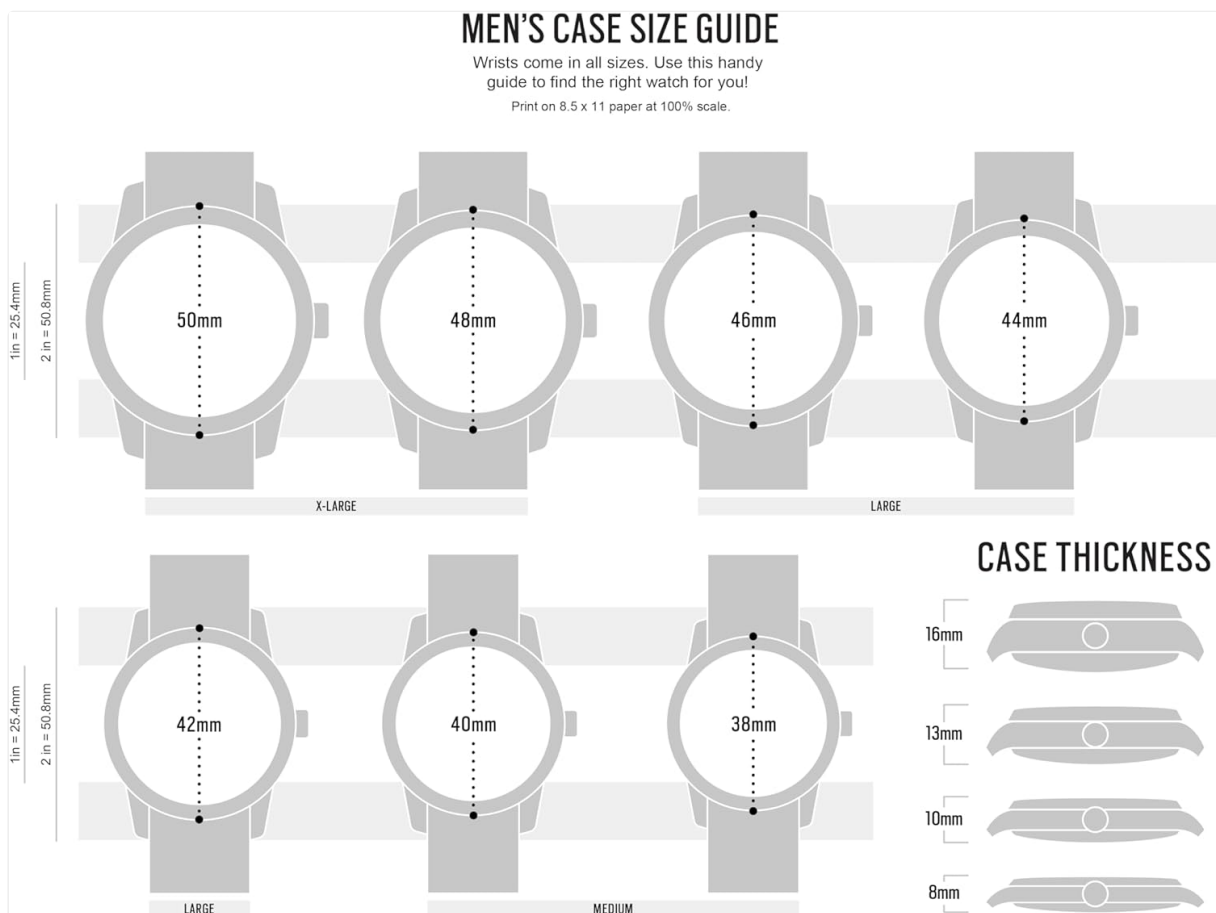


Image: The RELIC watch presented in its packaging box.

6. TROUBLESHOOTING

6.1 Watch Not Running

- Check if the crown is fully pushed in. If it is pulled out, the watch will not run.
- The battery may be depleted. Contact a professional watch technician for battery replacement.

6.2 Date Not Changing

- Ensure the time is set correctly, especially the AM/PM cycle. The date typically changes around midnight.
- Manually adjust the date as described in Section 3.2.

6.3 Condensation Inside the Crystal

- Small amounts of condensation may appear temporarily due to sudden temperature changes. If it persists or appears as large droplets, it indicates a potential issue with water resistance.
- Immediately take the watch to a professional watch technician for inspection and repair to prevent further damage.

7. SPECIFICATIONS

Feature	Specification
Model Number	ZR11998
Case Size	44mm
Band Size	22mm
Movement	Quartz
Case Material	Stainless Steel (Gunmetal Plated)
Bracelet Material	Stainless Steel (Gunmetal Plated)
Clasp Type	Deployant Clasp
Water Resistance	5 ATM (50 meters / 165 feet)
Crystal Type	Mineral
Battery	1 Product Specific battery (included)

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, service, or technical support for your RELIC watch, please refer to the warranty card included with your purchase or visit the official RELIC website. You may also contact RELIC customer service directly for assistance.

RELIC Official Website: Visit the RELIC Store on Amazon