

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER KE2000SD 1.7L Cordless Kettle Instruction Manual

BLACK+DECKER KE2000SD

BLACK+DECKER KE2000SD 1.7L Cordless Kettle Instruction Manual

Model: KE2000SD

1. PRODUCT OVERVIEW

The BLACK+DECKER KE2000SD 1.7L Cordless Kettle is designed for rapid water boiling, offering convenience and durability. Its stainless steel construction ensures longevity and a modern aesthetic suitable for any kitchen.

- **Automatic Shutoff:** For peace of mind, the kettle automatically shuts off when water reaches a rolling boil.
- **Boil/Dry Protection:** This safety feature turns off the kettle if it boils dry or if there's no water remaining.
- **Dual Water Windows:** Clear water level markings on both sides allow for precise filling.
- **Removable Anti-Scale Filter:** Prevents mineral buildup from entering your beverages, ensuring clean water.
- **360-Degree Swivel Base:** Allows for easy placement and cordless pouring.



Figure 1.1: The BLACK+DECKER KE2000SD 1.7L Cordless Kettle. This image shows the sleek stainless steel design with the water level window visible on the side.



Figure 1.2: Close-up of the easy-view water window with clear markings for 1.7L (58oz) max, 1.0L (35oz), and 0.5L (16oz) min. This feature allows users to accurately measure water.



Figure 1.3: The 360-degree swivel base, which allows the kettle to be placed on the base from any angle for convenient cordless operation. The power indicator light is also visible.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or kettle in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been

damaged in any manner. Contact customer service for examination, repair, or adjustment.

7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Extreme caution must be used when moving an appliance containing hot water.
14. The kettle is for household use only.
15. Do not fill above the "MAX" line. Overfilling may cause water to spill out when boiling.
16. Ensure lid is securely closed before operating.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your BLACK+DECKER Cordless Kettle:

- Kettle Body (Stainless Steel)
- Lid (with push-button release)
- Handle
- Power Switch (On/Off)
- Power Indicator Light
- Water Level Window (Dual)
- Spout
- Removable Anti-Scale Filter
- 360° Swivel Power Base with Cord Storage



Figure 3.1: Exploded view showing the kettle, its open lid, the removable anti-scale filter, and the separate power base.



Includes

Heating base and removable filter

Figure 3.2: The main components included: the kettle, the heating base with its power cord, and the removable anti-scale filter.

4. BEFORE FIRST USE

Before using your kettle for the first time, it is recommended to clean it thoroughly:

1. Remove all packaging materials and any labels from the kettle and base.
2. Wipe the exterior of the kettle and the power base with a damp cloth. Do not immerse the kettle or base in water.
3. Fill the kettle with fresh water up to the "MAX" fill line.
4. Boil the water as described in the "Operating Instructions" section.
5. Discard the boiled water.
6. Repeat this process two to three times to remove any manufacturing residues.

5. SETUP

Setting up your kettle is quick and easy:

1. Place the power base on a flat, stable, heat-resistant surface.
2. Unwind the power cord from the base and plug it into a standard electrical outlet.
3. Ensure the kettle is empty before placing it on the power base.
4. The kettle can be placed on the 360° swivel base from any direction.

6. OPERATING INSTRUCTIONS

Follow these steps to boil water with your kettle:

1. Remove the kettle from its power base.
2. Press the lid release button to open the lid.
3. Fill the kettle with the desired amount of fresh water. Do not fill below the "MIN" line (0.5L / 16oz) or above the "MAX" line (1.7L / 58oz) indicated on the water level window.
4. Close the lid securely until it clicks into place.
5. Place the kettle back onto the power base.
6. Flip the power switch located on the handle downwards to the "ON" position. The power indicator light will illuminate.
7. The kettle will begin heating the water. Once the water reaches a rolling boil, the kettle will automatically shut off, and the power indicator light will extinguish.
8. Carefully lift the kettle from the base and pour the hot water. Always pour slowly and steadily.
9. Unplug the kettle from the wall outlet when not in use.



Automatic Shutoff

The kettle automatically shuts off after boiling

Figure 6.1: Illustration of the kettle on its base, highlighting the automatic shutoff feature that activates once water reaches boiling point.

7. CARE AND CLEANING (MAINTENANCE)

Proper care and regular cleaning will ensure the longevity and optimal performance of your kettle. Always unplug the kettle and allow it to cool completely before cleaning.

7.1 Exterior Cleaning

- Wipe the exterior of the kettle with a soft, damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.
- Ensure the power base and cord remain dry.

7.2 Anti-Scale Filter Cleaning

The removable anti-scale filter should be cleaned regularly, especially in areas with hard water.

1. Open the kettle lid.

2. Carefully remove the anti-scale filter from behind the spout. It may clip into place.
3. Rinse the filter under running water, gently brushing away any mineral deposits with a soft brush if necessary.
4. Ensure the filter is clean and free of debris.
5. Reinsert the filter into its position behind the spout until it clicks securely.



Removable Anti-Scale Filter

Figure 7.1: A hand rinsing the removable anti-scale filter under a running faucet, demonstrating the ease of cleaning this component.

7.3 Descaling

Over time, mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. This can affect performance and taste. Descale your kettle regularly (e.g., monthly or as needed).

- Fill the kettle with 2 cups of white vinegar and 2 cups of water.
- Bring the mixture to a boil.
- Allow the mixture to soak in the kettle for at least 30 minutes, or longer for heavy buildup.
- Pour out the vinegar solution.
- Rinse the interior of the kettle thoroughly with fresh water several times.

- Boil a kettle full of fresh water and discard it to remove any residual vinegar taste.

8. TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following common problems and solutions:

Table 8.1: Troubleshooting Guide

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power switch not engaged; no power at outlet.	Ensure power cord is securely plugged into a working outlet. Flip the power switch to the "ON" position. Check household circuit breaker.
Kettle turns off before boiling.	Limescale buildup; kettle boiled dry (Boil/Dry Protection activated).	Descal the kettle as per Section 7.3. Ensure there is sufficient water in the kettle (above "MIN" line).
Water has a strange taste or odor.	New kettle residue; limescale buildup; residual cleaning solution.	Perform "Before First Use" steps again. Descal the kettle. Rinse thoroughly after descaling.
Lid does not close securely.	Debris in hinge; lid mechanism issue.	Check for any obstructions around the lid hinge. Ensure nothing is preventing it from closing.
Kettle leaks.	Overfilled; lid not closed properly; damage to kettle.	Do not fill above "MAX" line. Ensure lid is securely closed. If damage is suspected, discontinue use and contact customer service.

9. SPECIFICATIONS

Table 9.1: Product Specifications

Feature	Detail
Brand	BLACK+DECKER
Model Number	KE2000SD
Capacity	1.7 Liters (58 oz)
Color	Stainless Steel
Finish Type	Stainless Steel
Special Feature	Cordless, Automatic Shutoff, Boil/Dry Protection
Included Components	Kettle, 360° Swivel Base, Removable Anti-Scale Filter
Product Dimensions	6 x 9 x 9.25 inches (approx.)
Item Weight	1.04 Pounds
Manufacturer	Spectrum Brands
UPC	050875809338 (Primary listed)

Feature	Detail
Date First Available	January 15, 2013



Figure 9.1: Dimensions of the BLACK+DECKER KE2000SD kettle, showing approximate measurements of 6 inches (width), 9 inches (depth), and 9.25 inches (height).

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official BLACK+DECKER website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Online Support: Visit the official BLACK+DECKER website for FAQs, product registration, and support resources.
www.blackanddecker.com

Customer Service: Refer to the contact information provided with your product packaging or on the official website for phone or email support.

© 2024 BLACK+DECKER. All rights reserved.

Model: KE2000SD | Last Updated: September 2024