

Atlantic 153120

Atlantic Zeneo 200L Vertical Wall-Mounted Monophase Water Heater 2200W

Model: 153120

INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Atlantic Zeneo 200L Vertical Wall-Mounted Monophase Water Heater. Please read this manual thoroughly before installation and keep it for future reference.



Image: Front view of the Atlantic Zeneo 200L Vertical Wall-Mounted Monophase Water Heater. It is a cylindrical, white unit with the 'atlantic' logo vertically aligned on its side.

SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of injury or damage:

- Installation and maintenance must be performed by qualified personnel only.
- Ensure the power supply is disconnected before any work on the appliance.
- Do not operate the water heater if it is damaged or malfunctioning.
- Ensure proper grounding to prevent electrical shock.
- Do not block ventilation openings.
- Keep flammable materials away from the water heater.

PRODUCT OVERVIEW

The Atlantic Zeneo water heater is designed for efficient and reliable hot water production. Key features include:

- **Dynamic ACI Hybrid Anti-Corrosion Protection:** Combines a titanium anode with a magnesium coating for enhanced tank protection against corrosion, adapting to various water types.
- **Reinforced Insulation:** Contributes to energy savings by minimizing heat loss.
- **Electronic Thermostat:** Ensures stable water temperature and precise control.
- **Steatite Heating Element:** Protected from direct contact with water, reducing limescale build-up and simplifying maintenance.
- **Bi-metallic Dielectric Connector:** Included to prevent galvanic corrosion at pipe connections.
- **Front Terminal Block:** For easier electrical connections.
- **Accelerated Heating:** Designed to reduce the time required to heat water.
- **Dry-Heating Protection Function:** Prevents the heating element from operating without water in the tank.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your water heater. Consult a qualified professional for installation.

Pre-Installation Checks:

- Verify that the installation location can support the weight of the full water heater (approx. 250 kg).
- Ensure adequate space for maintenance and ventilation around the unit.
- Confirm that the electrical supply matches the water heater's requirements (230V, 2200W, monophasic).

Installation Steps (Summary):

1. Mount the wall bracket securely to a load-bearing wall using appropriate fasteners.
2. Carefully lift and hang the water heater onto the wall bracket.
3. Install the supplied bi-metallic dielectric connector on the cold water inlet.
4. Connect the cold water supply to the inlet and the hot water outlet to your plumbing system.
5. Install a safety group (pressure relief valve) on the cold water inlet, ensuring it is properly drained.
6. Connect the electrical wiring to the front terminal block, ensuring proper grounding.
7. Fill the tank with water before connecting to the main power supply.
8. Check for leaks and verify proper operation.

OPERATING INSTRUCTIONS

Once installed and filled, operating your Atlantic Zeneo water heater is straightforward.

Initial Start-up:

1. Ensure the tank is completely filled with water by opening a hot water tap until water flows freely.
2. Connect the water heater to the main electrical supply.
3. The electronic thermostat will automatically begin heating the water to the factory preset temperature.

Temperature Adjustment:

Refer to the control panel on the unit for temperature adjustment. Typically, a dial or buttons allow you to set the desired water temperature. Avoid setting the temperature too high to prevent scalding and save energy.

Energy Saving Tips:

- Set the temperature to a comfortable level (e.g., 55-60°C) rather than the maximum.
- Consider using a timer if your unit supports it, to heat water during off-peak electricity hours.
- Ensure the unit is well-insulated, especially if installed in an unheated area.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your water heater.

Annual Maintenance (Recommended by a Qualified Professional):

- Inspect and clean the steatite heating element for limescale build-up.
- Check the condition of the ACI Hybrid anode and replace if necessary.
- Inspect the safety group (pressure relief valve) for proper operation and clear any blockages.
- Drain and flush the tank to remove sediment.
- Check all electrical connections for tightness and signs of wear.

User Maintenance:

- Regularly operate the safety group's manual discharge lever (once a month) to prevent blockages.
- Clean the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners.

TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
No hot water	No power; Thermostat tripped; Heating element failure	Check circuit breaker; Reset thermostat; Contact qualified technician
Insufficient hot water	Thermostat set too low; Excessive hot water usage; Limescale build-up	Increase temperature setting; Reduce usage; Descale heating element (professional)
Water leaking from unit	Loose connections; Faulty safety group; Tank corrosion	Tighten connections; Inspect/replace safety group; Contact qualified technician
Unusual noises	Sediment build-up; Heating element issue	Drain and flush tank; Contact qualified technician

For issues not listed or if solutions do not resolve the problem, contact a qualified technician.

SPECIFICATIONS

Feature	Detail
Brand	Atlantic
Model Number	153120
Capacity	200 Liters
Power Output	2200 Watts
Voltage	230 Volts
Dimensions (L x W x H)	53 x 53 x 151.5 cm
Weight (Empty)	50 kg
Mounting Type	Wall-Mounted, Vertical
Special Feature	Anti-corrosion (ACI Hybrid)

WARRANTY AND SUPPORT


Your Atlantic Zeneo water heater comes with a manufacturer's warranty.

Manufacturer's Warranty:

This product is covered by a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use and service.

Customer Support:

For technical assistance, warranty claims, or to locate an authorized service center, please contact Atlantic customer support through their official website or the contact information provided with your purchase documentation.

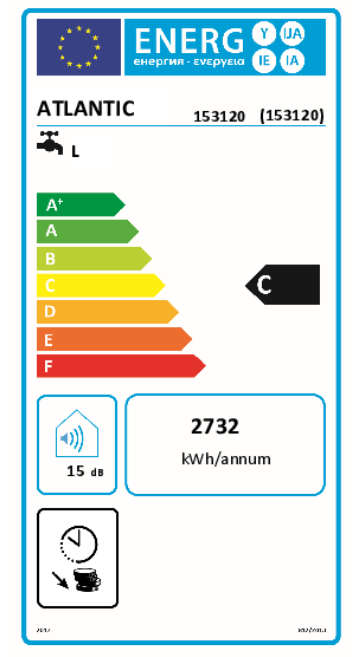


[\[pdf\]](#) User Manual

zeneo vm etiquette energetique 153120 atlantic fr gaatlanticerp |||

ATLANTIC L **153120 153120** 15 dB 2732 kWh/annum FR Marque : ATLANTIC Modle : **153120 153120** Profil de soutirage : L Classe d efficacit nergtique : C Efficacit nergtique : 38 Consommation annuelle d lectricit kWh : 2732 Rglage thermostat, consigne C : 65 Bruit intrieur dB : 15 Heure...

lang:nl **score:32** filesize: 329.63 K page_count: 2 document date: 2017-06-19

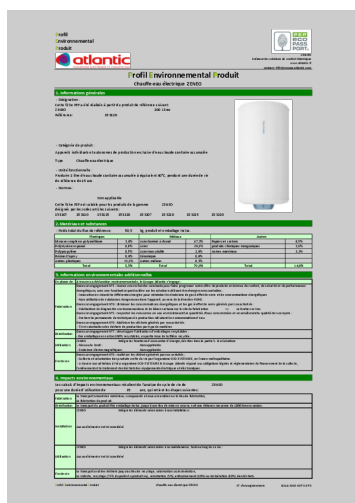


[\[pdf\]](#)

Pierre Yves BERTHELEMY zeneo fiche pep fr atlantic gaatlanticerp |||

Profil Environnemental Produit Profil Environnemental Produit Chauffe-eau lectrique ZENEO 1. Informations gnrales - Dsignation : Cette fiche PEP a t ralise partir du produit de rfrence suivant: ZENEO 200 Litres Rfrence: **153120** Atlantic Crateur de solutions de confort thermique www.atlanti...

lang:fr **score:19** filesize: 529.92 K page_count: 2 document date: 2014-07-09

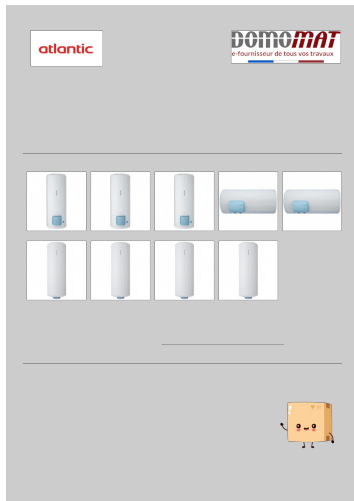

[pdf]

chauffe eau zneo atlantic domomat |||

Chauffe-eau Zno Rf 154330 Rf 154325 Rf 154315 Rf 155420 Rf 155410 Rf **153120** Rf 153115 Rf 153110 Rf 153107 6 rfrence s supplmentaire s Voir les produits Atlantic : https://www.domomat.com/10_atlantic Retrouvez tous les produits Atlantic chez Domomat Powered by TCPDF www.tcpdf.org ...

lang:fr score:19 filesize: 2.01 M page_count: 7 document date: 2024-03-30



[pdf] Dimension Guide Catalog

CONÇU POUR DURER fiche technique zneo atlantic files izi by edf renov fr catalogue produits |||

563 Atlantic SFDT au capital social de 13 730 600 euros - RCS La Roche-sur-Yon B 562 053 173 - Sous ... 530 30 153110 1,50 C 530 1200 1050 800 115 550 39 153115 1,79 C 530 1515 1050 800 430 550 49 **153120** MODLES COMPACTS 570 MM 100 230 V monophas 1200 5 h 17 175 L 0,22 150 150 L et 200 L...

lang:fr score:17 filesize: 1.13 M page_count: 2 document date: 2016-08-01



[pdf]

Technische fiche Zeneo elektrische boiler verticaal vloermodel 300 L Van Marcke Outlet tf sku 290644 cdn webshopapp shops 256224 files 345980094 |||

ELEKTRISCHE BOILER ZENEO ONTWERPEN VOOR LANGERE LEVENSDUUR ATLANTIC L ZENEO VM200L **153120** A B C D E F G 15 dB C kW2h7/a8n3num 00 GJ/annum 2015 812/2013 TOT 8 BESPARING 5 JAAR KUIP EN ONDERDELEN Verticaal op sokkel 150, 200, 250 en 300L Verticaal Wandmodel Standaard 505, 510 en 530 mm 5...

lang:nl score:14 filesize: 1.18 M page_count: 4 document date: 2016-02-18




[pdf]

ZÉNÉO Chauffage Tendence 2021 10 18 — Concerne uniquement la cuve Par rapport aux chauffe eau protégés par une simple anode magnésium blindé dans le cas des eaux agressives 4 pages zeneo Id 2 docga plateforme services api documents 404622b2 7b32 4512 b5f4 f6e40b1a009c

z3nxi58ewx8jfods50xi2xap |||

ZNO Le chauffe-eau conu pour durer Technologie ACI Hybride Large choix de modles Rsistance statit ... 07 510 900 750 - 115 530 30 153110 530 1200 1050 800 115 550 39 153115 530 1515 1050 800 430 550 49 **153120** 570 780 570 - 130 590 570 1030 750 500 240 590 570 1255 1050 800 175 590 32 156210 41 15621...

lang:fr score:12 filesize: 2.46 M page_count: 4 document date: 2020-11-25

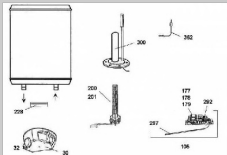

[pdf]

anthony1 Vue éclatée Pièces détachées pour Chauffe eau Sogedis ATLANTIC 153105 153107 153110 153115 153120 sogedis fr |||

...

lang:fr score:12 filesize: 31.19 K page_count: 1 document date: 2017-05-11



[pdf]

153110 res cloudinary sonepar fr raw upload s hZlaS8si v1 documents 16 |||

E PROTECTION DYNAMIQUE ANTI-CORROSION DURE DE VIE PROLONGE S ADAPTE TOUTES LES EAUX DE RSEAU Dure ... S VIDE kg CODE C 530 23 153105 530 27 153107 530 30 153110 550 39 153115 650 49 **153120** MODLES COMPACTS 100 200 L 100 230 V monophas 1 200 5 h 17 175 L 150 150 L et 200 L tr...

lang:fr score:11 filesize: 3 M page_count: 6 document date: 2013-03-08



[pdf]

mbru juhend 1 Boiler 200L 2 2kW 153120 vertikaalne VMACI hooldusvaba feb ee tooted PLASTOR 2805V1 DOKUMENDID |||

ZENEO Chauffe-eau lectrique Elektrischer warmwasserspeicher - Elektriline soojaveeboiler F NOTICE D UTILISATION NL ET D INSTALLATION Gebruiks en installatiehandleiding Paigaldusjuhend EE conserver par l utilisateur Door de gebruiker te bewaren gids Hoida kesolev juhend alles ka montaazijrg...

lang:et score:11 filesize: 3.64 M page_count: 28 document date: 2021-02-24

