

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [WWE](#) /
- › [WWF: Wrestlemania 10 DVD Instruction Manual](#)

**WWE 651191951956**

# WWF: Wrestlemania 10 DVD Instruction Manual

Comprehensive guide for the setup, operation, and maintenance of your WWF: Wrestlemania 10 DVD.

## PRODUCT OVERVIEW

---

The WWF: Wrestlemania 10 DVD captures a landmark event in professional wrestling history. This DVD features iconic matches, including the revolutionary Ladder Match for the Intercontinental Championship between Shawn Michaels and Razor Ramon, and Bret 'Hit Man' Hart's dual main event appearances against Yokozuna. This manual provides essential information for enjoying this classic event.

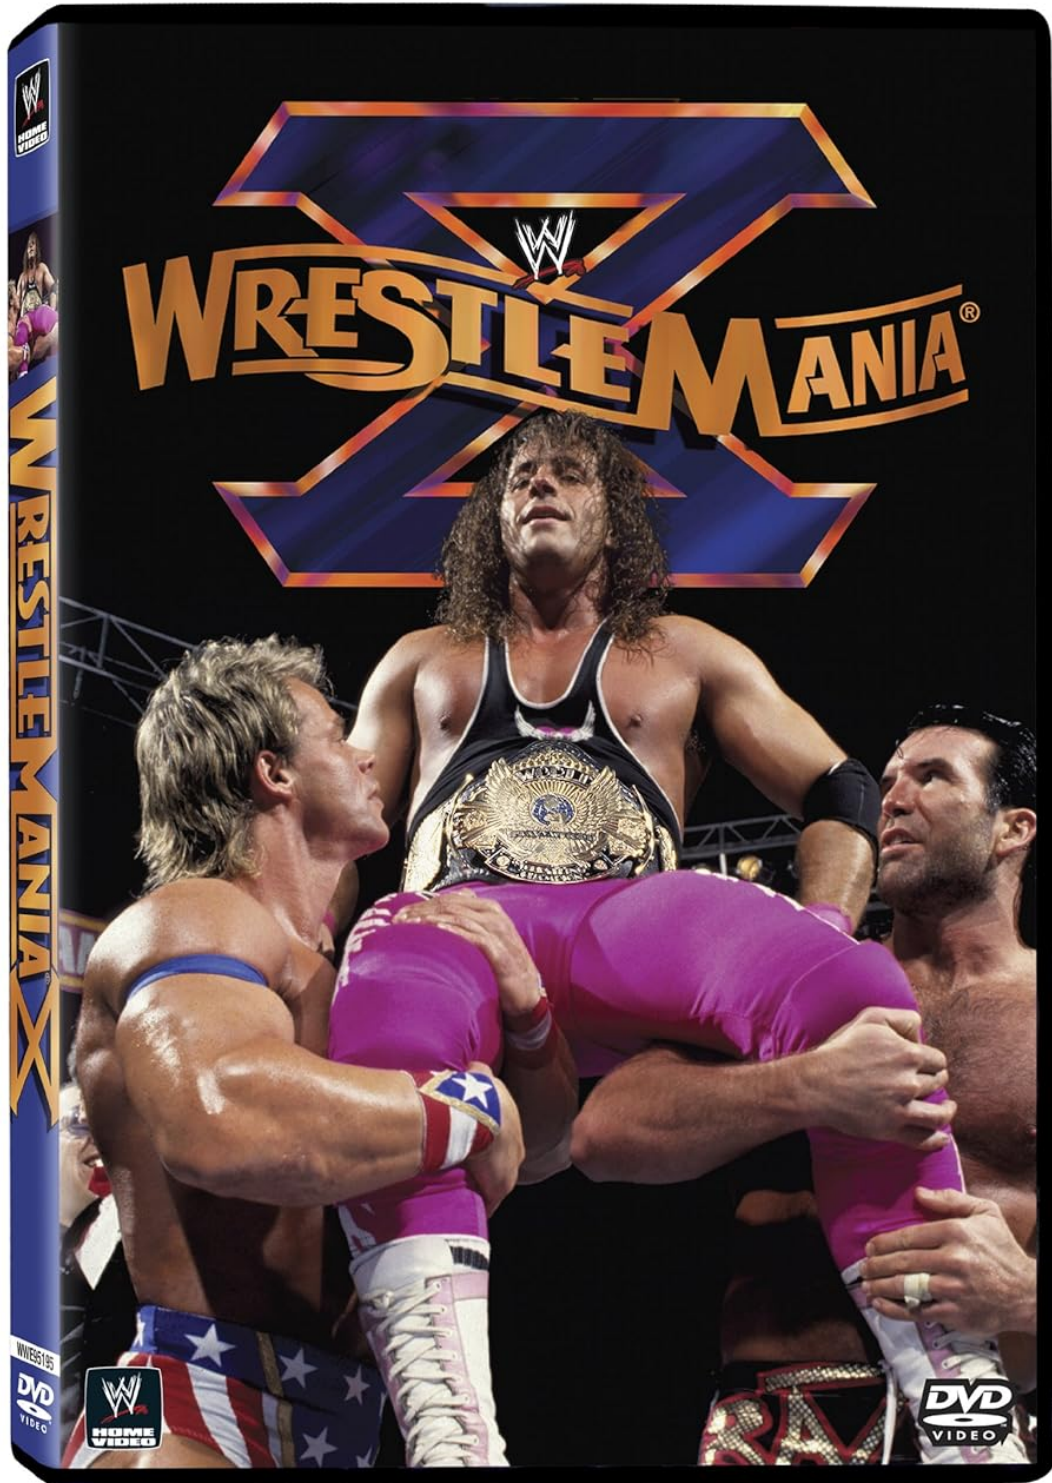


Image: Front cover of the WWF Wrestlemania 10 DVD. The cover prominently displays the event's logo and features key wrestlers from the event, including Bret Hart, Lex Luger, and Razor Ramon.

## SETUP

---

To begin viewing your WWF: Wrestlemania 10 DVD, follow these simple steps:

1. **Connect your DVD Player:** Ensure your DVD player is properly connected to your television or display device according to its manufacturer's instructions. This typically involves connecting an HDMI cable, RCA cables, or component cables from the DVD player to the TV.
2. **Power On:** Turn on your television and your DVD player. Select the correct input source on your television that corresponds to your DVD player's connection (e.g., HDMI 1, AV, Component).
3. **Insert the DVD:** Gently open the DVD tray or slot on your DVD player. Hold the *WWF: Wrestlemania 10* DVD by its edges to avoid touching the playback surface. Insert the disc with the label side facing up into the tray or slot. Close the tray or allow the player to pull the disc in.
4. **Automatic Playback:** Many DVD players will automatically begin playing the disc. If not, navigate to the main menu using your DVD player's remote control.

## OPERATING INSTRUCTIONS

---

Utilize your DVD player's remote control to navigate and control playback:

- **Play/Pause:** Press the **PLAY** button to start playback or resume from a paused state. Press the **PAUSE** button to temporarily stop playback.
- **Stop:** Press the **STOP** button to end playback and return to the beginning of the disc or the main menu.
- **Fast Forward/Rewind:** Use the **FF (Fast Forward)** and **REW (Rewind)** buttons to quickly scan through the content. Multiple presses often increase the speed.
- **Skip/Chapter Select:** The **SKIP** or **NEXT/PREV** buttons allow you to jump to the next or previous chapter/segment on the DVD.
- **Menu:** Press the **MENU** or **TITLE** button to access the DVD's main menu, where you can select specific matches, features, or language options.
- **Navigation Arrows and Enter:** Use the directional arrow buttons (**UP, DOWN, LEFT, RIGHT**) to highlight options on the DVD menu, then press **ENTER** or **OK** to confirm your selection.

## MAINTENANCE

---

Proper care of your DVD will ensure its longevity and optimal playback quality:

- **Handling:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber cloth) from the center outwards in a straight line. Do not wipe in circular motions, as this can create more scratches. For stubborn marks, a small amount of water or a specialized disc cleaning solution can be used, applied to the cloth, not directly to the disc.
- **Storage:** Store the DVD in its original case when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity, which can warp the disc or damage the data layer.
- **Avoid Adhesives:** Do not apply stickers, labels, or any adhesive materials to the disc surface, as this can unbalance the disc during playback and damage your player.

## TROUBLESHOOTING

---

If you encounter issues while playing your DVD, consider the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Disc does not play or is not recognized.	Disc inserted incorrectly, dirty/scratched disc, player malfunction.	Ensure disc is inserted label-side up. Clean the disc carefully. Try the disc in another DVD player to rule out player issues.
Video or audio skipping/freezing.	Dirty or scratched disc, dusty player lens.	Clean the disc. Consider using a DVD lens cleaner disc for your player.
No audio.	TV/player volume too low, incorrect audio settings, faulty cables.	Check volume levels on both TV and DVD player. Verify audio cable connections. Check DVD player's audio output settings.
No video.	Incorrect TV input selected, faulty video cables.	Ensure TV is on the correct input source. Check video cable connections (HDMI, RCA, Component).

## SPECIFICATIONS

---

- **Format:** DVD (Color, Multiple Formats, NTSC)
- **Run Time:** Approximately 3 hours
- **Number of Discs:** 1
- **Release Date:** March 12, 2013
- **MPAA Rating:** PG (Parental Guidance Suggested)
- **Product Dimensions:** 7.5 x 0.7 x 5.4 inches
- **Item Model Number:** 651191951956
- **Studio:** Cinedigm - Uni Dist Corp
- **Actors/Contributors:** Bret 'Hit Man' Hart, Razor Ramon, Shawn Michaels, Yokozuna, World Wrestling (Director)

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage for your WWE: Wrestlemania 10 DVD, please refer to any documentation included with your purchase or contact the distributor, Cinedigm - Uni Dist Corp, directly. Specific warranty terms and conditions are typically provided by the manufacturer or seller at the time of purchase.

For further technical support or inquiries not covered in this manual, please consult the support resources provided by your DVD player manufacturer or the official website of WWE or Cinedigm - Uni Dist Corp.