

KRUPS ZX720K40

KRUPS ZX720K40 Electric Citrus Juicer Instruction Manual

Model: ZX720K40

[Instructions](#) [Components](#) [Setup](#) [Operating](#) [Safety Maintenance & Support](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your KRUPS Electric Citrus Juicer.





Image: Close-up of the juicer's cone and spout. This image shows the transparent juicing cone, the pulp filter, and the anti-drip pouring spout, which allows juice to be dispensed directly into a glass.

- **Juicing Cone:** Transparent cone designed to extract juice from citrus fruits.
- **Pulp Filter:** Sits below the juicing cone to separate pulp and seeds from the juice.
- **Juice Collector:** Collects the extracted juice before it is dispensed.
- **Anti-Drip Pouring Spout:** Allows direct dispensing of juice into a glass and prevents drips when closed.
- **Motor Base:** Contains the motor and power cord storage.
- **Plastic Protection Cover:** Covers the cone when not in use.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash all removable parts (juicing cone, pulp filter, juice collector, protection cover) in warm, soapy water or in the dishwasher. Rinse thoroughly and dry.
3. **Assemble:** Place the juice collector onto the motor base. Then, place the pulp filter into the juice collector, ensuring it sits correctly. Finally, place the juicing cone onto the filter.
4. **Position:** Place the assembled juicer on a stable, flat, and dry surface.
5. **Connect Power:** Unwind the power cord from the base and plug the appliance into a 110V electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps to extract juice efficiently:



Image: Juicing an orange. This image demonstrates the juicer in operation, with a hand pressing a halved orange onto the cone and juice being dispensed directly into a glass.

1. **Prepare Fruit:** Cut citrus fruits (oranges, lemons, limes, grapefruits) in half.
2. **Place Glass:** Position a glass or container under the anti-drip pouring spout. Ensure the spout is open to allow juice flow.
3. **Start Juicing:** Place a fruit half onto the juicing cone. Apply gentle downward pressure. The juicer will automatically activate when pressure is detected.
4. **Extract Juice:** Continue pressing and rotating the fruit until all juice is extracted. The automatic fruit pressure detection ensures optimal juice extraction.
5. **Stop Juicing:** Release pressure from the cone to stop the motor.
6. **Close Spout:** After juicing, push the anti-drip pouring spout upwards to prevent any remaining drips.
7. **Unplug:** Once finished, unplug the appliance from the power outlet.

Tip: For best results, use fresh, ripe citrus fruits at room temperature.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your juicer.

1. **Unplug:** Always unplug the juicer from the power outlet before cleaning.
2. **Disassemble:** Remove the plastic protection cover, juicing cone, pulp filter, and juice collector from the motor base.
3. **Wash Removable Parts:** All removable parts are dishwasher-safe. Alternatively, wash them by hand in warm, soapy water. Use a soft brush if necessary to remove pulp residue from the filter. Rinse thoroughly.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. **Do not immerse the motor base in water or any other liquid.**
5. **Dry:** Ensure all parts are completely dry before reassembling or storing.
6. **Storage:** Store the juicer with the plastic protection cover on the cone and the cord stored in the base of the unit to keep it tidy and protected.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Juicer does not start.	Appliance not plugged in. Insufficient pressure on the fruit.	Ensure the power cord is securely plugged into a working outlet. Apply gentle but firm downward pressure on the fruit.
Juice flow is slow or stops.	Pulp filter is clogged. Anti-drip spout is closed.	Disassemble and clean the pulp filter. Ensure the anti-drip spout is in the downward (open) position.
Motor sounds strained.	Too much pressure applied. Fruit is too hard or cold.	Reduce pressure. The juicer operates best with gentle pressure. Use ripe, room-temperature citrus fruits.
Juicer leaks.	Parts not assembled correctly. Anti-drip spout not fully closed.	Ensure the juice collector, filter, and cone are correctly seated. Push the anti-drip spout fully upwards after juicing.

If the problem persists after trying these solutions, please contact KRUPS customer service.

TECHNICAL SPECIFICATIONS

Model: ZX720K40

Power: 85 Watts

Voltage: 110 Volts

Material: Acrylic (housing), Plastic (blade/cone)

Capacity: 0.6 Liters (juice collector)

Weight: Approximately 4.7 Pounds

Special Features: Automatic fruit pressure detection, Anti-drip pouring spout, Cord storage, Dishwasher-safe removable parts.

Manufacturer: Groupe SEB

UPC: 010942212256

WARRANTY AND CUSTOMER SUPPORT

This KRUPS appliance is covered by a **2-year worldwide warranty** from the date of purchase.

The warranty covers defects in materials and workmanship, subject to the terms and conditions specified in the full warranty document. Please retain your proof of purchase for warranty claims.

For detailed warranty information, service, or support, please visit the official KRUPS website or contact your local KRUPS customer service center. Contact information can typically be found on the KRUPS website or in the product packaging.

Note: The warranty does not cover damage resulting from misuse, neglect, commercial use, or unauthorized repairs.

