



[Manuals.plus](#) /

› [Tassimo](#) /

› Tassimo T47 Beverage System and Coffee Brewer (Model TAS4702UC) User Manual

Tassimo TAS4702UC

Tassimo T47 Beverage System and Coffee Brewer (Model TAS4702UC) User Manual

Brand: Tassimo | Model: TAS4702UC

INTRODUCTION

The Tassimo T47 Beverage System and Coffee Brewer is designed for convenient single-cup beverage preparation. Utilizing barcode technology, the system automatically adjusts water volume, brewing time, and temperature to ensure optimal results for each T-Disc. Its flow-through water heater technology allows for quick beverage creation, typically within a minute, with minimal pre-heating. This system supports a wide range of beverages, including coffee, cappuccino, latte (made with real milk), tea, espresso, crema, hot chocolate, and iced beverages. The removable cup stand accommodates various cup sizes, including travel mugs.



Image: The Tassimo T47 Beverage System and Coffee Brewer, featuring its black and silver design with a removable drip tray and water reservoir.

KEY FEATURES

- **Barcode Technology:** Intelligent drink identification automatically adjusts brewing parameters for each T-Disc.

- **Quick Brewing:** Instant heat-up and fast first cup, typically ready in about one minute.
- **Quiet Operation:** Noise reduction system for discreet beverage preparation.
- **Adjustable Cup Stand:** Height-adjustable and removable cup stand to fit various cup and travel mug sizes.
- **Versatile Beverage Selection:** Compatible with T-Discs for coffee, cappuccino, latte, hot chocolate, tea, espresso, crema, and iced beverages.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all packing materials, including any protective films or tapes, are removed from the appliance.
2. **Placement:** Place the brewer on a stable, flat, and heat-resistant surface near an electrical outlet. Ensure adequate ventilation around the unit.
3. **Water Tank Installation:**

Locate the water tank at the back of the unit. Remove it by pulling it upwards. Fill the tank with fresh, cold water up to the "MAX" mark. If your model includes a water filter, ensure it is correctly installed in the tank before filling. Reinsert the filled water tank firmly into its position on the brewer.



Image: The Tassimo T47 with its transparent water tank visible at the back, ready for filling.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The power button may illuminate, indicating the unit is ready for initial use.
5. **Initial Rinse Cycle:** Before first use, perform a rinse cycle without a T-Disc. Place an empty cup on the cup stand, close the brew head, and press the start button. This cleans the internal system.

OPERATING INSTRUCTIONS

1. **Power On:** Ensure the brewer is plugged in and the power switch (if present) is in the 'On' position. The indicator light will show the machine is heating up or ready.
2. **Prepare Cup:** Place your desired cup or mug on the adjustable cup stand. Adjust the stand's height if necessary to prevent splashing.
3. **Insert T-Disc:**
Open the brew head by lifting the lid. Insert the chosen T-Disc into the disc holder with the barcode facing down. Close the brew head firmly until it clicks into place. The machine will read the barcode to identify the beverage type.



Image: A T-Disc being placed into the brew head of the Tassimo T47, barcode side down.

4. **Start Brewing:** Press the start/stop button. The brewing process will begin automatically, adjusting to the T-Disc's instructions. Steam and hot liquid will dispense into your cup.
5. **Completion:** The brewing process will stop automatically once the beverage is ready. The indicator light will change, and the machine may make a sound to signal completion.
6. **Enjoy:** Carefully remove your freshly brewed beverage.

7. **Remove T-Disc:** Open the brew head and remove the used T-Disc. Dispose of it according to local recycling guidelines. Close the brew head.
8. **Automatic Shut-off:** The Tassimo T47 is designed to automatically turn off after a period of inactivity to conserve energy.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Tassimo T47 brewer.

- **Cleaning the Drip Tray:** The drip tray collects excess liquid. Regularly remove and empty the drip tray. Wash it with warm, soapy water and rinse thoroughly. Ensure it is completely dry before reinserting.
- **Cleaning the Water Tank:** Periodically remove the water tank and wash it with warm, soapy water. Rinse well to remove any soap residue.
- **Cleaning the Brew Head:** After each use, wipe the brew head and T-Disc holder with a damp cloth to remove any coffee or beverage residue.
- **Descaling:** Over time, mineral deposits can build up in the machine, affecting performance. Follow the descaling instructions provided in your full product manual or consult the manufacturer's website for specific descaling procedures for the Tassimo T47.

TROUBLESHOOTING

If you encounter issues with your Tassimo T47, refer to the following common troubleshooting tips:

- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet and the power switch is on.
- **No Water Dispensing:** Check if the water tank is filled and correctly seated. Ensure no air bubbles are trapped in the water line.
- **Beverage Not Brewing:** Verify that the T-Disc is correctly inserted and the brew head is fully closed. Clean the barcode reader if it appears dirty.
- **Leaking:** Check that the water tank and drip tray are properly installed. Ensure the T-Disc is not damaged and is correctly seated.
- **Poor Beverage Quality:** Ensure you are using fresh water and the correct T-Disc for your desired beverage. Consider descaling the machine if it has not been done recently.

For more detailed troubleshooting, please consult the full product manual or contact Tassimo customer support.

SPECIFICATIONS

Feature	Specification
Brand	Tassimo
Model Name	TAS4702UC
Color	Black
Coffee Maker Type	Espresso Machine (Single-Serve)
Special Feature	Removable Tank
Operation Mode	Fully Automatic
Voltage	120 Volts

Capacity	1.4 Liters
Item Weight	7.89 pounds
Product Dimensions	8 x 13.25 x 11 inches
Included Components	Filter

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included with your purchase or visit the official Tassimo website. Keep your proof of purchase for warranty claims.